

User Manual

Temperature Controller

TMH Series

MCT-TMHU-V2.4-2202US

Thank you for purchasing an Autonics product.

This user manual contains information about the product and its proper use, and should be kept in a place where it will be easy to access.

www.autonics.com

Autonics

Preface

Thank you for purchasing Autonics product.

Please familiarize yourself with the information contained in the **Safety Considerations** section before using this product.

This user manual contains information about the product and its proper use, and should be kept in a place where it will be easy to access.

User Manual Guide

- Please familiarize yourself with the information in this manual before using the product.
- This manual provides detailed information on the product's features. It does not offer any guarantee concerning matters beyond the scope of this manual.
- This manual may not be edited or reproduced in either part or whole without permission.
- This manual is not provided as part of the product package. Please visit our website (www.autonics.com) to download a copy.
- The manual's content may vary depending on changes to the product's software and other unforeseen developments within Autonics, and is subject to change without prior notice. Upgrade notice is provided through our homepage.
- We contrived to describe this manual more easily and correctly. However, if there are any corrections or questions, please notify us these on our website.

User Manual Symbols

Symbol	Description
 Note	Supplementary information for a particular feature.
 Warning	Failure to follow instructions can result in serious injury or death.
 Caution	Failure to follow instructions can lead to a minor injury or product damage.
 Ex.	An example of the concerned feature's use.
※	Annotation mark.

Safety Considerations

- Following these safety considerations will ensure the safe and proper use of the product and help prevent accidents, as well as minimizing possible hazards.
- Safety considerations are categorized as Warnings and Cautions, as defined below:

 Warning	Warning	Failure to follow the instructions may lead to a serious injury or accident.
--	----------------	--

 Caution	Caution	Failure to follow the instructions may lead to a minor injury or accident.
--	----------------	--



Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, fire or economic loss.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.
Failure to follow this instruction may result in explosion or fire.
- Install on a device panel to use.
Failure to follow this instruction may result in fire.
- Do not connect, repair, or inspect the unit while connected to a power source.
Failure to follow this instruction may result in fire.
- Check 'Connections' before wiring.
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.
Failure to follow this instruction may result in fire.



Caution

- When connecting the power input and relay output, use AWG 20 (0.50mm²) cable or over and tighten the terminal screw with a tightening torque of 0.74 to 0.90N.m.
When connecting the sensor input and communication cable without dedicated cable, use AWG 28 to 16 cable and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N.m.
Failure to follow this instruction may result in fire or malfunction due to contact failure.

- Use the unit within the rated specifications.
Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent.
Failure to follow this instruction may result in fire.
- Keep metal chip, dust, and wire residue from flowing into the unit.
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected accidents.
- Check the polarity of the terminals before wiring the temperature sensor. For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line. Do not use near the equipment which generates strong magnetic force or high frequency noise.
- Do not apply excessive power when connecting or disconnecting the connectors of the product.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Do not use the unit for other purpose (e.g. voltmeter, ammeter), but temperature controller.
- When changing the input sensor, turn off the power first before changing. After changing the input sensor, modify the value of the corresponding parameter.
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Do not overlapping communication line and power line. Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
- Make a required space around the unit for radiation of heat. For accurate temperature measurement, warm up the unit over 20 min after turning on the power.
- Mounting multiple devices in any way other than the specified mounting method may cause heat to build up inside, which will shorten their service life. If there is a possibility of the ambient temperature rising to a temperature above the specified temperature range, take steps, such as installing fans, to cool the device. Be sure that the cooling method is not cooling just the terminal block. If only the terminal block is cooled, measurement errors may occur.
- Make sure that power supply voltage reaches to the rated voltage within 2 sec after supplying power.
- Do not wire to terminals which are not used.

- Install DIN rail vertically from the ground.
- This unit may be used in the following environments.
 - ①Indoors (in the environment condition rated in 'Specifications')
 - ②Altitude max. 2,000m
 - ③Pollution degree 2
 - ④Installation category II

The specifications are subject to change and some models may be discontinued without notice.

Be sure to follow cautions written in the instruction manual, user manual and the technical descriptions (catalog, website).

Table of Contents

1	Product Introduction	15
1.1	Features	15
1.2	Components and accessories	17
1.3	Models	21
1.3.1	TMH2/4 Series [control module]	21
1.3.2	TMHA/E/CT/C [option/communication module]	21
1.4	Unit description and function	22
1.4.1	TMH2/4 Series [control module]	22
1.4.2	TMHA/E/CT/C [option/communication module]	24
2	Specifications.....	27
2.1	TMH2/4 Series [control module]	27
2.2	TMHA/E/CT [option module]	30
2.3	TMHC [communication module]	33
3	Connections and Isolated Block Diagram.....	35
3.1	Connections by Series.....	35
3.1.1	TMH2 Series [2 channels, control module]	35
3.1.2	TMH4 Series [4 channels, control module]	36
3.1.3	TMHA [analog input/output module]	37
3.1.4	TMHE [digital input/alarm output module]	37
3.1.5	TMHCT [CT input module]	38
3.1.6	TMHC-22LE [PLC ladderless module]	38
3.1.7	TMHC-22EE [Ethernet communication module]	39
3.2	Caution for connection.....	40
4	Dimensions	42
4.1	Installation.....	42
5	Preparation and Startup.....	45
5.1	General process.....	45
5.2	Setup values when power ON	45
6	Connection examples.....	46
6.1	TMH2/4 connection	46
6.2	TMH2/4, TMHA, TMHE, TMHCT interworking configuration example	48

6.3	TMHC interworking configuration example.....	49
6.3.1	PLC ladderless communication.....	49
6.3.2	Ethernet communication.....	50
7	Communication TMH2/4 TMHA TMHE TMHCT TMHC	51
7.1	Common.....	52
7.1.1	Unit address	52
7.1.2	Channel allocation	53
7.1.3	Communication speed.....	55
7.1.4	Communication parity bit	55
7.1.5	Communication stop bit.....	56
7.1.6	Communication response waiting time	56
7.1.7	Enable/Disable communications writing	56
7.1.8	USB to Serial communication connection.....	57
7.2	PLC ladderless module [TMHC-22LE].....	58
7.2.1	Initial setting.....	58
7.2.2	Unit address	59
7.2.3	Communication configuration	60
7.2.4	Communication check.....	64
7.2.5	All run/stop, all autotuning execute.....	68
7.2.6	Connectable PLC	68
7.2.7	External DIP Switch	71
7.3	Ethernet module [TMHC-22EE]	72
7.3.1	Enable/Disable DHCP function.....	72
7.3.2	IP Address	72
7.3.3	Subnet mask.....	72
7.3.4	Default gateway.....	73
7.3.5	Enable/Disable Ethernet communication write.....	73
7.3.6	Modbus TCP port.....	73
7.3.7	Ethernet communication monitoring time	73
8	Parameter Settings and Functions	74
8.1	Input	74
8.1.1	Input type and range TMH2/4 TMHA	74
8.1.2	Input type TMH2/4 TMHA	75
8.1.3	Sensor temperature unit TMH2/4 TMHA	77
8.1.4	Analog high/low-limit input value TMH2/4 TMHA	77

8.1.5	Analog scale value decimal point position	TMH2/4	TMHA	77
8.1.6	Analog scale high/low-limit value	TMH2/4	TMHA	78
8.1.7	Analog input special function	TMH2/4	TMHA	79
8.1.8	Input correction	TMH2/4	TMHA	81
8.1.9	Input digital filter	TMH2/4	TMHA	82
8.1.10	SV high/low-limit value	TMH2/4		83
8.1.11	Remote SV (RSV)	TMH2/4		84
8.2	Control output	TMH2/4		88
8.2.1	Control output mode			88
8.2.2	Dead band/Overlap band			90
8.2.3	MV high/low-limit value			94
8.2.4	MV change rate limit			95
8.2.5	Ramp			96
8.2.6	Soft start			98
8.2.7	Auto/ Manual control			98
8.2.8	Control output			101
8.2.9	Current output range			101
8.3	Analog transmission output	TMHA		102
8.3.1	Analog transmission output			102
8.3.2	Transmission output target address			102
8.3.3	Transmission output target channel			103
8.3.4	Current output range			103
8.3.5	Transmission output high/low-limit value			103
8.4	Temperature control	TMH2/4		104
8.4.1	Temperature control method			104
8.4.2	ON/OFF control			104
8.4.3	PID control			105
8.4.4	Auto-tuning			108
8.5	Alarm output			110
8.5.1	Alarm configurations			110
8.5.2	Alarm output mode	TMH2/4		112
8.5.3	Alarm output option	TMH2/4		113
8.5.4	Alarm SV	TMH2/4		115
8.5.5	Alarm output hysteresis	TMH2/4		115
8.5.6	Alarm output delay time	TMH2/4		116

8.5.7	Alarm output method	TMH2/4	TMHE	116			
8.5.8	Alarm output target address	TMH2/4		117			
8.5.9	Alarm output target channel	TMH2/4		117			
8.5.10	Alarm output logic operation	TMH2	TMHE	117			
8.5.11	Loop break alarm(LBA)	TMH2/4		118			
8.5.12	Sensor break alarm	TMH2/4		122			
8.5.13	Heater break alarm	TMH2/4		122			
8.5.14	Alarm output deactivation	TMH2/4		127			
8.6	Monitoring			128			
8.6.1	Control output MV monitoring	TMH2/4		128			
8.6.2	Heating MV monitoring	TMH2/4		128			
8.6.3	Cooling MV monitoring	TMH2/4		128			
8.6.4	Heater current value monitoring	TMH2/4		128			
8.6.5	CT input value monitoring	TMHCT		129			
8.6.6	CT input value indicators channel	TMHCT		129			
8.7	RUN/STOP	TMH2/4		130			
8.7.1	STOP, Control output			130			
8.7.2	STOP, Alarm output			131			
8.7.3	POWER ON, RUN/STOP			131			
8.7.4	Alarm Out, RUN/STOP			131			
8.8	Multi SV	TMH2/4		132			
8.8.1	Number of multi SVs			132			
8.8.2	Multi SV No.			132			
8.8.3	Multi SV			132			
8.9	Digital input	TMH2/4		133			
8.9.1	Digital input target address			133			
8.9.2	Digital input terminal			133			
8.10	Error	TMH2/4		135			
8.10.1	Sensor error, MV			135			
8.11	Parameter reset	TMH2/4	TMHA	TMHE	TMHCT	TMHC	136
9	Simple Error Diagnosis						137
9.1	Error display						137
9.2	Trouble shootings						137

10 Comprehensive Device Management Program(DAQMaster)	139
10.1 Overview.....	139
10.2 Features.....	140
10.3 Connect device	142
10.4 Set parameter.....	149
10.5 Mac address.....	150
10.6 Save parameter	151
10.7 Copy parameter.....	153
10.8 User group parameter.....	157
10.8.1 Control/Option module	157
10.8.2 Ethernet communication module.....	159
10.8.3 PLC ladderless communication module.....	162
10.9 Firmware Version	164
10.9.1 Major changed firmware version.....	164
10.9.2 Check firmware version	164
10.9.3 Setting by firmware version combination	166

1 Product Introduction

1.1 Features

TMH Series multi channel module type temperature controller controls 4 / 2 channels with high speed sampling (50ms) via one unit. Side connector connection makes less wiring work and close mounting possible for up to 32 units, 128 channels without additional power and communication wires for expansion modules.

Control and basic module, TMH, connects option modules, TMHA(analog input/output module), TMHE (digital input/alarm output module), TMHCT (CT input module), TMHC (communication module) for various input/output, alarm, and communication function.

PC parameter setting and monitoring is possible via RS485 communication or dedicated USB cable. In addition, more reliable temperature heating/cooling controlling can be realized via various convenient functions.

[Common]

- Easy maintenance with separated body/base parts
- No communication and power supply for expansion modules required using module connectors: Up to 32 modules
- PC parameter setting via PC (USB cable and RS485 communication): Supports comprehensive device management program (DAQMaster)
- ※ Communication converter, sold separately: SCM-US (USB/Serial converter), SCM-38I (RS232C/RS485 converter), SCM-US48I (USB/RS485 converter), SCM-WF48 (Wi-Fi/RS485/USB wireless communication converter), EXT-US (converter cable)

[TMH2/4 Series (control module)]

- One module supports multi channels (2 channels/4 channels) for input/output control: connecting TMH2/4, up to 32 modules (2 channels: 64 channels/4 channels: 128 channels)
- High-speed sampling with 50ms and $\pm 0.3\%$ measuring accuracy
- Simultaneous heating/cooling control and auto/manual control for high-performance control
- Selectable current output or SSR drive output
- Electrical insulation of each channel (dielectric strength 1,000VAC)
- CT input terminal for measuring load current (※CT, sold separately: CSTC-E80LN, CSTC-E200LN, CSTS-E80PP)
- Multi input/Multi range

[TMHA (analog input/output option module)]

- 4 channels, multi input/multi range/transmission output (DC0-20mA or 4-20mA)
- Electrical insulation of each channel (dielectric strength 1,000VAC)
- High-speed sampling with 50ms and $\pm 0.3\%$ measuring accuracy

[TMHE (digital input/Alarm output option module)]

- Digital input (8 types)/Alarm output (8 types)

[TMHCT (CT input option module)]


- 8 CT inputs
- CT input status indicators

[TMHC (communication module)]


- Expandable connection to master devices (PC, PLC, etc) with TMH2/4 (control module) and TMHA/E/CT (option module)
- One module connects up to 32 control /option modules (16 control modules + 16 option modules)
- Supports RS422, RS485, PLC Ladderless or Ethernet communication

1.2 Components and accessories


(1) Components

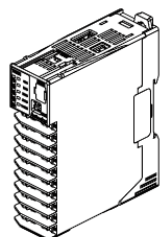


TMH□Series



Instruction manual



Expansion connector



Module lock connector



Note


- Make sure all listed components are included with your product before use. If any components are missing or damaged, please contact our sales department or your dealer.
- Note that power supply/communications connectors are provided with basic modules only.

(2) Accessories (sold separately)


- Communication converter

SCM-WF48 (Wi-Fi to RS485·USB wireless communication converter)		SCM-US48I (USB to RS485 converter)	
SCM-38I (RS232C to RS485 converter)	SCM-US (USB to Serial converter)	EXT-US (converter cable)	

CT connector cable

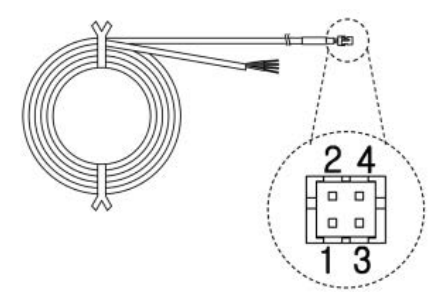CICT4-1 (cable length: 1m), CICT4-3 (cable length: 3m)			
※When connecting CT connector and CT input terminal, align the concave part (凹) and the convex part (凸).			
	Pin number	Cable color	CT connection
	1	Brown	CT2/4
	2	Blue	CT2/4
	3	White	CT1/3
	4	Black	CT1/3



Current transformer (CT)

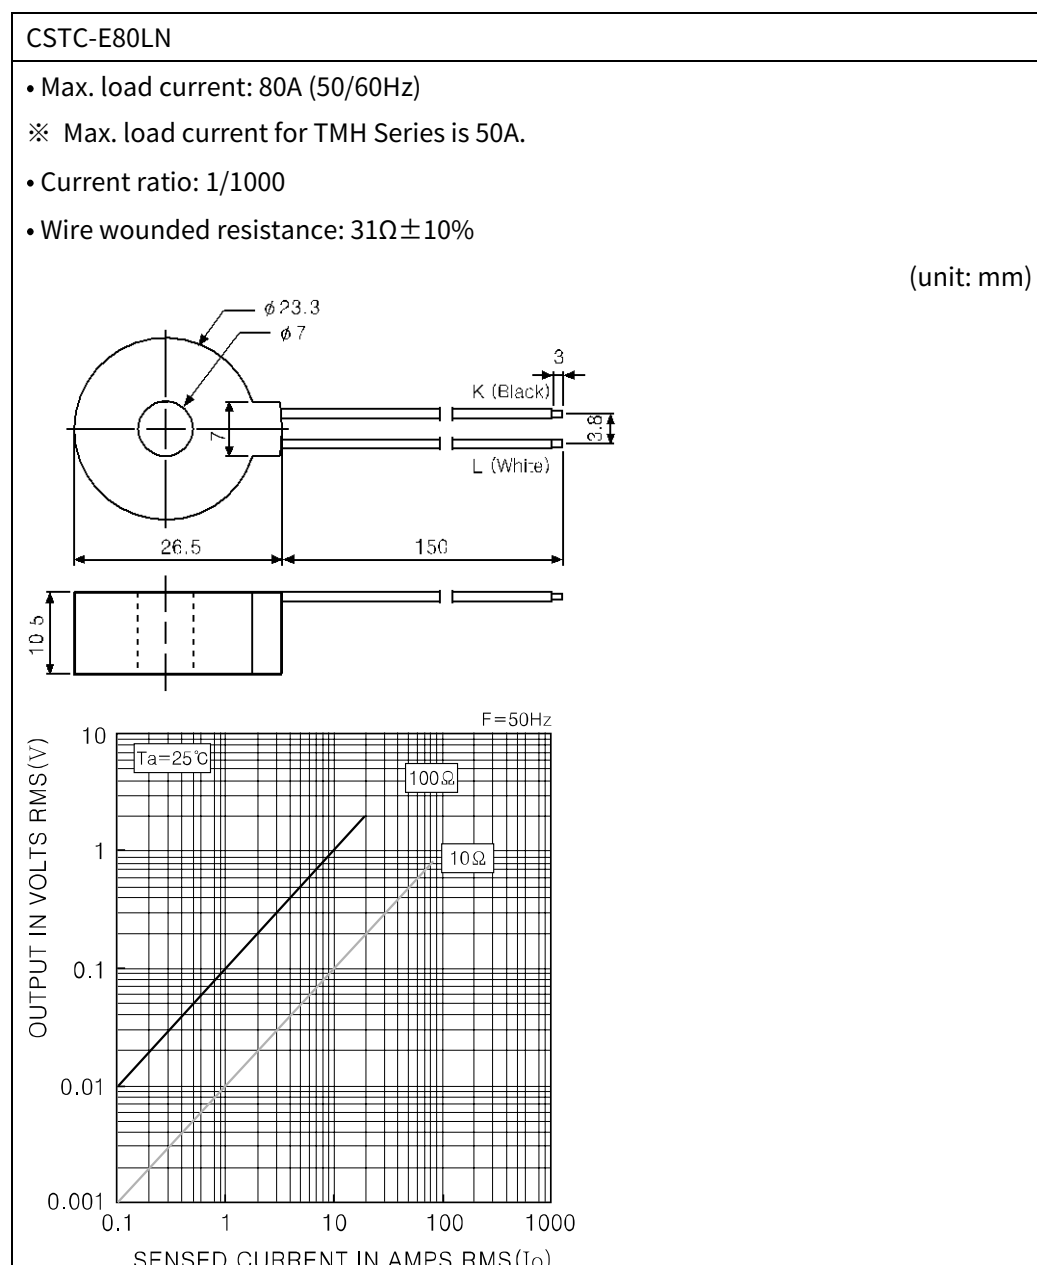

CSTC-E200LN

- Max. load current: 200A (50/60Hz)
- ※ Max. load current for TMH Series is 50A.
- Current ratio: 1/1000
- Wire wounded resistance: $20\Omega \pm 10\%$



(unit: mm)

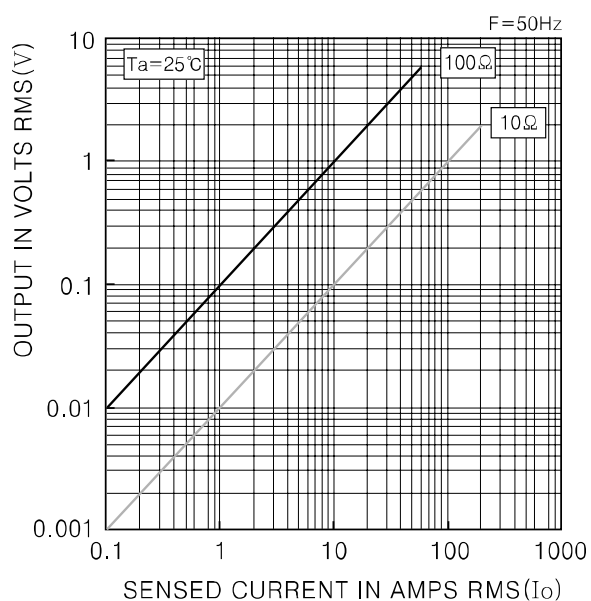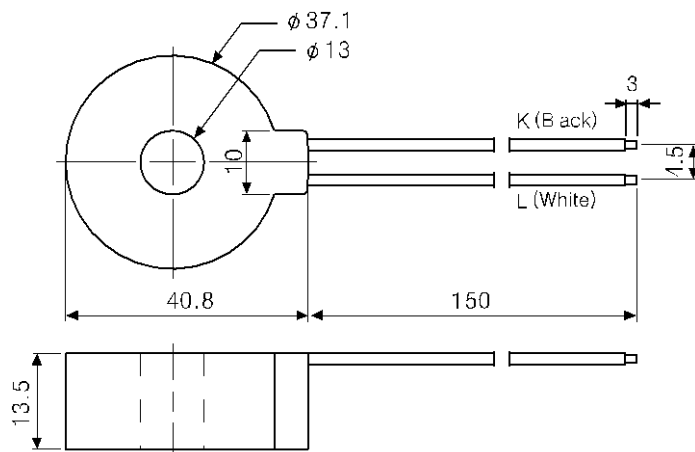

CSTS-E80PP

- Max. load current: 80A (50/60Hz)
- ※ Max. load current for TMH Series is 50A.
- Current ratio: 1/1000
- Wire wound resistance: $31\Omega \pm 10\%$

(unit: mm)

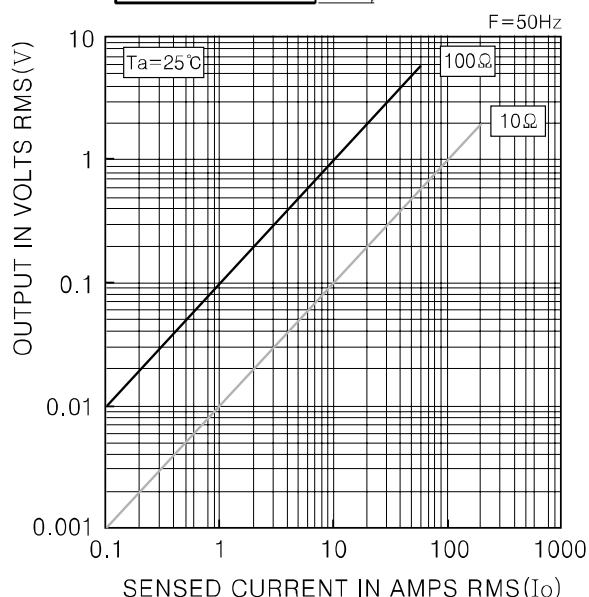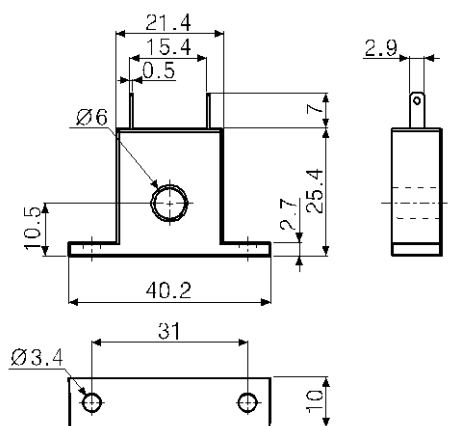

Caution

For using CT, do not supply first part current when opening CT output.

It occurs high voltage at CT output part.

Using current of above CTs are same as 50A. But be sure that inner hole sizes are different.

Select it properly for the environment.




Note

Images of components and accessories may differ from actual products.

For more information about any of the above products, please refer to the concerned product's user manual. Visit our website (www.autonics.com) to download it.

1.3 Models

1.3.1 TMH2/4 Series [control module]



Category		Description	
① Item		TMH	Advanced Multi-Channel Modular Temperature Controller
② Channel		2	2 channels
		4	4 channels
③ Input/Output option	2CH	2	CT input, digital input (DI-1/2), alarm output 1/2, RS485 comm. output
		4	CT input, digital input (DI-1/2), alarm output 1/2/3/4, RS485 comm. output
	4CH	N	CT input, RS485 comm. output
④ Power supply		2	24VDC
⑤ Control output		R	Relay output
		S	SSR drive output
		C	Selectable current or SSR drive output
⑥ Module type		B	Basic module
		E	Expansion module ^{※1}


※1.: Since the expansion module is not supplied with power/comm. terminal. Order it with the basic module.

1.3.2 TMHA/E/CT/C [option/communication module]

Type	Model	Input	Output	Module
Analog input/output	TMHA-42AE	Temperature sensor/ Analog input 1 to 4	Transmission output (0/4-20mA) 1 to 4	Option
Digital input, alarm output	TMHE-82RE	Digital input 1 to 8	Alarm output 1 to 8	
CT input	TMHCT-82NE	CT input 1 to 8	-	
PLC Ladderless	TMHC-22LE	RS422/485 PLC Ladderless		Communi -cation
Ethernet	TMHC-22EE	10/100BaseT, Modbus/TCP Ethernet		

1.4 Unit description and function

1.4.1 TMH2/4 Series [control module]

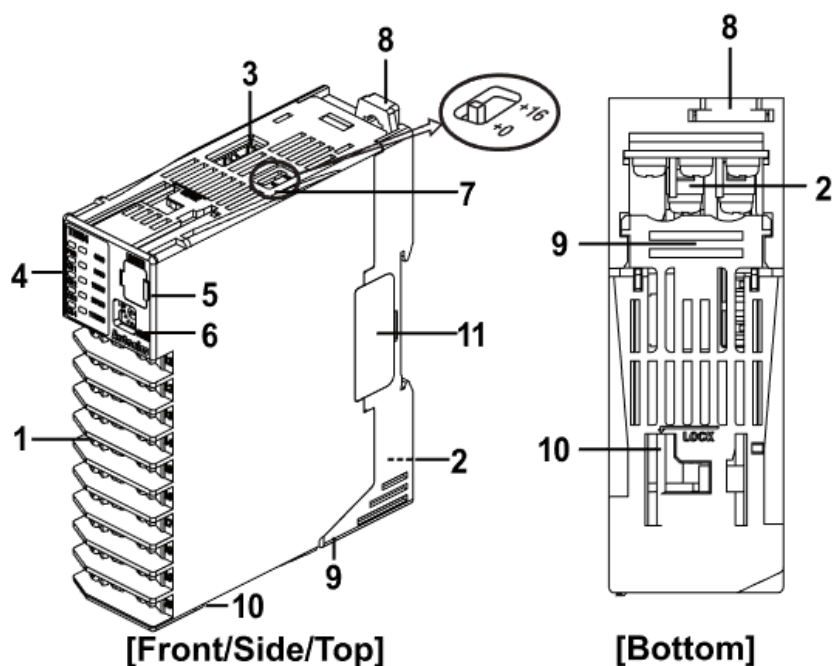

1. Input/Output terminal

For specific information about terminal formation, refer to '3 Connections and Isolated Block Diagram'.

2. Power/Comm. terminal [basic module only]


Supplies power to both basic control/expansion module and communicates with one or more module.

3. CT input terminal

When using the CT input terminal, remove the rubber cap and connect CT in the same direction with below image.

Connect CT with CICT4-□ (CT connector cable, sold separately).

※ When connecting CT connector and CT input terminal, align the concave part (□) and the convex part (▢).

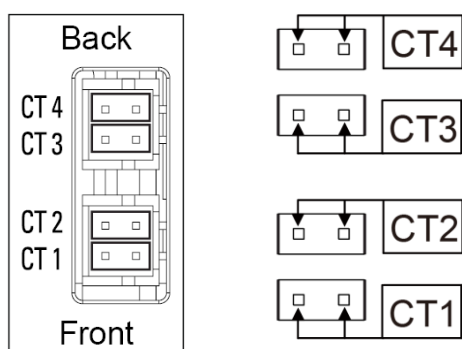

4. Indicator

- TMH2 Series

Indicator \ Status			Initial power ON※ ¹	Control output	Auto tuning※ ²	Alarm output			
						N.O. (Normally Open)		N.C. (Normally Closed)	
						OFF (OPEN)	ON (CLOSE)	OFF (CLOSE)	ON (OPEN)
LED 1 LED 2   PWR   CH 1 AL 1   CH 2 AL 2      	LED 1	PWR (green)※ ³	—	ON	ON	—			
		CH1 (red)		ON	Flash				
		CH2 (red)		ON	Flash				
		(red)		ON※ ⁴	OFF				
		(red)		ON※ ⁵	OFF				
	LED 2	(yellow)	Flash (4,800bps)	Module comm. status※ ⁶					
		AL1 (yellow)	Flash (9,600bps)	—	—	OFF	ON	OFF	ON
		AL2 (yellow)	Flash (19,200bps)	—	—	OFF	ON	OFF	ON
		AL3 (yellow)	Flash (38,400bps)	—	—	OFF	ON	OFF	ON
		AL4 (yellow)	Flash (115,200bps)	—	—	OFF	ON	OFF	ON

- TMH4 Series

Indicator		Status	Initial power ON※ ¹	Control output	Auto tuning※ ²
LED 1	LED 2	LED 1	—	PWR (green)※ ³	ON
	CH1 (red)			ON	
PWR	CH2 (red)			ON	
	CH3 (red)			ON	
CH1	CH4 (red)			ON	
	LED 2	(yellow)	Flash (4,800bps)	Module comm. status※ ⁶	
CH2		(yellow)	Flash (9,600bps)	—	—
		(yellow)	Flash (19,200bps)	—	—
CH3		(yellow)	Flash (38,400bps)	—	—
		(yellow)	Flash (115,200bps)	—	—
CH4					

※2.: When the power is on, the indicator of set communication speed flashes for 5 sec.

※3.: Indicator of the channel, which is in the process of auto-tuning, flashes at 1 sec interval.

※4.: When communicating with external device, PWR indicator flashes.

※5.: Turns on, when CH1 outputs cooling control in the heating&cooling control method.

※6.: Turns on, when CH2 outputs cooling control in the heating&cooling control method.

※7.: Displays communication status in control output, auto-tuning or operating RUN mode.

ON: normal / flash: abnormal / OFF: not communicating

5. PC loader port: PC loader port supports serial communication between single module and PC. It needs EXT-US (converter cable)+SCM-US (USB/Serial converter, sold separately) for communicating.

6. Unit address setting switch (SW1): Set the unit address. If changing the unit address by setting switch, use the flat head driver which is 2mm size or plastic driver. If not, it may cause product damage.

7. Unit address group switch (SW2): When setting the unit address over 16, select +16.


8. Rail lock: Rail lock helps installing the device to DIN rail or with bolts.

9. Lock lever: Lock lever holds module body and base tightly.

10. Module lock connector hole: When connect modules, insert module lock connector in the hole in order to enhance coherence between modules.

11. END cover: When connect modules, remove END cover in order to connect expansion connector.

1.4.2 TMHA/E/CT/C [option/communication module]

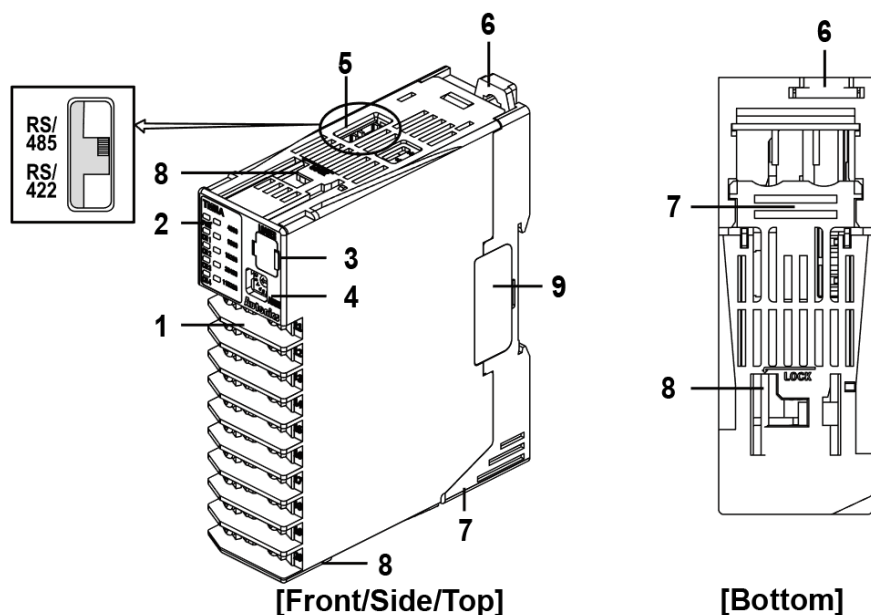

1. Input/Output terminal

For specific information about terminal formation, refer to '3 Connections and Isolated Block Diagram'.

2. Indicator

- TMHA [analog input/output module]

Indicator		Status	Initial power ON ^{※1}	Internal comm.	Transmission output
LED 1	LED 2	PWR (green) ^{※2}	—	ON	ON
PWR		CH1 (red)		—	ON
CH 1		CH2 (red)		—	ON
CH 2		CH3 (red)		—	ON
CH 3		CH4 (red)		—	ON
CH 4		(yellow)	Flash (4,800bps)	Module comm. status ^{※3}	
		(yellow)	Flash (9,600bps)	ON (CH1)	—
		(yellow)	Flash (19,200bps)	ON (CH2)	—
		(yellow)	Flash (38,400bps)	ON (CH3)	—
		(yellow)	Flash (115,200bps)	ON (CH4)	—

- TMHE [digital input, alarm output module]

Indicator		Status	Initial power ON ^{※1}	Internal comm.	Alarm output			
					N.O. (Normally Open)		N.C. (Normally Closed)	
LED 1	LED 2	PWR (green) ^{※2}	—	ON	OFF (OPEN)	ON (CLOSE)	OFF (CLOSE)	ON (OPEN)
PWR		CH1 (red)		—	OFF	ON	OFF	ON
AL1	AL5	CH2 (red)		—	OFF	ON	OFF	ON
AL2	AL6	CH3 (red)		—	OFF	ON	OFF	ON
AL3	AL7	CH4 (red)		—	OFF	ON	OFF	ON
AL4	AL8	(yellow)	Flash (4,800bps)	Module comm. status ^{※3}	Module comm. status ^{※3}			
		AL5 (yellow)	Flash (9,600bps)	—	OFF	ON	OFF	ON
		AL6 (yellow)	Flash (19,200bps)	—	OFF	ON	OFF	ON
		AL7 (yellow)	Flash (38,400bps)	—	OFF	ON	OFF	ON
		AL8 (yellow)	Flash (115,200bps)	—	OFF	ON	OFF	ON

- TMHCT [CT input module]

Indicator		Status	Initial power ON ^{※1}	CT input ^{※4}	Internal comm.
LED 1	LED 2	PWR (green) ^{※2}	—	ON	ON
PWR		(red)		ON (40.1 to 50.0A)	—
		(red)		ON (30.1 to 40.0A)	—
		(red)		ON (20.1 to 30.0A)	—
		(red)		ON (10.1 to 20.0A)	—
		(yellow)	Flash (4,800bps)	Module comm. status ^{※3}	Module comm. status ^{※3}
		(yellow)	Flash (9,600bps)	ON (40.1 to 50.0A)	—
		(yellow)	Flash (19,200bps)	ON (30.1 to 40.0A)	—
		(yellow)	Flash (38,400bps)	ON (20.1 to 30.0A)	—
		(yellow)	Flash (115,200bps)	ON (10.1 to 20.0A)	—

- TMHC-22LE [PLC Ladderless communication module]

Indicator		Status	Initial power ON ^{※5}	Internal comm.	Connection	PLC ladderless comm.
LED 1	LED 2	PWR	Flash (4,800bps)	Flash (green)	—	Flash (red, Reading)
PWR		(red)	Flash (9,600bps)	Flash (TMH2/4)	—	—
		(red)	Flash (19,200bps)	Flash (TMHA)	—	—
		(red)	Flash (38,400bps)	Flash (TMHE)	—	—
		(red)	Flash (115,200bps)	Flash (TMHCT)	—	—
		(yellow)	Flash (4,800bps)	—	ON	Flash (Sending)
		(yellow)	Flash (9,600bps)	—	ON (TMH2/4)	—
		(yellow)	Flash (19,200bps)	—	ON (TMHA)	—
		(yellow)	Flash (38,400bps)	—	ON (TMHE)	—
		(yellow)	Flash (115,200bps)	—	ON (TMHCT)	—

- TMHC-22EE [Ethernet communication module]

Indicator		Status	Initial power ON	Internal comm.	Connection
LED 1	LED 2	PWR(green)	ON	Flash (external device)	—
PWR		(red)	—	Flash (TMH2/4)	—
		(red)	—	Flash (TMHA)	—
		(red)	—	Flash (TMHE)	—
		(red)	—	Flash (TMHCT)	—
		(yellow)	—	ON	Flash (Ethernet comm.)
		(yellow)	Sequence-flashing vertically for 5 sec	—	ON (TMH2/4)
		(yellow)		—	ON (TMHA)
		(yellow)		—	ON (TMHE)
		(yellow)		—	ON (TMHCT)

※1.: At the moment when power is on, the indicator of set communication speed flashes for 5 sec.

※2.: When communicating with external device, PWR indicator flashes.

※3.: Displays internal communication status between modules.

ON: normal / flash: abnormal / OFF: not communicating

※4.: The indicator corresponding to the certain set value of CT input flashes according to the parameter [CT Input Value Indication Lamp ☐].

LED 1: CT Input Value Indication Lamp1 / LED 2: CT Input Value Indication Lamp2

※5.: At the moment when power is on, the indicator corresponding to host communication speed flashes for 5 sec. LED 1: host 1 / LED 2: host 2

3. PC loader port: PC loader port supports serial communication between single module and PC. It needs EXT-US (converter cable)+SCM-US (USB/Serial converter, sold separately) for communicating.

4. Unit address setting switch (SW1): Set the unit address.

If changing the unit address by setting switch, use the flat head driver which is 2mm size or plastic driver. If not, it may cause product damage.

5. Communication mode switch (SW2): Select communication mode between RS485 and RS422. (TMHC only)

6. Rail lock: Rail lock helps installing the device to DIN rail or with bolts.

7. Lock lever: Lock lever holds module body and base tightly.

8. Module lock connector hole: When connect modules, insert module lock connector in the hole in order to enhance coherence between modules.

9. END cover: When connect modules, remove END cover in order to connect expansion connector.

2 Specifications

2.1 TMH2/4 Series [control module]

Series		TMH2	TMH4
No. of channels		2 channels	4 channels
Power supply		24VDC=	
Permissible voltage range		90 to 110% of rated voltage	
Power consumption		Max. 5W (for max. load)	
Display method		None- parameter setting and monitoring is available at external devices (PC, PLC, etc.)	
Input type	TC	K(CA), J(IC), E(CR), T(CC), B(PR), R(PR), S(PR), N(NN), C(TT), G(TT), L(IC), U(CC), Platinel II	
	RTD	DPT100Ω, JPT100Ω, DPT50Ω, Cu100Ω, Cu50Ω, Nikel 120Ω 3-wire type (permissible line resistance max. 5Ω)	
	Analog	• Voltage: 0-100mVDC=, 0-5VDC=, 1-5VDC=, 0-10VDC= • Current: 0-20mA, 4-20mA	
Sampling cycle		50ms (2CH or 4CH synchronous sampling)	
Measured accuracy	TC※1	• At room temperature (23°C±5°C): (PV ±0.3% or ±1°C, higher one) ±1-digit※2	
	RTD		
	Analog	• At room temperature (23°C±5°C): ±0.3% F.S. ±1-digit • Out of room temperature range: ±0.5% F.S. ±1-digit	
Option input	CT input	0.0-50.0A (primary current measurement range) ※CT ratio=1/1000 Measured accuracy: ±5% F.S. ±1-digit	
	Digital input	• Connect input: ON - max. 1kΩ, OFF - min. 100kΩ • Solid-state input: ON - max. residual voltage 0.9V, OFF - max. leakage current 0.5mA • Outflow current : approx. 0.3mA per input	-
Control method	Heating, Cooling	ON/OFF control, P, PI, PD, PID control	
	Heating& Cooling		
Control output	Relay	250VAC 3A 1a	
	SSR	Max. 12VDC ±3V 20mA	

Series		TMH2	TMH4
	Current ^{※3}	Selectable DC 4-20mA or DC 0-20mA (load resistance max. 500Ω)	
Option output	Alarm	250VAC 3A 1a	-
Communication	Comm. terminal	RS485 (Modbus RTU protocol)	
	PC loader	TTL (Modbus RTU protocol)	
Hysteresis		RTD/Thermocouples: 1 to 100°C/°F (0.1 to 100.0°C/°F), analog: 1 to 100 digit	
Proportional band (P)		RTD/Thermocouples: 1 to 999°C/°F (0.1 to 999.9°C/°F), analog: 0.1 to 999.9 digit	
Integral time (I)		0 to 9999 sec	
Derivative time (D)		0 to 9999 sec	
Control period (T)		- Relay output, SSR output: 0.1 to 120.0 sec - Selectable current or SSR drive output: 1.0 to 120.0 sec	
Manual reset		0 to 100% (0.0 to 100.0%)	
Relay life cycle	Mechanical	Min. 10,000,000 operations	
	Electrical	Min. 100,000 operations (250VAC 3A resistance load)	
EEPROM life cycle		Approx. 1,000,000 operations (Erase / Write)	
Memory retention		Approx. 10 years (non-volatile semiconductor memory type)	
Insulation resistance		100MΩ (at 500VDC megger)	
Insulation type		Double insulation or reinforced insulation (mark:  , dielectric strength between the measuring input part and the power part: 1kV)	
Dielectric strength		1,000VAC 50/60Hz for 1 min (between input terminals and power terminals)	
Vibration		0.75mm amplitude at frequency of 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours	
Noise immunity		±0.5kV the square wave noise (pulse width: 1μs) by the noise simulator	
Environment	Ambient temp.	-10 to 50°C, storage: -20 to 60°C	
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH	
Protection structure		IP20 (IEC standard)	
Accessories		Expansion connector: 1, module lock connector: 2	
Approval		CE, c  , 	
Weight ^{※4}	Basic module	Approx. 250.8g (approx. 177.7g)	Approx. 250.4g (approx. 177.3g)

Series		TMH2	TMH4
	Expansion module	Approx. 245.7(approx. 172.6g)	Approx. 245.1g(approx. 172.2g)

- ※1.: Connecting 1 or more expansion module can vary measurement accuracy about $\pm 1^{\circ}\text{C}$, regardless of the number of connected expansion module.
- ※2.: ◎ At room temperature ($23^{\circ}\text{C} \pm 5^{\circ}\text{C}$)
- Thermocouple K, J, N, E below -100°C , L, U, PLII and RTD $\text{Cu}50\Omega$, $\text{DPT}50\Omega$: (PV $\pm 0.3\%$ or $\pm 2^{\circ}\text{C}$, higher one) ± 1 -digit
 - Thermocouple C, G and R, S below 200°C : (PV $\pm 0.3\%$ or $\pm 3^{\circ}\text{C}$, higher one) ± 1 -digit
 - Thermocouple B below 400°C : there is no accuracy standards.
- ◎ Out of room temperature range
- RTD $\text{Cu}50\Omega$, $\text{DPT}50\Omega$: (PV $\pm 0.5\%$ or $\pm 3^{\circ}\text{C}$, higher one) ± 1 -digit
 - Thermocouple R, S, B, C, G: (PV $\pm 0.5\%$ or $\pm 5^{\circ}\text{C}$, higher one) ± 1 -digit
 - Others blow -100°C : within $\pm 5^{\circ}\text{C}$
- ※3.: If the control output is set to current output, the heater current value monitoring function through the CT input terminal of the control module is not available.
- ※4.: The weight includes packaging. The weight in parenthesis is for unit only.
- ※ Environment resistance is rated at no freezing or condensation.

2.2 TMHA/E/CT [option module]

Model		TMHA-42AE			TMHE-82RE	TMHCT-82NE
No. of channels		4 channels			8 points	8 points
Power supply※1		24VDC=				
Permissible voltage range		90 to 110% of rated voltage				
Power consumption		Max. 5W (for max. load)				
Display method		None- parameter setting and monitoring is available at external devices (PC, PLC, etc.)				
Input type※2		TC	RTD	Analog	Digital	CT
Sampling cycle		50ms (4CH synchronous sampling)			-	
Measured accuracy※3		• At room temperature (23°C±5°C): (PV ±0.3% or ±1°C, higher one) ±1-digit※4 • Out of room temperature range: (PV ±0.5% or ±2°C, higher one) ±1-digit		• At room temperature (23°C±5°C): ±0.3% F.S. ±1-digit • Out of room temperature range: ±0.5% F.S. ±1-digit	-	±5% F.S. ±1-digit
Output	Alarm	-			250VAC 3A 1a	-
	Transmission	DC 4-20mA or DC 0-20mA (load resistance max. 500Ω)			-	
Communication	Comm. terminal	RS485 (Modbus RTU protocol)				
	PC loader	TTL (Modbus RTU protocol)				
Relay life cycle	Mechanical	-			Min. 10,000,000 operations	
	Electrical				Min. 100,000 operations (250VAC 3A resistance load)	
Memory retention		Approx. 10 years (non-volatile semiconductor memory type)				
Insulation resistance		Over 100MΩ (500VDC megger)				
Insulation type		Double insulation or reinforced insulation (mark:□, dielectric strength between the measuring input part and the power part : 1kV)				

Model		TMHA-42AE	TMHE-82RE	TMHCT-82NE
Dielectric strength		1,000VAC 50/60Hz for 1 min (between power source terminal and input terminal)		
Vibration		0.75mm amplitude at frequency of 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours		
Noise immunity		Square shaped noise by noise simulator (pulse width 1μs) ±0.5kV R-phase, S-phase		
Environ ment	Ambient temp.	-10 to 50°C, storage: -20 to 60°C		
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH		
Protection structure		IP20 (IEC standard)		
Accessories		Expansion connector: 1, module lock connector: 2		
Approval		CE, cULus, ENEC		
Weight※5		Approx. 233.8g (approx. 160.7g)	Approx. 239g (approx. 165.9g)	Approx. 220.6g (approx. 147.5g)

※1.: Voltage of power supply/communication terminal placed in the backside of TMH2/4 Series (basic control module)

※2.: Input type

TMHA	Thermocouple	K(CA), J(IC), E(CR), T(CC), B(PR), R(PR), S(PR), N(NN), C(TT), G(TT), L(IC), U(CC), Platinel II
	RTD	DPt100Ω, JPt100Ω, DPt50Ω, Cu100Ω, Cu50Ω, Nikel 120Ω 3-wire type (permissible line resistance max. 5Ω per line)
	Analog	• Voltage: 0-100mVDC, 0-5VDC, 1-5VDC, 0-10VDC • Current: 0-20mA, 4-20mA
TMHE	Digital	• Connect input: ON - max. 1kΩ, OFF - min. 100kΩ • Solid-state input: ON - max. residual voltage 0.9V, OFF - max. leakage current 0.5mA • Outflow current: approx. 0.3mA per input
TMHCT	CT	0.0-50.0A (primary current measurement range) ※CT ratio=1/1000

※3.: In case of TMHA, connecting 1 or more expansion module can vary measurement accuracy about ±1°C, regardless of the number of connected expansion module.

※4.: ◎ At room temperature ($23^{\circ}\text{C} \pm 5^{\circ}\text{C}$)

- Thermocouple K, J, N, E below -100°C , L, U, PLII and RTD Cu50 Ω , DPt50 Ω : (PV $\pm 0.3\%$ or $\pm 2^{\circ}\text{C}$, higher one) ± 1 -digit
- Thermocouple C, G and S below 200°C : (PV $\pm 0.3\%$ or $\pm 3^{\circ}\text{C}$, higher one) ± 1 -digit
- Thermocouple B below 400°C : there is no accuracy standards.

◎ Out of room temperature range

- RTD Cu50 Ω , DPt50 Ω : (PV $\pm 0.5\%$ or $\pm 3^{\circ}\text{C}$, higher one) ± 1 -digit
- Thermocouple R, S, B, C, G: (PV $\pm 0.5\%$ or $\pm 5^{\circ}\text{C}$, higher one) ± 1 -digit
- Others blow -100°C : within $\pm 5^{\circ}\text{C}$

※5.: The weight includes packaging. The weight in parenthesis is for unit only.

※ Environment resistance is rated at no freezing or condensation.

2.3 TMHC [communication module]

Model			TMHC-22LE	TMHC-22EE
Communication port			COM1, COM2	
Power supply※ ¹			24VDC≡	
Permissible voltage range			90 to 110% of rated voltage	
Power consumption			Max. 5W (for max. load)	
Display method			None- parameter setting and monitoring is available at external devices (PC, PLC, etc.)	
Commu nication	COM1 (Master, PLC)	Connection method	RS485/RS422	Ethernet (10/100BaseT)
		Protocol	Modbus RTU, PLC ladderless comm.	Modbus TCP
	COM2 (Master, Group)	Connection method	RS485/RS422	Ethernet (10/100BaseT)
		Protocol	Modbus RTU	Modbus TCP
	PC loader		TTL (Modbus RTU protocol)	
	Synchronization type		Asynchronous	-
	Comm. speed		4800, 9600 (default), 19200, 38400, 115200 bps	10/100 Mbps
	Comm. effective range		Max. 800m	-
	Response time		5 to 99ms (default: 20ms)	-
	Interface		- Start bit: 1-bit (fixed) - Data bit: 8-bit (fixed) - Parity bit: None (default), Odd, Even - Stop bit: 1-bit, 2-bit (fixed)	-
	Max. connection		16 control modules and 16 option modules per 1 TMHC module	
	EEPROM life cycle			Approx. 1,000,000 operations (Erase / Write)
Memory retention			Approx. 10 years (non-volatile semiconductor memory type)	
Insulation resistance			Over 100MΩ (500VDC megger)	
Insulation type			Double insulation or reinforced insulation (dielectric strength between the measuring input part and the power part:1kV)	
Dielectric strength			1,000VAC 50/60Hz for 1 min (between power source terminal and input terminal)	

Model		TMHC-22LE	TMHC-22EE
Vibration		0.75mm amplitude at frequency of 5 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours	
Noise immunity		Square shaped noise by noise simulator (pulse width 1μs) ±0.5kV R-phase, S-phase	
Environ- -ment	Ambient temp.	-10 to 50°C, storage: -20 to 60°C	
	Ambient humi.	35 to 85%RH, storage: 35 to 85%RH	
Protection structure		IP20(IEC standard)	
Accessories		Expansion connector: 1, module lock connector: 2	
Approval		CE, c  US, 	
Weight※1		approx. 219g (approx. 147g)	approx. 200g (approx. 129g)

※1.: The weight includes packaging. The weight in parenthesis is for unit only.


※ Environment resistance is rated at no freezing or condensation.

3 Connections and Isolated Block Diagram


3.1 Connections by Series

3.1.1 TMH2 Series [2 channels, control module]


- Power/Comm. terminal on the back [basic module only]

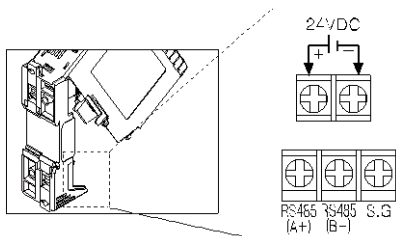

- Input/Output terminal on the front

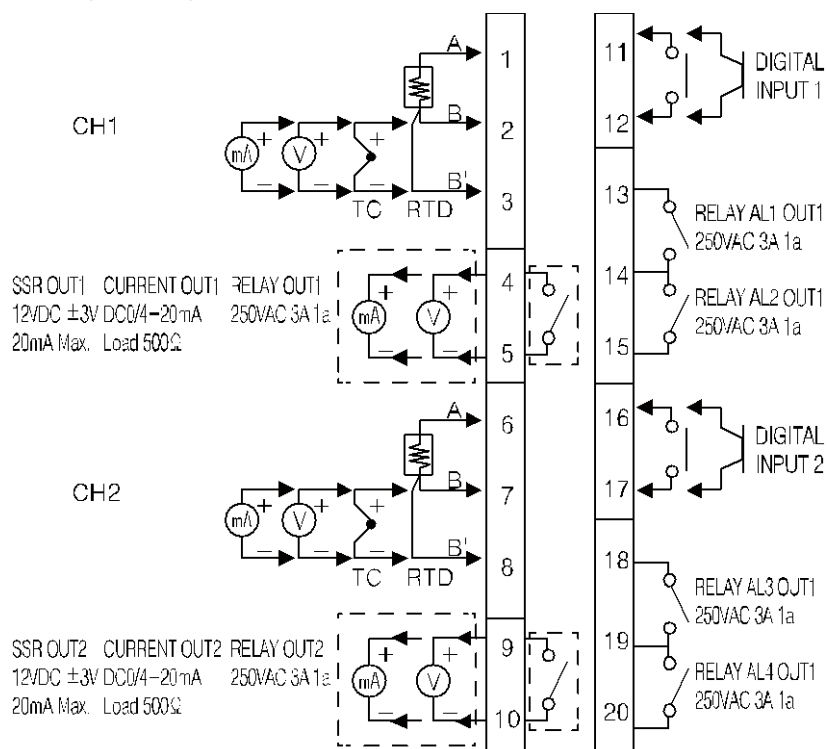


- CT input terminal on the top
When use the CT input terminals, remove the robber cap.
Connect CT with CICT4-□ (CT connector cable, sold separately).

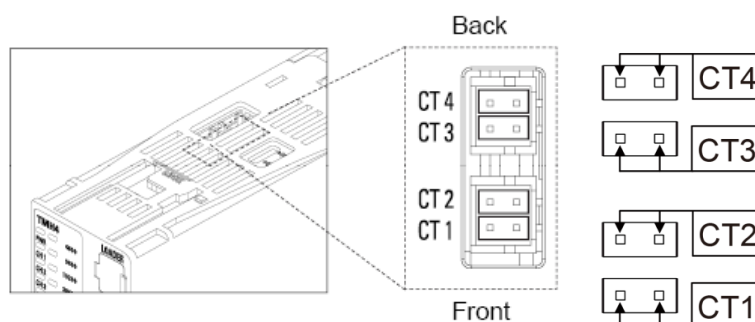


3.1.2 TMH4 Series [4 channels, control module]

- Power/Comm. terminal on the back [basic module only]

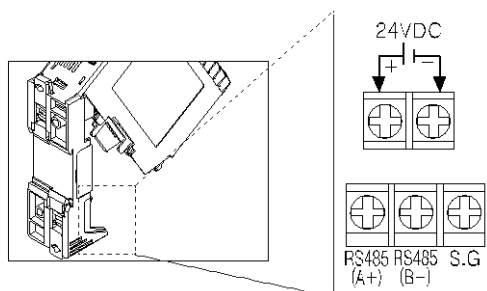


- Input/Output terminal on the front

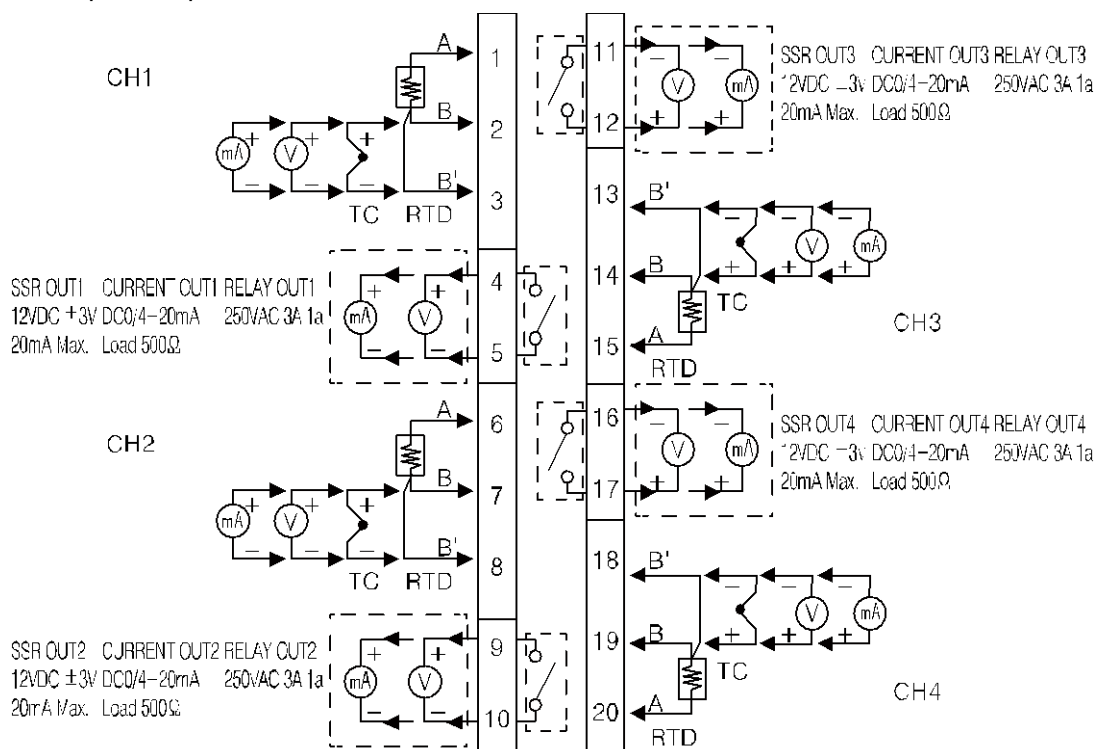

- CT input terminal on the top


When use the CT input terminals, remove the robber cap.

Connect CT with CICT4-□ (CT connector cable, sold separately).

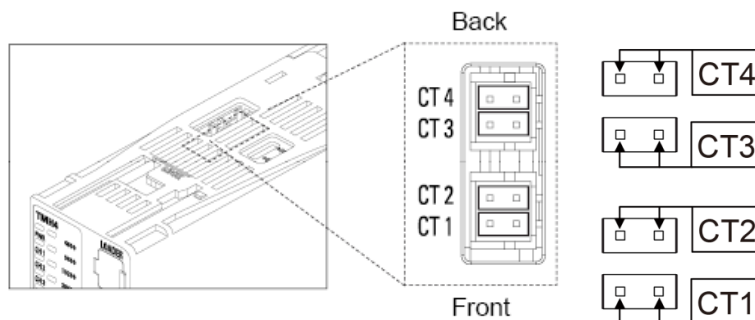


3.1.3 TMHA [analog input/output module]

- Input/Output terminal on the front

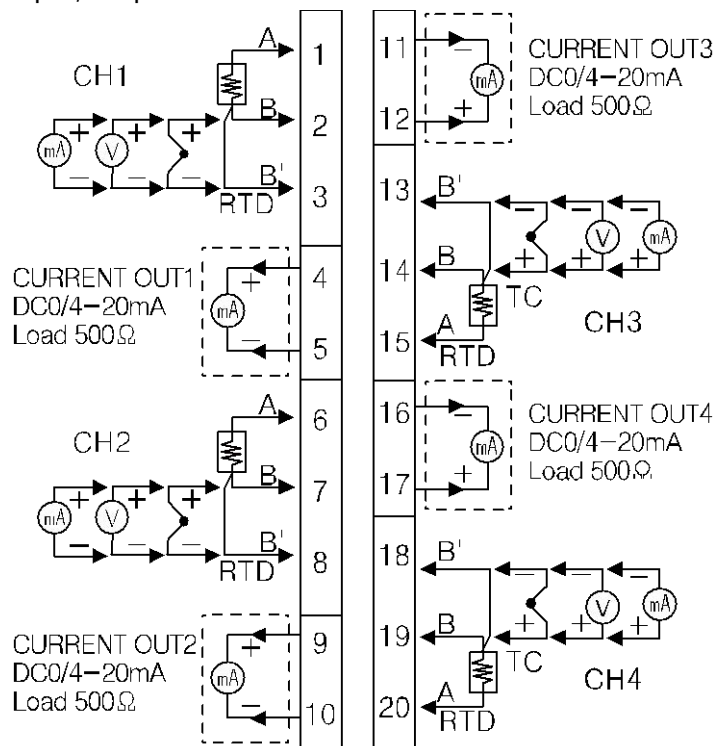


3.1.4 TMHE [digital input/alarm output module]

- Input/Output terminal on the front

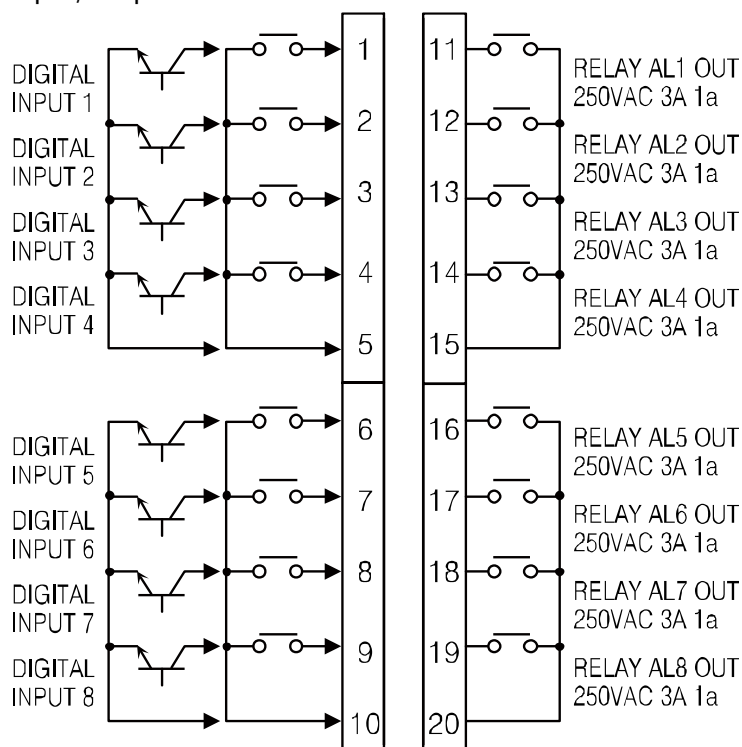


3.1.5 TMHCT [CT input module]

- Input/Output terminal on the front

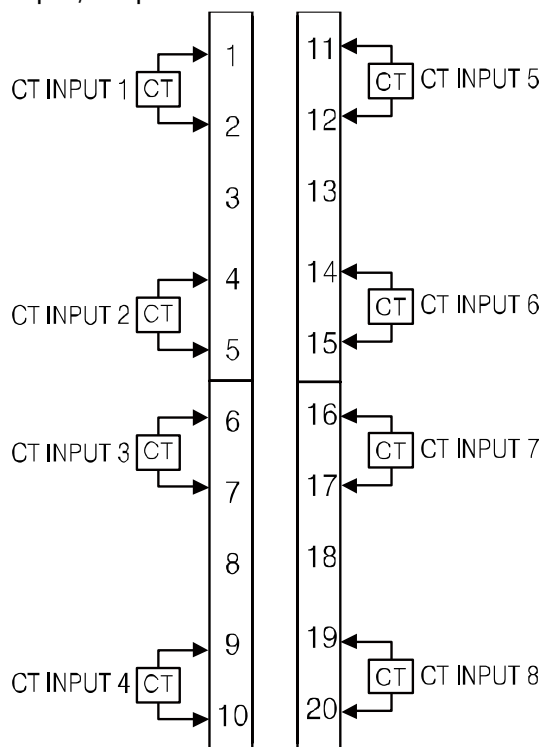

3.1.6 TMHC-22LE [PLC ladderless module]


- Input/Output terminal on the front

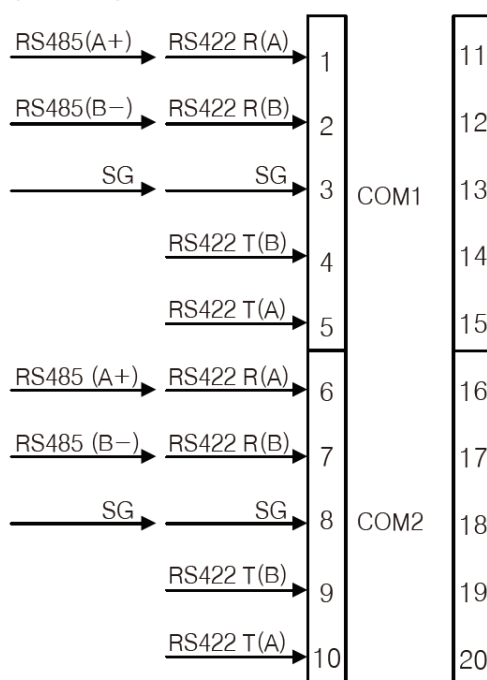

- ※ Select communication mode between RS485 and RS422 via communication mode switch on top of the module.

3.1.7 TMHC-22EE [Ethernet communication module]


- Input/Output terminal on the front

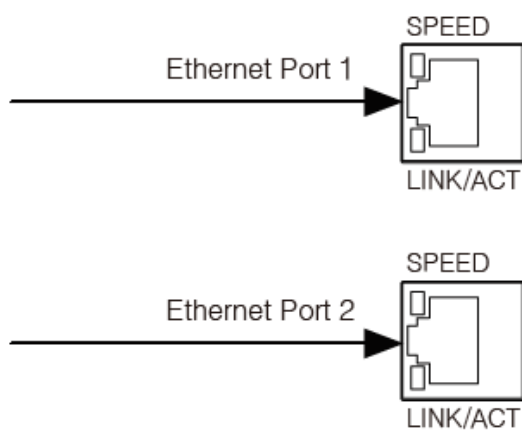

3.2 Caution for connection

(1) Common

- Check 'Connections' before wiring.
- Do not connect the not-used terminals.
- Keep metal chip, dust, and wire residue from flowing into the unit.
- Use terminals of size specified below.



<Round>

<Forked>

	a	B
Round	Min. 3.0mm	Max. 5.8mm
Forked	Min. 3.0mm	Max. 5.8mm

- Do not connect input cable and power cable together.
- Do not connect communication cable and power cable together.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line. Do not use near the equipment which generates strong magnetic force or high frequency noise.

(2) Power

- Check the polarity of the power terminal.
- When connecting the power input and relay output, use AWG 20 (0.50mm²) cable or over and tighten the terminal screw with a tightening torque of 0.74 to 0.90N·m.
- Supply adequate power for power input specifications and overall capacity.
(Max. power when connecting 32 modules: $32 \times 5W = 160W$)
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.

(3) Input

- Use the dedicated sensor of the TMH Series.
- When connecting the sensor input and communication cable without dedicated cable, use AWG 28 to 16 cable and tighten the terminal screw with a tightening torque of 0.74 to 0.90N·m.
- Check the polarity of the terminals before wiring the temperature sensor. For RTD temperature sensor, wire it as 3-wire type, using cables in same thickness and length. For thermocouple (CT) temperature sensor, use the designated compensation wire for extending wire.

- For thermocouple sensors, use compensation wire of the same specification as input sensors. Using an extension wire of different specification and/or material will increase inaccuracy of temperature sensing. It is recommended to choose high performance compensation wire for more reliable sensing.
- Make sure the sensor is securely attached to the input connector.
- Carefully adjust both load and sensor positions.

(4) Output


- Make sure to connect rated SSRs or loads to the output terminals.
- When connecting the relay output terminal, use over AWG 20 (0.50mm²) cable or over and tighten the terminal screw with a tightening torque of 0.74 to 0.90N·m.

(5) Communication


- Make sure to communication A, B terminal direction.
- In case of not dedicated communication line, use AWG 28 to 16 cable and tighten the terminal screw with a tightening torque of 0.74 to 0.90N·m.
- Use twisted pair wire for communication line and connect ferrite bead at each end of line to reduce the effect of external noise.
- Do not allow the communication line to exceed 800m in length.

4 Dimensions


■ Side

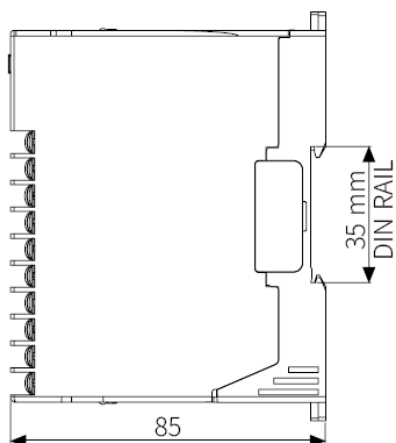

■ Front

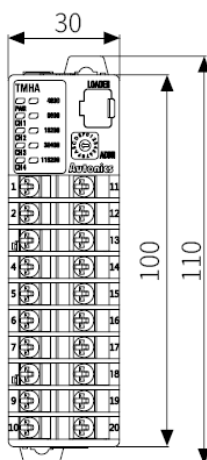

■ Inside

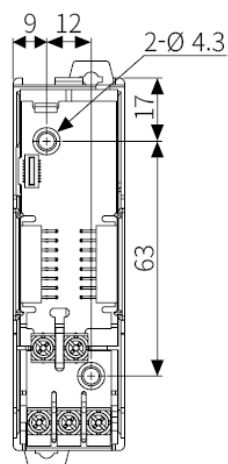


Note

Only basic module of control module has power/communication terminal.

4.1 Installation

(1) Separating base terminal block

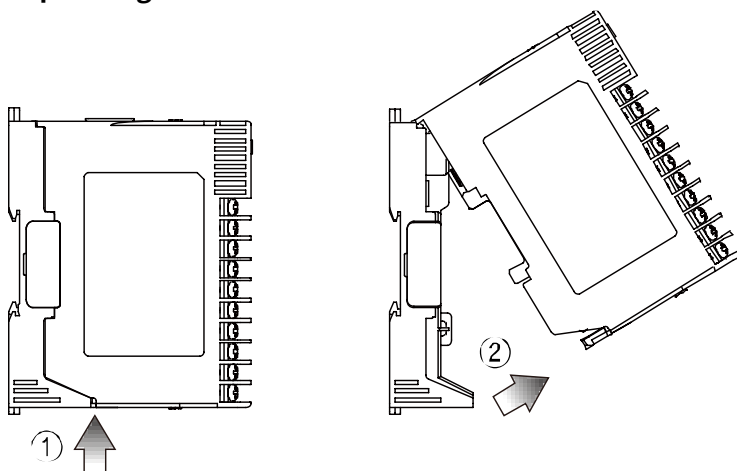


① Push the lock lever at the bottom of the module.

② Pull the body of the module and open up.




Note

When connecting base terminal block, align the upper concave part (凹) of the body and the upper convex part (凸) of the base. If the upper parts are not align correctly, it may damage to the inner connector.

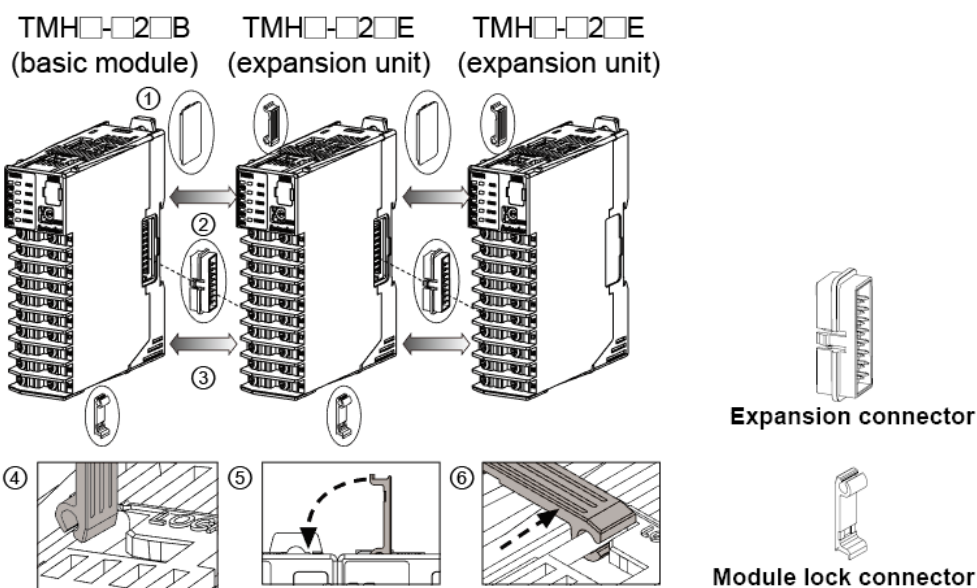(2) Connection between modules


- ① Remove END cover of each module (except END cover of the first and last module).
- ② Insert expansion connector.
- ③ Put all together tightly (max. 31 units).
- ④ Insert module lock connector.
- ⑤ Push module lock connector and insert in lock connector hole of another module on the side.
- ⑥ Push module lock connector to the lock direction.

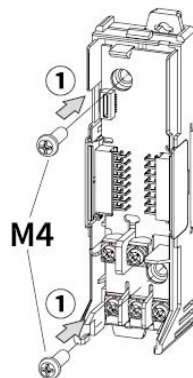(3) Mounting with bolts


1. Refer to 'Separating base terminal block' to separate base terminal block.
 2. Install the module by using M4 screws to the ① direction of the inside mounting hole.
- Refer to the 'Dimensions' to check hall positions and dimensions of inside mounting hole.

(4) Mounting on DIN rail

▪ Installation

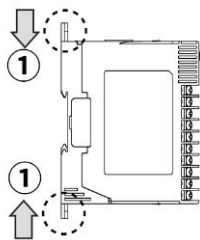


1. Press the rail lock at the top / bottom of the module to the ① direction.

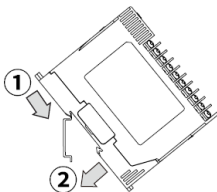

2. Hang the top rail lock to DIN rail.

3. Push to ① direction and press to ② direction.

▪ Separation

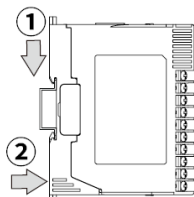


1. Press the module to ① direction.


2. Keep it pressed and pull it to ② direction.

**Note**

Install the module vertically.

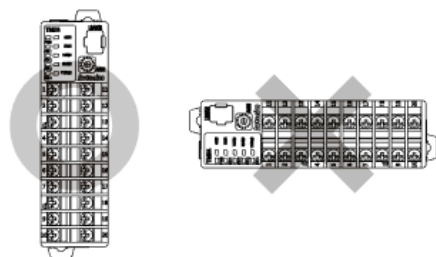

Use end plates (sold separately, not available from Autonics) to fix firmly.

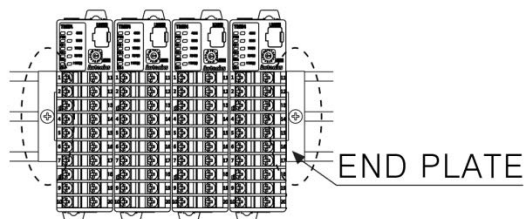

5 Preparation and Startup

5.1 General process

Before operating TMH Series for the first time, do the following:

1st Connect all external devices, sensor and load to the TMH Series.

2nd Set parameter values through external connecting devices.

3rd Download the parameters to TMH Series.

4th Proceed with auto-tuning or set control variables, and then start control.



Note

For using comprehensive device management program 'DAQMaster, parameters are automatically downloaded at the time when they are changed.


5.2 Setup values when power ON

Setting category	Factory default	Previous set value	Power ON set value
Auto/Manual	Auto	Auto	Auto
		Manual	Manual
RUN/STOP	RUN	RUN	RUN
		STOP	STOP
PID/ONOFF	PID	PID	Maintains set value
		ONOFF	Maintains set value
MV	0.0	Preset MV	Maintains set value
	0.0	Stop MV	Maintains set value
	0.0	Sensor Error MV	Maintains set value

6 Connection examples

6.1 TMH2/4 connection

(1) Relay output

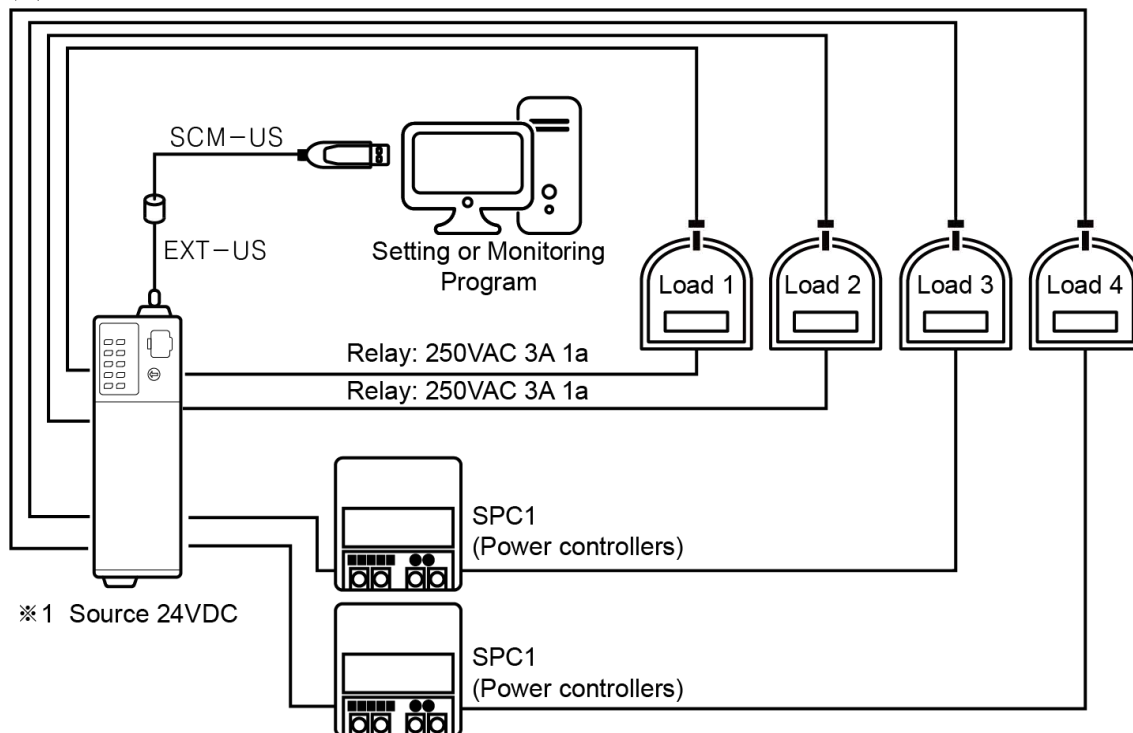


※1.: Using SCM-US enables only setting parameter. To monitor and control temperature requires the additional 24VDC power supply.



Caution

For connecting module to PC, use SCM-US with EXT-US.

(2) SSR drive output

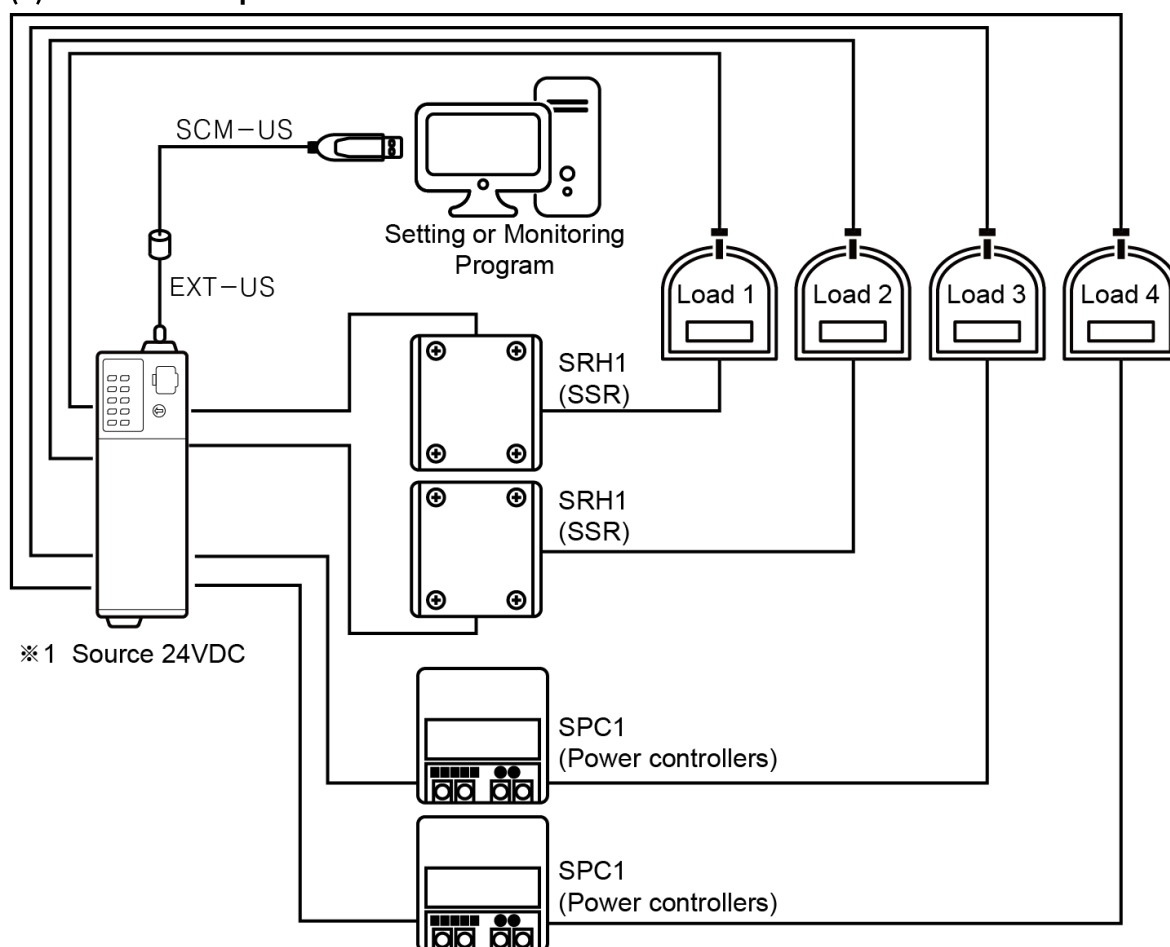


※1.: Using SCM-US enables only setting parameter. To monitor and control temperature requires the additional 24VDC power supply.

**Caution**

For connecting module to PC, use SCM-US with EXT-US.

Use isolation type SSR with TMHC.


6.2 TMH2/4, TMHA, TMHE, TMHCT interworking configuration example

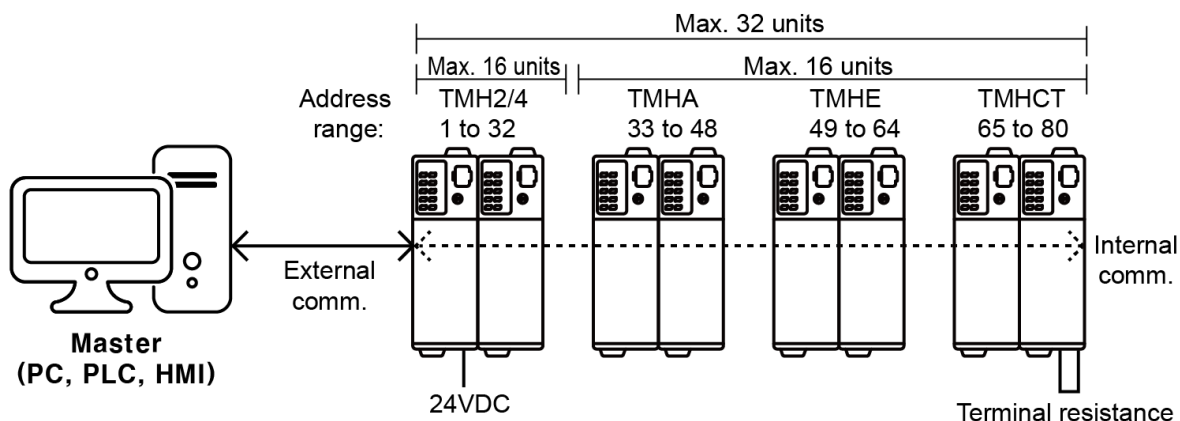


- Internal communication: Receive/Send data between TMH2/4 and TMHA/E/CT
External communication: Communicate with Master for controlling
- Each module is available to monitoring at DAQMatser via PC loader
- When noise cause communication error, connect terminating resistance to the each end of communication line (upper level system and module located on the far right of TMH).
Use suitable value of terminating resistance in consideration of communication line length and wiring.

6.3 TMHC interworking configuration example

6.3.1 PLC ladderless communication

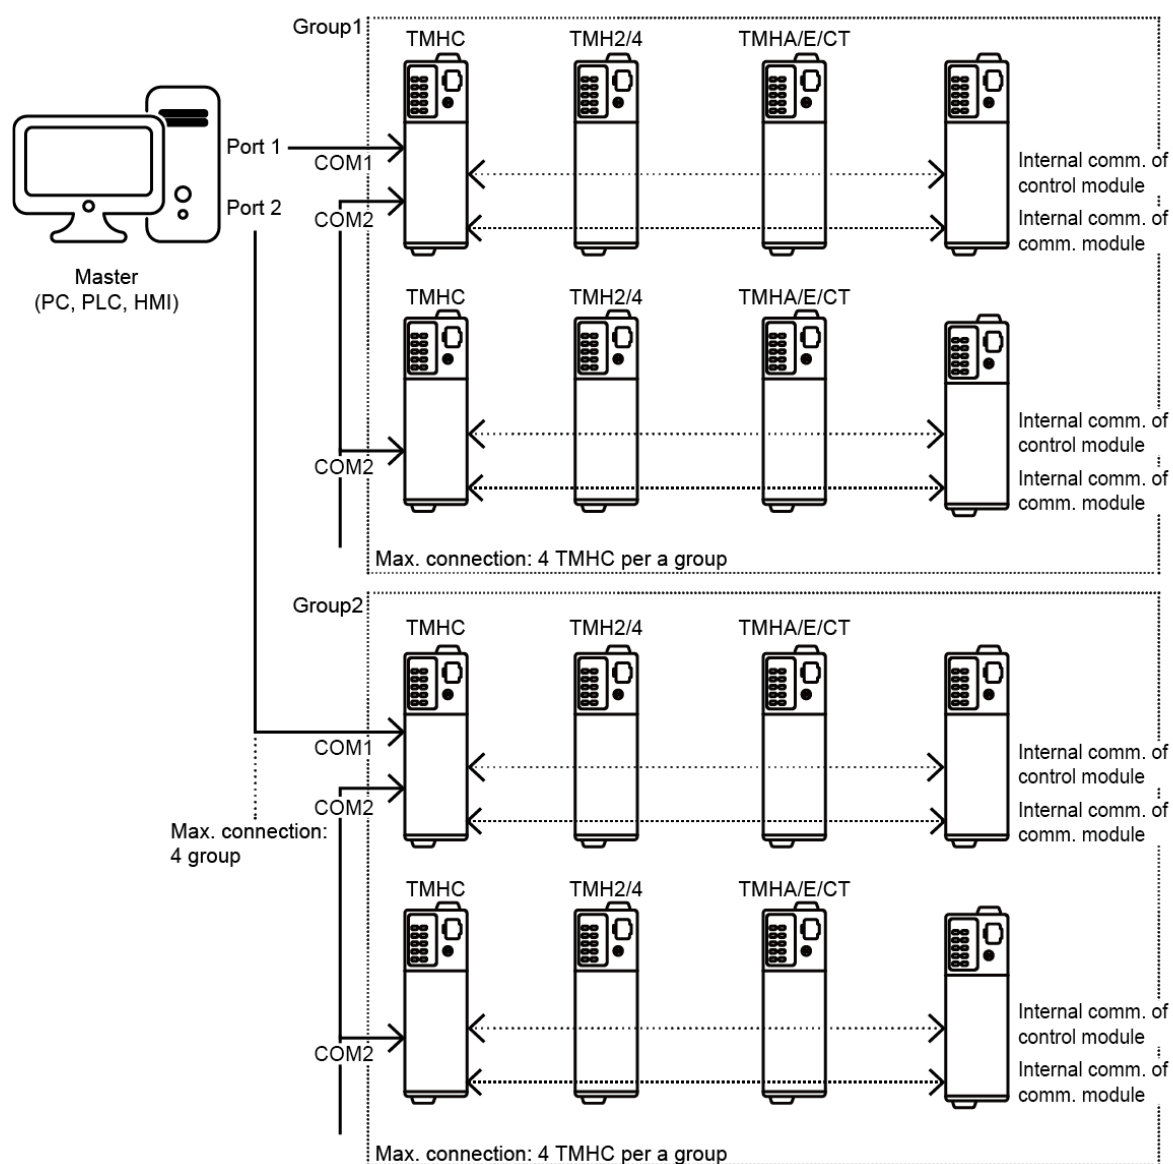

6.3.2 Ethernet communication

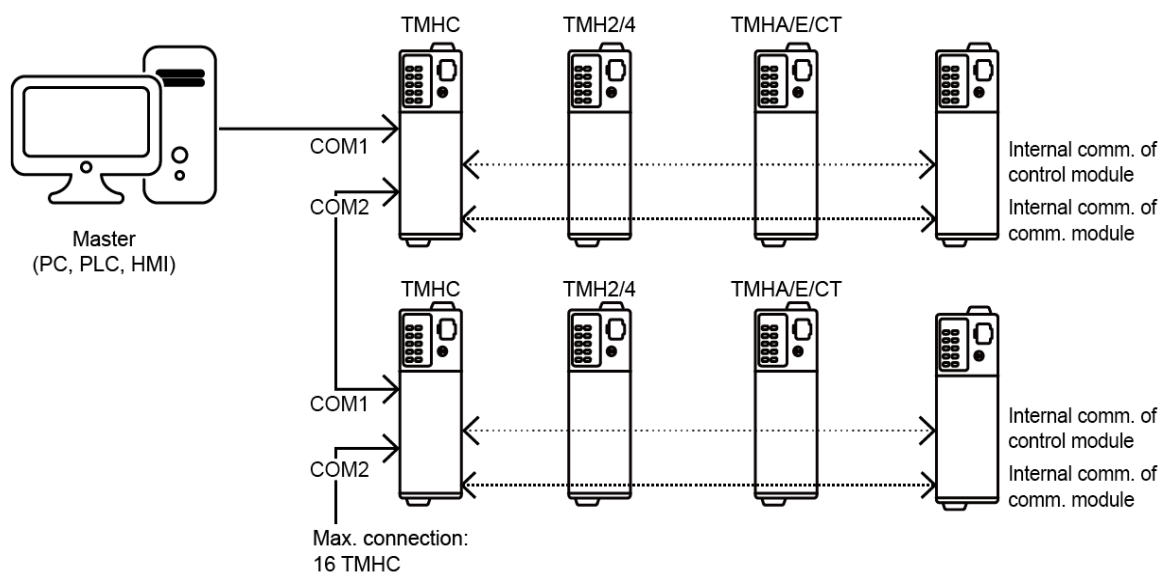

※ Maximum connection is varied by module specification.

**Note**

- When using TMHC, in case connecting only TMHC to Master (PC, PLC, etc.), unit address of TMHC and TMH2/4 Series can be duplicated. However, in case connecting both TMHC and TMH2/4 Series control module to Master, unit address must not be duplicated. (If the TMHC and TMH modules communicate with Master at the same time, a communication error may occur.)
- Connect terminating resistance when noise cause communication error. Use suitable value for your application.

7 Communication TMH2/4 TMHA TMHE TMHCT TMHC

This feature is used for the upper level systems (PC, PLC, etc.) to set the controller's parameters and to monitor the controller. It can also be used for external devices.

In case of TMHC, set COM1/2. (communication cable is recommended to use twisted pair wire for RS485 communication.)

▪ Interface

Protocol	TMH2/4/ TMHA/TMHE/ TMHCT/TMHC		Modbus RTU
	TMHC	-22LE	Modbus RTU, PLC ladderless comm.
		-22EE	Modbus TCP
Connection method	TMH2/4/ TMHA/TMHE/ TMHCT/		RS485
	TMHC	-22LE	RS485, RS422
		-22EE	Ethernet (10/100BaseT)
Maximum connection	TMH2/4		32 units (address: 01 to 32) (in case connecting TMHC module: 16 units (address: 01 to 16))
	TMHA/TMHE/TMHCT		Each module 16 units
	TMHC		16 control modules and 16 option modules per 1 TMHC module
Synchronization type			Asynchronous
Communication method			Two-wire half duplex
Communication effective range			Max. 800m
Communication speed			4800, 9600 (default), 19200, 38400, 115200 bps / 10/100 Mbps (Ethernet)
Response time			5 to 99ms (default: 20ms)
Start bit			1-bit (fixed)
Data bit			8-bit (fixed)
Parity bit			None (default), Odd, Even
Stop bit			1bit, 2bit (default)



Note

It is required to reset controller's POWER (Power OFF -> Power ON) after changing the setting value related to communication interface.

7.1 Common

Common communication configuration for TMH Series.

Before configuring PLC ladderless and Ethernet communication modules, refer to '7.2 PLC ladderless module [TMHC-22LE], 7.3 Ethernet module [TMHC-22EE]' additionally because their parameter settings and functions are different from the others.

7.1.1 Unit address

You can assign a unique address to each device.

In case of TMH2/4, users can set a unit address using both SW1 (unit address setting switch) and SW2 (communication group change switch).

Module \ SW																	
		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
TMH2/4	 +0	16	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
	 +16	32	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
TMHA		48	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
TMHE		64	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
TMHCT		80	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
TMHC		16	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15




Note

- Each module should have an individual address. If there is duplicated address, the monitoring of the modules is not available and total communication speed may be slow down.
- When using TMHC, in case connecting only TMHC to Master (PC, PLC, etc.), the unit address of TMHC and TMH2/4 Series control module can be duplicated. However, in case connecting both TMHC and TMH2/4 Series control module to Master, unit address must not be duplicated. (If the TMHC and TMH modules communicate with master at the same time, a communication error may occur.)


7.1.2 Channel allocation

- Channel numbering example for control module (TMH2/4)

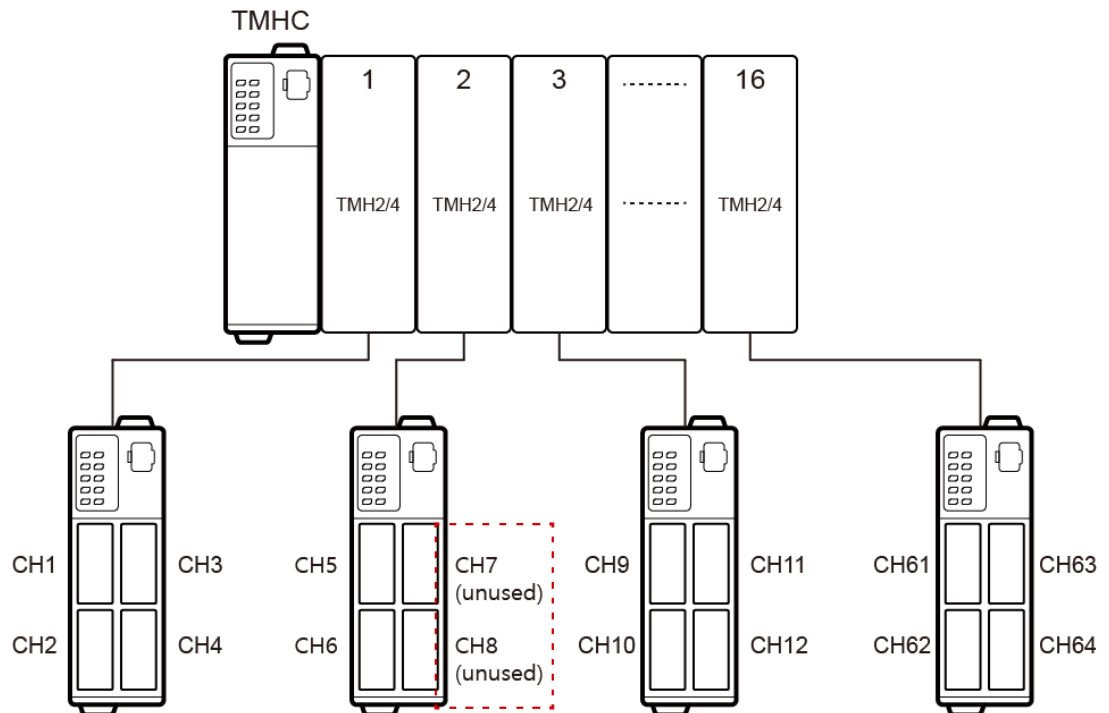


- Although connect 2 channel module(TMHA) with the unused channel (CH7, CH8) in the middle, allocate 4 channel to TMHC. So, the next channel of module starts 4n+1 channel (CH9).
- When using TMHC, only 01 to 16 address are available for TMH2/4.


- Channel numbering example for analog input/output module (TMHA)

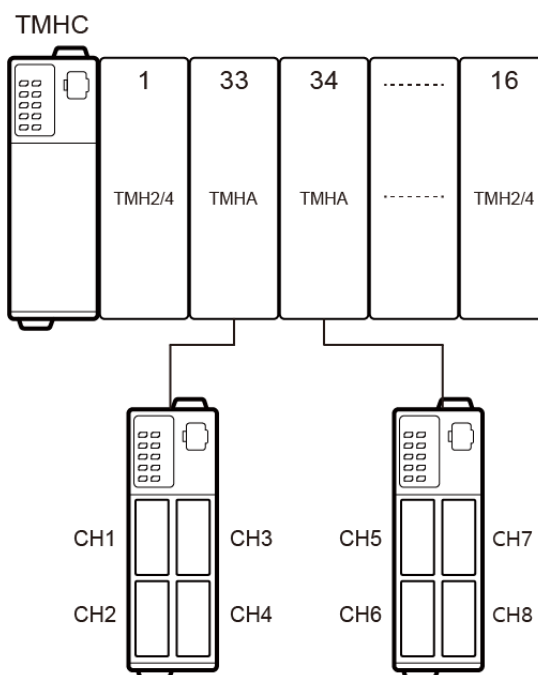

▪ Channel numbering example for digital input/output module (TMHE)

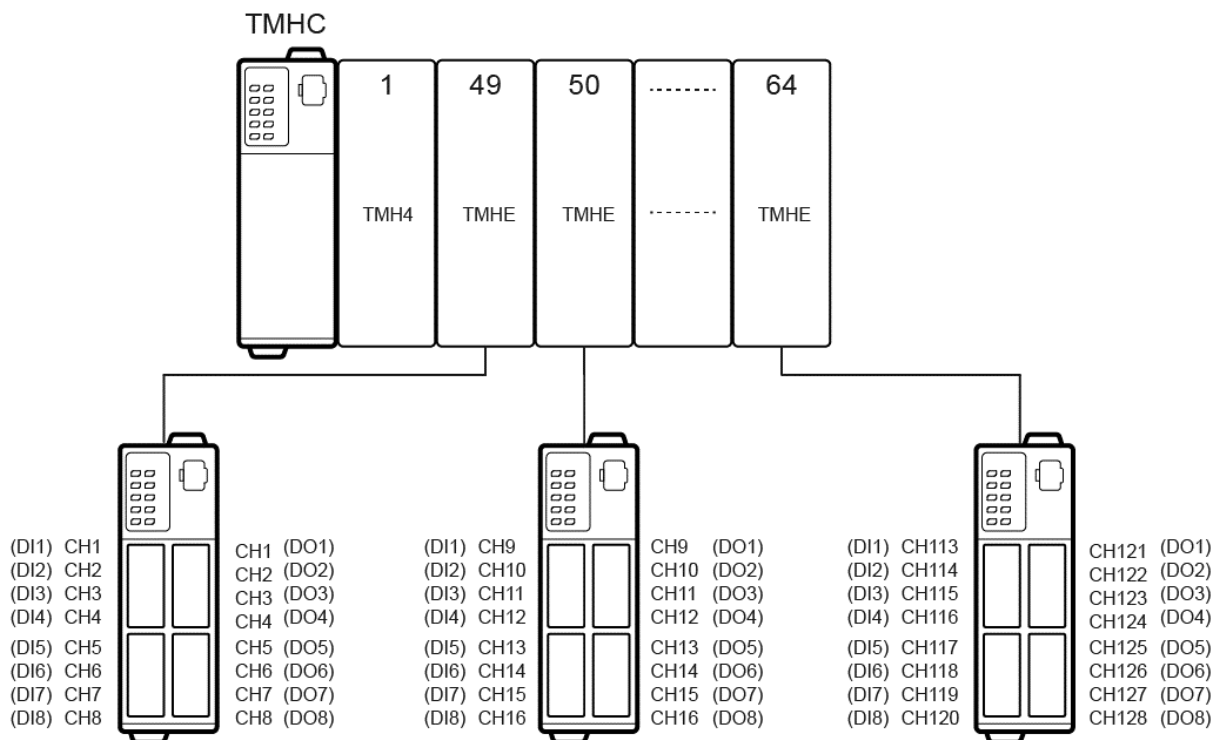

▪ Channel numbering example for CT input module (TMHCT)

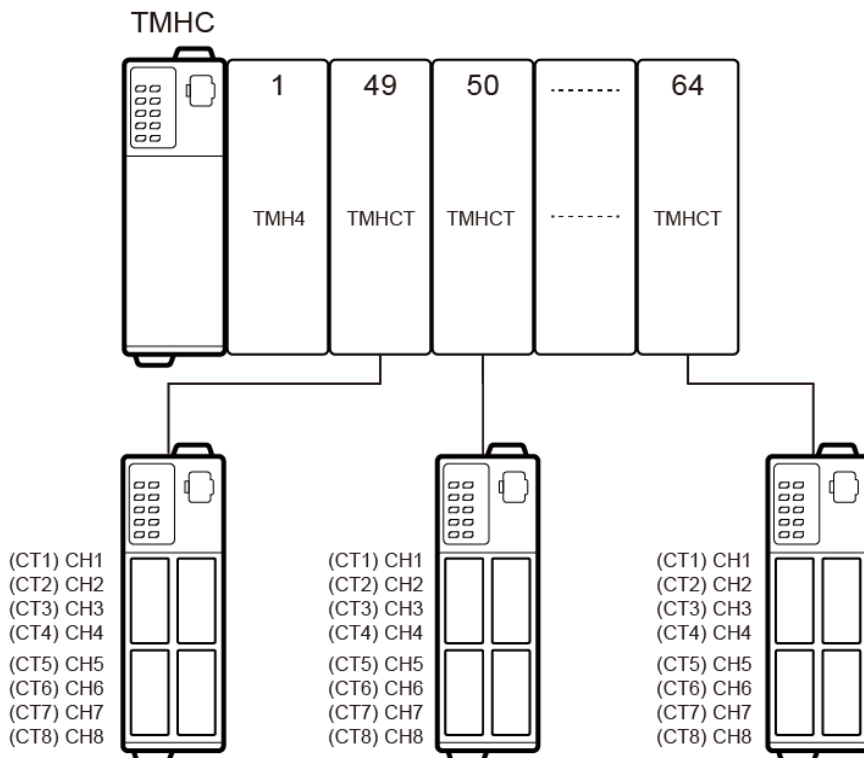

7.1.3 Communication speed

Set the speed of data transmission.

Setting group	Parameter	Set range	Factory default	Unit
Common	Bit Per Second	0: 4800, 1: 9600, 2: 19200, 3: 38400, 4: 115200	1: 9600	bps



Note

- When supplying power to the module, the dedicated indicator for set communication speed flashes for 5 sec in every sec. Refer to '1.4 Unit description and function'.
- It is required to reset controller's POWER (Power OFF -> Power ON) after changing communication speed (bps) via Power/Comm. connection terminal.
- One module communication is allowed for PC loader port. Communication speed is fixed to 9600 bps.
- Communication address must not be duplicated. If there is a duplicate unit address, error occur and the whole communication speed may be slowed down.

7.1.4 Communication parity bit

A parity bit is a data communication method that adds an additional bit to each character in transmitted data as an indicator used to verify data loss and corruption. This parameter is used to enable or disable the parity bit option.

Setting group	Parameter	Set range	Factory default	Unit
Common	Parity Bit	0: NONE, 1: EVEN, 2: ODD	0: NONE	-

Set value	Description
NONE	Disables parity bit.
EVEN	Sets the total bits with a signal value of 1 as even numbers.
ODD	Sets the total bits with a signal value of 1 as odd numbers.

7.1.5 Communication stop bit

You can set the number of bits to mark the end of a transmitted data string.

Setting group	Parameter	Set range	Factory default	Unit
Common	Stop Bit	0: 1 Bit, 1: 2 Bit	1: 2 Bit	-

Set value	Description
1 Bit	Sets end of the data string to 1 bit.
2 Bit	Sets end of the data string to 2 bit.

7.1.6 Communication response waiting time

Set a standby time to mitigate communication errors when communicating with a slow master device (PC, PLC, etc.). Once a standby time is set, the controller will respond after the defined standby time has elapsed.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting	Response Waiting Time	5 to 99	20	ms



Note

Shorter standby times can cause communication errors in the master device.

7.1.7 Enable/Disable communications writing

This feature can change parameter settings stored in the memory through communication with parent system (PC, PLC, etc.) in order to permit or prohibit writing.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting	Communication Write	ENABLE, DISABLE	ENABLE	-

Set value	Description
ENABLE	Parameter set/change enable via communication.
DISABLE	Prohibit parameter setting or modification via communication.




Note

Reading parameter settings is always permitted.

7.1.8 USB to Serial communication connection

Data can be transmitted via a USB-to-serial connection.

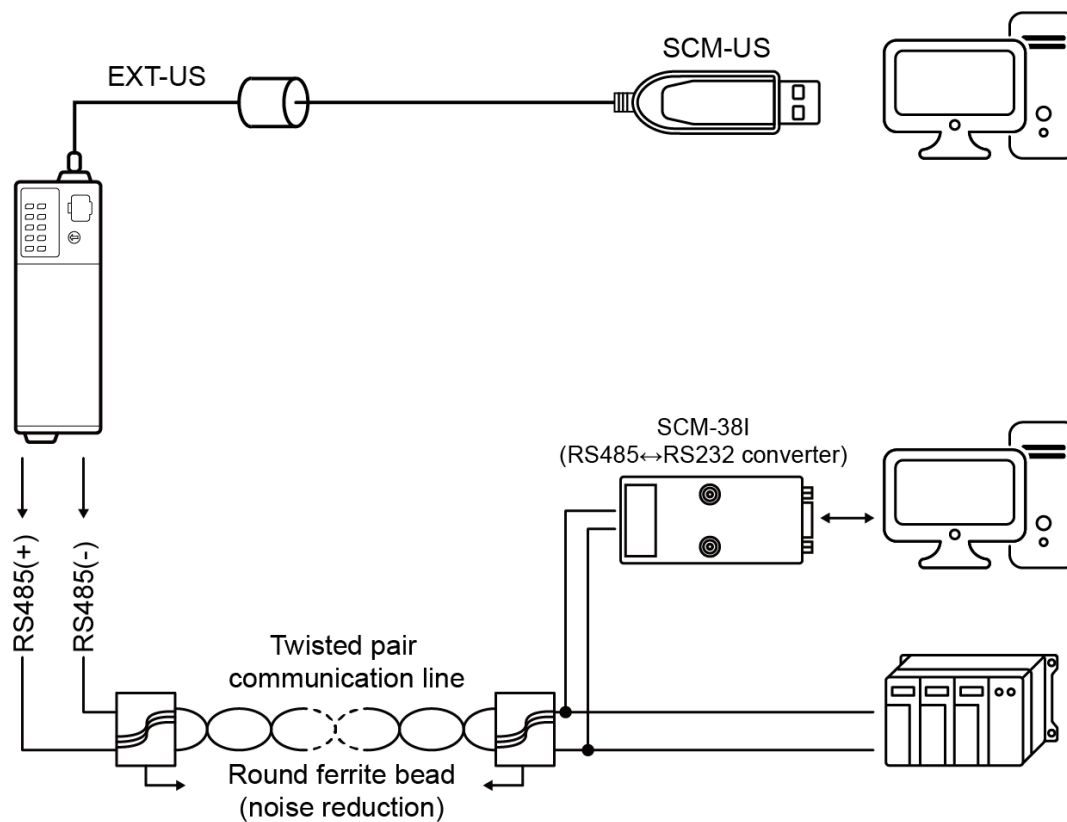

7.2 PLC ladderless module [TMHC-22LE]

PLC ladderless module can be connected to the upper level system (PC, PLC, etc) without using ladder or any program.

In case of COM1 of PLC ladderless module, you can set communication protocol only because it is only for communication with upper level system (PC, PLC, etc). To set communication protocol to COM1, refer to '7.2.3 Communication configuration'.

Configurations of COM2 of PLC ladderless module is same as other modules. To set parameters to COM2, refer to '7.1 Common'. (e.g. Bit Per Second -> Bit Per Second2, Parity Bit -> Parity Bit2)

7.2.1 Initial setting

Before using PLC ladderless communication, configure following sequence completely.

If start communication without initial setting, a communication error may occur because each parameter of TMH is forced to set to the value (0) from PLC register.

▪ Initial setting

Seq.	Item	Description
1	Address allocation	Connects up to 4 PLC ladderless module to 1 port of upper level system (PC, PLC, etc). By allocation without any duplicated address, communication error is prevented. Refer to '7.2.2 Unit address'.
2	Communication configuration	Configures series and details of upper level system (PC, PLC, etc). Refer to '7.2.3 Communication configuration'.
3	Communication check	Checks communication status between upper level system and PLC ladderless communication module via related registers. It is possible to verify setting value of previous sequence (1. Address allocation, 2. Communication configuration). Refer to '7.2.4 Communication check'.

7.2.2 Unit address

In order to avoid address duplication when using PLC ladderless communication, set up the unit address as shown in the table below.

(Max. up to 4 TMHC per 1 PLC communication port, 4 TMHC = 1 Group)

Group	Address		Master/Slave
Group 1	1	1	Master
	2	2	Slave
	3	3	Slave
	4	4	Slave
Group 2	5	5	Master
	6	6	Slave
	7	7	Slave
	8	8	Slave
Group 3	9	9	Master
	10	A	Slave
	11	B	Slave
	12	C	Slave
Group 4	13	D	Master
	14	E	Slave
	15	F	Slave
	16	0	Slave

- Each group must contain address No. 1, 5, 9, 13 because it is master address of communication transfer.
- Address of module to connect to TMHC must be set sequentially.
(When connecting 4 TMH4 to 1 TMHC, set address of each TMH4 to 1, 2, 3, 4.)
- Protocol of slave address connected to master must NOT be set MODBUS, but the PLC protocol.

7.2.3 Communication configuration

▪ Communication protocol

This feature is used to select protocol of COM1 which connect to upper level system (PC, PLC, etc.).

For more information about details of available PLC, refer to '7.2.6 Connectable PLC'.

Setting group	Parameter	Set value	Factory default	Unit
Communication setting Group2	Protocol 2	MODBUS / MASTERK / GLOFA / XGT / MELSEC1 / MELSEC2 / MELSEC3 / SYSMAC	MODBUS	-

Set value	Protocol name
MODBUS	Modbus RTU
MASTERK	LSIS (LS Industrial Systems) MASTER-K series special protocol
GLOFA	LSIS (LS Industrial Systems) GLOFA-GM series special protocol
XGT	LSIS (LS Industrial Systems) XGT/XGB series special protocol
MELSEC1	MITSUBISHI MELSEC series special protocol A-compatible 1C frame (format 4), AnA/AnUCPU common command (QR/QW) [AnA, AnU, QnA, Q, FX3U or FX3UC series] QnA-compatible 3C frame (format 4), command (0401/1401) [QnA or Q series] ZR register is only available
MELSEC2	MITSUBISHI MELSEC series special protocol A-compatible 1C frame (format 4), ACPU common command (WR/WW) [A, FX2N, FX2NC, FX3U or FX3UC series]
MELSEC3	MITSUBISHI MELSEC3 series special protocol
SYSMAC	OMRON SYSMAC series special protocol

※ When select Modbus RTU, using PLC ladderless communication is impossible.

▪ PLC address

This feature is used to set PLC address to communicate.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 3	Station number	MITSUBISHI MELSEC series, OMRON SYSMAC series LSIS (LS Industrial Systems) MASTER-K series LSIS (LS Industrial Systems) GLOFA-GM series LSIS (LS Industrial Systems) XGT/XGB series	0 to 31 0	-

▪ CPU Number

This feature is used to set the CPU number of PLC to communicate.

Setting group	Parameter	Set range		Factory default	Unit
Communication Setting Group 3	CPU number	MITSUBISHI MELSEC series	0 to 255	255	-
		YOKOGAWA FA-M3R	1 to 4	1	



Note

If set communication protocol (COM1) to SYSMAC (OMRON SYSMAC Series) / MASTERK (LSIS MASTER-K) / GLOFA (LSIS GLOFA-GM) / XGT (LSIS XGT/XGB) / OEMAX (OEMAX N70) / NAIS (NAIS(PANASONIC) FP),
this parameter is not enabled.

▪ PLC register type

This feature is used to set a register type of PLC ladderless communication.

Type and range of registers are different by using a type of CPU.

Refer to the manual of PLC to find available type and range of register.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 3	Register type	Refer to below table	Refer to below table	-

MITSUBISHI MELSEC series

Set value	Description
0	D register (Data register)
1	R register (File register)
2	W register (Link register)
3	ZR register (only available when R register exceeds address No. 32767, serial number access format register) “QnA-compatible 3C frame (format 4)” available only.

OMRON SYSMAC series

Set value	Description
0	DM register (Data memory)
1 to 13	EM register (Extended data memory) Assign bank No. (bank No.+10.)
14	EM register (Extended data memory) assign bank No.

LSIS (LS Industrial Systems) MASTER-K	
Set value	Description
0	D register (Data register)

LSIS (LS Industrial Systems) GLOFA-GM	
Set value	Description
0	MW register (Data register)

LSIS (LS Industrial Systems) XGT/XGB	
Set value	Description
0	D register (Data register)
1	R register (File register)

▪ **Register start number**

This feature is used to set register start number for PLC ladderless communication.

Type and range of registers are different by using a type of CPU.

Refer to the manual of PLC to find available type and range of register.

Setting group	Parameter	Set range	Factor y default	Unit
Communi- cation Setting Group 3	Register start number_H	MITSUBISHI MELSEC series QnA-compatible 3C frame (format 4), (Configure if ZR register exceed 65535)	0 to 15 0	-
	Register start number_Low	MITSUBISHI MELSEC series [A-compatible 1C frame (format 4) ACPU common command (WR/WW)] OMRON SYSMAC series LSIS (LS Industrial Systems) MASTER-K series LSIS (LS Industrial Systems) GLOFA-GM series LSIS (LS Industrial Systems) XGT/XGB series Occur PLC read/write error if configure over 9999 (except W register)	0 to 9999 1000	-
		MITSUBISHI MELSEC series [A-compatible 1C frame (format 4) AnA/AnUCPU common command (QR/QW) QnA-compatible 3C frame (format 4) command (0401/1401)]	0 to 65535 1000	-

▪ Register bias

This feature is used to add specific value to register to avoid duplicated register address of the group.

Refer to the manual of PLC to find available type and range of register because type and range of registers are different by using a type of CPU.

- **Set value:** set specific value to add register address.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 3	Register bias	0 to 65535	2800	-

- **Register bias set:** select whether use register bias or not.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 3	Register bias Set	0: OFF / 1: ON	1: ON	-

▪ PLC communication start time

This feature is used to set the time from power ON to writing data.

Start communication after 'Communication status' become '1'.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 3	PLC Communication start time	0, 8 to 255	10	sec



Note

If set "0", work minimum time of product specification.

7.2.4 Communication check

Details of parameters in each step, refer to the parameter page.

Communication check method

1st Power ON the PLC and TMHC.

When power ON, TMHC starts collecting data of connected slave modules and reads data from PLC after “[PLC communication start time]”.

When collecting data is completed, writes communication data of TMH monitoring group to PLC, “[Communication status]” parameter becomes “1”, and PLC ladderless communication is available.

2nd Set “[Setting Group Read]” parameter bit to “1”.

When set the bit to “1”, TMHC writes communication data to PLC. After data writing is completed, “[Setting Group Read completed]” parameter bit become “1”.

3rd Check a value of “[Setting Group Read]” parameter bit is “0”.

Communication check between PLC and TMHC is completed.

▪ Communication status

Make PLC ladderless communication available by collecting primitive data of connected modules.

Setting group	Parameter	Set range	Factory default	Unit
-	Communication Status	0: OFF / 1:ON	-	-

▪ Communication flag

This feature is for checking communication status which displays 0 and 1 periodically per each communication period. If there is a communication problem, fixed on a specific value.

Setting group	Parameter	Set range	Factory default	Unit
-	Communication Flag	0: OFF / 1:ON	-	-



Note

Communication period increases proportionally to quantity of communication data.

▪ TMHC recognition flag

This feature is used to display the status of TMHC connection.

Slave TMHC can check its own status.

Setting group	Parameter		Set range	Factory default	Unit
-	TMH recognition flag	Master TMHC	0: OFF / 1:ON	0: OFF	bit
		Slave TMHC 1	0: OFF / 1:ON	0: OFF	
		Slave TMHC 2	0: OFF / 1:ON	0: OFF	
		Slave TMHC 3	0: OFF / 1:ON	0: OFF	

▪ Connected modules check

This feature is used to check the number of connected modules to TMHC.

Setting group	Parameter	Set range	Factory default	Unit
-	Connected Modules	0 to 31	0	-

▪ Communication state check

This feature shows results of reading/writing parameter setting group between PLC and TMHC.

Setting group	Parameter		Set range	Factory default	Unit
-	Set Communication state	Setting Group Read/Write error	0: OFF / 1:ON	0: OFF	Bit
		Setting Group Write completed	0: OFF / 1:ON	0: OFF	
		Setting Group Read completed	0: OFF / 1:ON	0: OFF	

• Bit data organization

Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
-	-	-	-	-	-	Setting Group Read completed	Setting Group Write completed	Set error
						0 or 1	0 or 1	0 or 1
1 byte								

▪ PLC ladderless communication error code

This feature shows the status of PLC ladderless communication error.

Setting group	Parameter		Set range	Factory default	Unit
-	PLC error code	PLC register R/W error	0: OFF / 1:ON	0: OFF	-
		Slave comm timeout	0: OFF / 1:ON	0: OFF	-
		Internal comm timeout	0: OFF / 1:ON	0: OFF	-
		Master comm timeout	0: OFF / 1:ON	0: OFF	-

- Timeout: System or module does not communicate over 3 seconds.
- PLC register R/W error: When reading/writing to PLC register is impossible, change ON. If reading/writing is possible over 3 seconds consistently, change OFF.
- Slave comm timeout: In case of using over 2 TMHC and timeout occurs on slave TMH, set ON.
When slave TMH detect timeout, stop signal transmission and change phase to ready mode.
If master TMH begin transmission, continue signal transmission.
- Internal comm timeout: When an internal communication error occurs or address of module is not connected in regular sequence, change ON.
- Master comm timeout: When a communication error occurs between a master module of group and PLC, change ON.

▪ Request data transmission

This feature is used to transfer setting value of parameter setting group between PLC and TMHC.

Setting group	Parameter		Set range	Factory default	Unit
-	Request	Setting Group Write	0: OFF / 1:ON	0: OFF	Bit
		Setting Group Read	0: OFF / 1:ON	0: OFF	

• Bit data organization

Bit 8	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
-	-	-	-	-	-		Setting Group Read	Setting Group Write
						0 or 1	0 or 1	0 or 1
1 byte								

- Setting Group Write (PLC → TMHC)
This order is used to apply the parameter setting value of PLC register to TMH.
When set “[Setting Group Write]” parameter bit to “1”, all data of PLC parameter setting group transfer to TMH.
- PLC communication method (PLC → TMHC)
 - ① Set the data on PLC register which will transfer to TMHC.
 - ② Set “[Setting Group Write]” parameter bit to “1” on TMHC.
And then, TMHC starts reading parameter of PLC register.
When reading is finish, “[Setting Group Write completed]” parameter bit change to “1”.
 - ③ Check “[Setting Group Write]” parameter bit is “0”.
Writing the data to PLC is done.
- Setting Group Read (TMHC → PLC)
This order is used to read the parameter setting value of TMH.
When set “Setting Group Read” parameter bit to “1”, transfer setting value of TMH parameter setting group to PLC.
- PLC communication method (TMH → PLC)
 - ① Set the data to TMHC register.
 - ② Set “[Setting Group Read]” bit to “1”.
And then, TMHC starts writings parameter setting the value to PLC register.
When writing is finish, “[Setting Group Read completed]” parameter bit change to “1”.
 - ③ Check “[Setting Group Read]” parameter bit is “0”.
Reading the data from PLC is done.

**Note**

During data transmission, writing data in the monitoring group is paused. If it finishes successfully, changes “communication state” parameter bit to “1” and change “request data transmission” to “0”. If any error occurs, change one of “PLC ladderless communication error code” parameter to “1”.

7.2.5 All run/stop, all autotuning execute

This feature is used to order run/stop and execution autotuning to all control modules connected to TMHC.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting	All Run/Stop	0: All Run, 1: All Stop, 2: Select	2: Select	-
	All autotuning execute	0: All Stop, 1: All execution, 2: Select	2: Select	-

7.2.6 Connectable PLC

- **MITSUBISHI MELSEC Series**

- **Connectable models**

PLC module	Models
Communication Module	AJ71UC24, A1SJ71UC24-R4, A1SJ71C24-R4
	AJ71QC24N, A1SJ71QC24N, QJ71C24
	FX2NC-485ADP, FX0N-485ADP, FX3U-485ADP
	FX2N-485DB, FX3U-485-DB
	Q Series (protocol: MELSEC 3)

- **Communication specification**

Category	Descriptions
Interface	RS-485, RS-422A
Synchronization type	Start/Stop Synchronization
Data bit organization	Start bit: 1bit Data bit: 8bit Parity bit: None Stop bit: 2bit
Protocol	MITSUBISHI MELSEC series PLC Protocol Protocol Type: 4, 7 (MELSEC 3) Use CheckSum

- **OMRON SYSMAC Series**

- **Connectable models**

PLC Module	Models
CPU unit	SYSMAC CS1 series CPU SYSMAC CJ1 series CPU
Communication Module	CS1W-SCB41/ CS1W-SCU41 (SYSMAC CS1 series) C200H-LK202-V1, C500-LK203, C120-LK202-V1 (SYSMAC C series)

- **Communication specification**

Category	Descriptions
Interface	RS-485, RS-422A
Synchronization type	Start/Stop Synchronization
Data bit organization	Start bit: 1bit Data bit: 8bit Parity bit: None Stop bit: 1bit
Protocol	OMRON SYSMAC series PLC Protocol Use CheckSum

- **LSIS MASTER-K Series**

- **Connectable models**

PLC Module	Models
CPU unit	K1000S, K300S, K200S, K120S, K80S
Communication Module	G3L-CUEA, G3L-CUEB, G3L-CUEC

- **Communication specification**

Category	Descriptions
Interface	RS-485, RS-422A
Synchronization type	Start/Stop Synchronization
Data bit organization	Start bit: 1bit Data bit: 8bit Parity bit: None Stop bit: 1bit
Protocol	LS MASTER-K series PLC Protocol Use CheckSum

- **LSIS GLOFA Series**

- **Connectable models**

PLC Module	Models
CPU unit	GLOFA-GM4/6/7U
Communication module	G3L-CUEA, G4L-CUEA, G6L-CUEB, G6L-CUEC, G7L-CUEB, G7L-CUEC

- **Communication specification**

Category	Descriptions
Interface	RS-485, RS-422A
Synchronization type	Start/Stop Synchronization
Data bit organization	Start bit: 1bit Data bit: 8bit Parity bit: None Stop bit: 1bit
Protocol	LS GLOPA-GM series PLC Protocol Use CheckSum

- **LSIS XGT-XGB Series**

- **Connectable models**

PLC Module	Models
CPU unit	XGK-CPUS, XBM, XBC
Communication module	XGL-CH2A, XGL-C42A, CNET


- **Communication specification**

Category	Descriptions
Interface	RS-485, RS-422A
Synchronization type	Start/Stop Synchronization
Data bit organization	Start bit: 1bit Data bit: 8bit Parity bit: None Stop bit: 1bit
Protocol	LS XGT/XGB series PLC Protocol Use CheckSum

7.2.7 External DIP Switch

Communication speed, data bit, PLC connection and protocol can be set via internal dip switch. (factory default: All OFF (set via communication parameter))

During PLC ladderless communication, setting values are applied to COM1 port only.

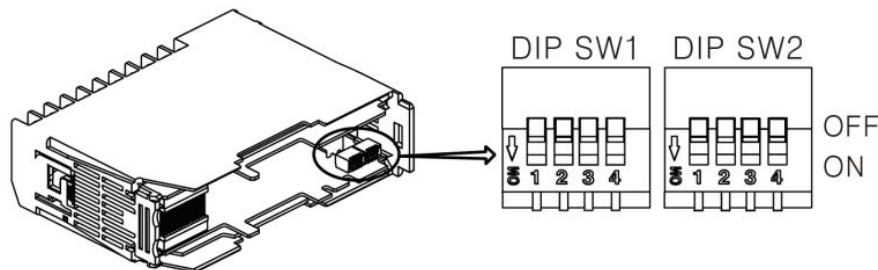

▪ Communication speed

No. 1	No. 2	Communication speed
OFF	OFF	Set via communication parameter
OFF	ON	19200
ON	OFF	38400
ON	ON	115200

▪ Data bit configuration

No. 3	No. 4	Data bit
OFF	OFF	Set via communication parameter
OFF	ON	Stop bit: 1bit
ON	OFF	Stop bit: 2bit
ON	ON	reserved

▪ Protocol

No. 5	No. 6	No. 7	No. 8	Protocol
OFF	OFF	OFF	OFF	Set via communication parameter
OFF	OFF	OFF	ON	Modbus RTU protocol
OFF	OFF	ON	OFF	LSIS MASTER-K series special protocol
OFF	OFF	ON	ON	LSIS GLOFA-GM series special protocol
OFF	ON	OFF	OFF	LSIS XGT/XGB series special protocol
OFF	ON	OFF	ON	MITSUBISHI MELSEC series special protocol Q/QnACPU common command (1401/0401)
OFF	ON	ON	OFF	MITSUBISHI MELSEC series special protocol ACPU common command (WW/WR)
OFF	ON	ON	ON	OMRON SYSMAC series special protocol
ON	OFF	OFF	OFF	MITSUBISHI MELSEC3 series special protocol

7.3 Ethernet module [TMHC-22EE]

The module manages and transmits the data of TMHC series remotely via Modbus TCP/IP interface.

It is possible to manage data by using static IP for each device or automatically assigned IP via DHCP function.

7.3.1 Enable/Disable DHCP function

If DHCP function is enable, IP Address, Subnet Mask and Default Gateway for Modbus TCP communication are set automatically.

Use static IP when using Modbus TCP communication over the LAN (local area network) such as remote control via the internet.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 1	DHCP	0:DISABLE, 1: ENABLE	0:DISABLE	-



Note

If DHCP function is enable, it is not possible change IP address, subnet mask and default gateway but check only, IP address is changed periodically.

7.3.2 IP Address

This feature is used to assign unique 32bit IP address recognize a device on the network.

If two or more devices are set same IP address, data communication is impossible because of IP crash.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 1	IP Address	0.0.0.0 to 255.255.255.255	210.124.112.251	-

7.3.3 Subnet mask

This feature is 32bit address to divide the IP address into network and host address.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 1	Subnet mask	0.0.0.0 to 255.255.255.255	255.255.255.0	-

7.3.4 Default gateway

This feature is IP address to connect to IP router directly.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 1	Default Gateway	0.0.0.0 to 255.255.255.255	210.124.112.1	-

7.3.5 Enable/Disable Ethernet communication write

This feature is used to allow writing parameter on the memory via communication with upper level system (PC, PLC etc).

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 1	Ethernet Com Write	ENABLE, DISABLE	ENABLE	-



Note

Reading a value of parameter is possible regardless of Ethernet com write setting.

7.3.6 Modbus TCP port

This feature is used to set the port number for Modbus TCP communication.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 1	MODBUS TCP Port Number	0 to 65535	502	-

7.3.7 Ethernet communication monitoring time

If there is no communication data for the set time by monitoring the communication status, the port is closed to be able to reconnect. If set to '0', reconnection is not possible because TMHC maintains the port until the 'Close' command is received.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting Group 4	Ethernet Com Monitoring Time Set	0 to 3600	0	Sec

8 Parameter Settings and Functions

8.1 Input

8.1.1 Input type and range TMH2/4 TMHA

Input type			Decimal point	Display	Temperature range(°C)	Temperature range (°F)
Thermocouple	K(CA)		1	K(CA).H	-200 to 1350	-328 to 2463
			0.1	K(CA).L	-200.0 to 1350.0	-328.0 to 2463.0
	J(IC)		1	J(IC).H	-200 to 800	-328 to 1472
			0.1	J(IC).L	-200.0 to 800.0	-328.0 to 1472.0
	E(CR)		1	E(CR).H	-200 to 800	-328 to 1472
			0.1	E(CR).L	-200.0 to 800.0	-328.0 to 1472.0
	T(CC)		1	T(CC).H	-200 to 400	-328 to 752
			0.1	T(CC).L	-200.0 to 400.0	-328.0 to 752.0
	B(PR)		1	B(PR)	0 to 1800	32 to 3272
	R(PR)		1	R(PR)	0 to 1750	32 to 3182
	S(PR)		1	S(PR)	0 to 1750	32 to 3182
	N(NN)		1	N(NN)	-200 to 1300	-328 to 2372
	C(TT)		1	C(TT)	0 to 2300	32 to 4172
	G(TT)		1	G(TT)	0 to 2300	32 to 4172
	L(IC)		1	L(IC).H	-200 to 900	-328 to 1652
			0.1	L(IC).L	-200.0 to 900.0	-328.0 to 1652.0
	U(CC)		1	U(CC).H	-200 to 400	-328 to 752
			0.1	U(CC).L	-200.0 to 400.0	-328.0 to 752.0
		Platinel II		1	PLII	0 to 1390
RTD	Cu 50Ω		0.1	CU 50	-200.0 to 200.0	-200.0 to 392.0
	Cu 100Ω		0.1	CU 100	-200.0 to 200.0	-200.0 to 392.0
	JIS standard	JPt 100Ω	1	JPt100.H	-200 to 650	-328 to 1202
		JPt 100Ω	0.1	JPt100.L	-200.0 to 650.0	-328.0 to 1202.0
	DIN	DPt 50Ω	0.1	DPt50.L	-200.0 to 600.0	-328.0 to 1202.0

Analog	standard	DPT 100Ω	1	DPT100.H	-200 to 650	-328 to 1202
		DPT 100Ω	0.1	DPT100.L	-200.0 to 650.0	-328.0 to 1202.0
	Nickel 120Ω		1	NI12	-80 to 260	-112 to 500
	Voltage	0 to 10V	-	AV1	0 to 10V	
		0 to 5V	-	AV2	0 to 5V	
		1 to 5V	-	AV3	1 to 5V	
		0 to 100mV	-	AMV1	0 to 100mV	
	Current	0 to 20mA	-	AMA1	0 to 20mA	
		4 to 20mA	-	AMA2	4 to 20mA	

- Temperature sensors convert subject temperature to electrical signals for the temperature controller, allowing it to control output.
- In case of analog input, even though control target is not temperature (humidity, flow, pressure, level, etc), measured data (analog signal) is input and measuring and controlling are available. When analog signal of control target is out of the operational range, use the additional signal converter to converting.
- SV (set value) can only be set within the input range.

8.1.2 Input type TMH2/4 TMHA

This product supports multiple input types, making it possible for the user to choose from thermocouples, resistors, and analog voltage/current. Different sensors can be designated to each channel.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Input Type	Refer to 8.1.1 Input type and range TMH2/4 TMHA	0: K(CA).H	-



Note

- When changing input type settings and input type is temperature sensor, the high/low-limit values of SV are automatically changed to max./min. values of operational temperature range of the modified input type.
When changing input type settings and input type is analog, analog high/low-limit input value are automatically changed to max./min. values of operational range of the modified input type. The high/low-limit values of SV are automatically changed to max./min. values of the modified input type.

- When input type changing is completed, control operation is paused and it returns automatically. The reset parameters are as below.

- TMH2/4

Multi SV No.	Alarm output high/low-limit set value	SV-0 to 3
Heating&Cooling control, dead band	Heating/Cooling, hysteresis	Heating/Cooling, offset
Ramp up/down change rate	Ramp time unit	Analog high/low-limit input value
Analog scale value decimal point position	Analog scale high/low-limit value	Input correction
SV high/low-limit value	Root function low cut point	LBA monitoring time/detection band

- TMHA

Analog high/low-limit input value	Analog scale value decimal point position	Analog scale high/low-limit value
Input correction	Analog transmission output value	Transmission output high/low-limit value

- When input error occurs, display/output is as below.

Item	Measured value < Operational range	Operational range < Measured value	When input is disconnected,
DAQMaster and external devices	LLLL	HHHH	OPEN
Communication output (decimal)	-30000	30000	31000
Indicators	The dedicated channel's status indicators (red LED) flashes in 0.5 sec.		

8.1.3 Sensor temperature unit TMH2/4 TMHA

In case of temperature sensor input, temperature unit is available to set.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Unit	0: °C, 1: °F	0: °C	-



Note

When changing temperature unit settings, the reset parameters are same as the changing input type setting's.

When input type is analog, this parameter is not changed.

8.1.4 Analog high/low-limit input value TMH2/4 TMHA

In case of analog input, it is available to set the operational high/low-limit range within the input type and range ('8.1.1 Input type and range' TMH2/4 TMHA).

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Low-limit Input Value	Min. operational range to high-limit input value (High-limit input value settings) – F.S. 10%	Refer to '8.1.1 Input type and range' TMH2/4 TMHA	Digit
	High-limit Input Value	Low-limit input value (Low-limit input value settings) + F.S. 10% to Max. operational range		



Note

Analog high/low-limit input value does not display the decimal point.

High-limit scale value and low-limit scale value are not set the same values.

8.1.5 Analog scale value decimal point position TMH2/4 TMHA

In case of analog input, decimal point of PV, SV, etc. is available to set within the high/low-limit scale.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Decimal Point	0:0, 1:0.0,	0:0	-

Setting group	Parameter	Set range	Factory default	Unit
		2:0.00, 3:0.000		

8.1.6 Analog scale high/low-limit value TMH2/4 TMHA




In case of analog input, display scale for high/low-limit input value is available to set.

Depending on the analog scale value decimal point position setting, the displayed value is different.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Low-limit Scale Value	-9999 to 9999	0	Digit
	High-limit Scale value		1000	




Ex.

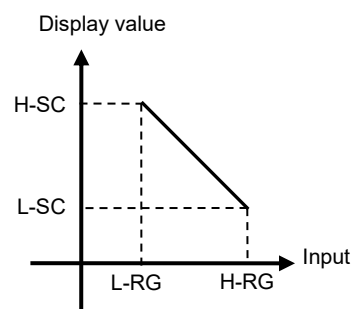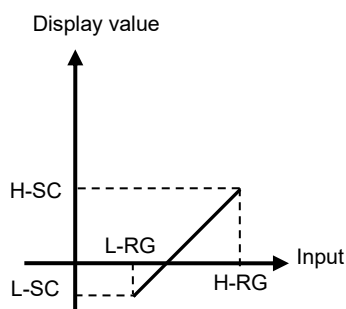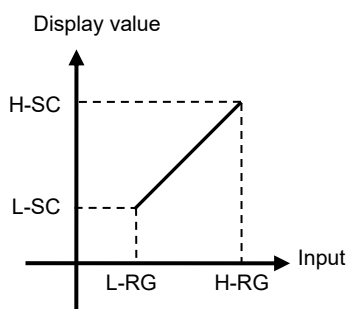

Note

For analog input, $\pm 5\%$ of the set high/low limit input value is extended. The analog output is also extended comparing input value. (For temperature sensor input, $\pm 5\%$ extension is applied within the temperature range.)

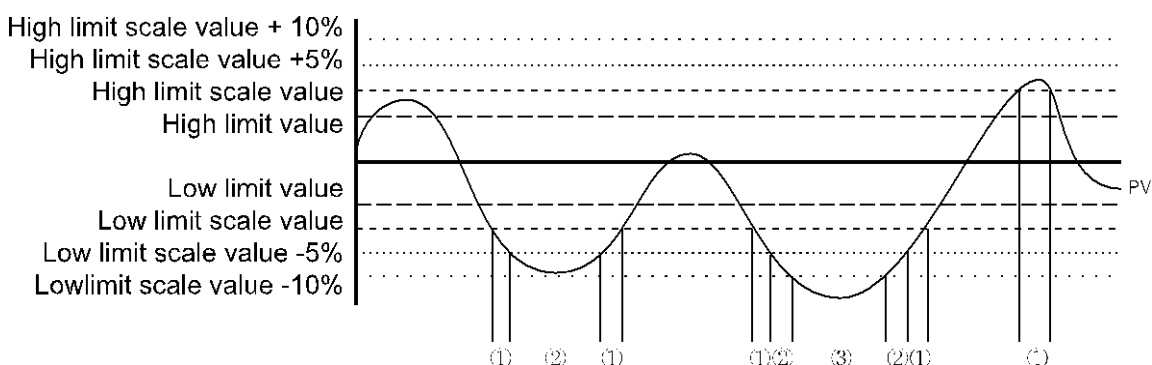

No	PV	Display
①	$\pm 5\%$ section	Flashes PV
②	± 5 to 10% section	Flashes HHHH or LLLL
③	Over $\pm 10\%$ section	Flashes OPEN


8.1.7 Analog input special function TMH2/4 TMHA

In case of analog input, it displays the applied measured value of the set special function.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Input Func	0: LINEAR, 1: ROOT, 2: SQUARE	0: LINEAR	-

▪ Linear

It applies low-limit scale and high-limit scale to low-limit input value and high-limit input value and displays this values.

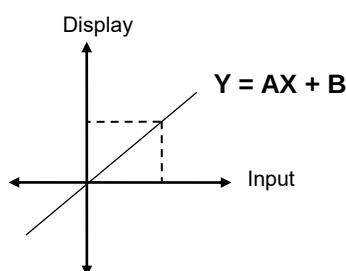

$$\text{Display value} = \frac{\text{Input value} - \text{Low - limit input value}}{\text{High - limit input value} - \text{Low - limit input value}} \times (\text{High - limit scale value} - \text{Low - limit scale value}) + \text{Low - limit scale value}$$



Ex.


In case of input type: 0-10V, low-limit input value: 0V, high-limit input value: 10V, low-limit scale: 0, high-limit scale: 1000, present input value is 2V and the display value is 200.

$$200 = \left\{ \frac{2 - 0}{10 - 0} \times (1000 - 0) \right\} + 0$$

▪ Root

In case of voltage, current (shunt) input, this mode is used when the input value is calculated by $\text{Root}(\sqrt{\quad})$ for the desired display value. Differential pressure signal of the differential pressure flow meter is calculated $\text{Root}(\sqrt{\quad})$ for the to-be-measured flux. This function is used to measure flux by input value.

When the differential pressure flow meter is calculated and output as $\text{Root}(\sqrt{\quad})$ value, please select the Linear function.

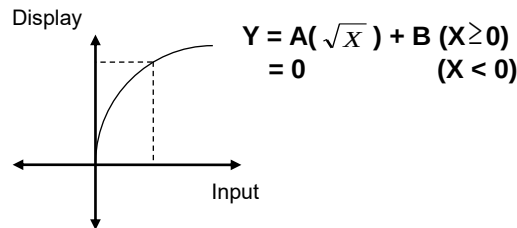

$$\text{Display value} = \sqrt{\frac{\text{Input value} - \text{Low - limit input value}}{\text{High - limit input value} - \text{Low - limit input value}}} \times (\text{High - limit scale value} - \text{Low - limit scale value}) + \text{Low - limit scale value}$$



Ex.


In case of input type: 0-10V, low-limit input value: 0V, high-limit input value: 10V, low-limit scale: 0, high-limit scale: 1000, present input value is 2V and the display value is 447.

$$447 = \left\{ \sqrt{\frac{2 - 0}{10 - 0}} \times (1000 - 0) \right\} + 0$$

▪ Square

In case of voltage, current (shunt) input, this mode is used when the input value is calculated by the square for the desired display value.

The reverse of Root, flux signal is calculated by the square for differential pressure signal.

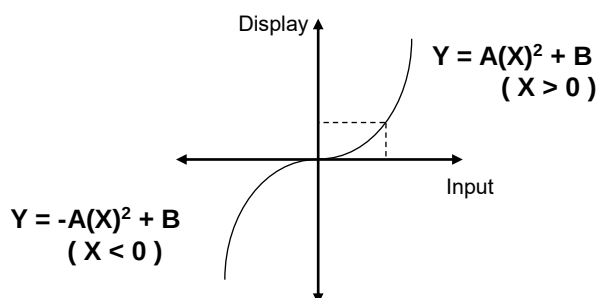

$$\text{Display value} = \left(\frac{\text{input value} - \text{low - limit input value}}{\text{high - limit input value} - \text{low - limit input value}} \right)^2 \times (\text{high - limit scale} - \text{low - limit scale}) + \text{low - limit scale}$$

**Ex.**


In case of input type: 0-10V, low-limit input value: 0V, high-limit input value: 10V,
low-limit scale: 0, high-limit scale: 1000, present input value is 2V and the display value is 40.

$$40 = \left\{ \left(\frac{2 - 0}{10 - 0} \right)^2 \times (1000 - 0) \right\} + 0$$

▪ Root function low cut point

When analog input special function is Root, Root function is available to set low cut point.

In case of square root calculation such as flow control, and low input value, the calculation result value may be different. For reducing control error due to input variance, set the low cut point to cut out the lower input than the low cut point. (low cut is applied after square root calculation)

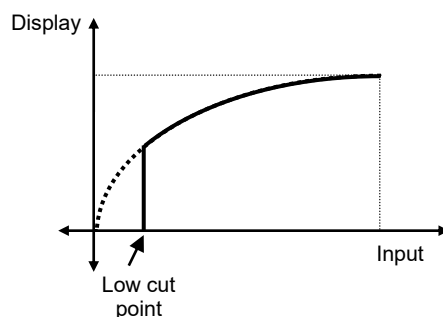

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Root Low Cut	-9999 to 9999	0	Digit

8.1.8 Input correction

TMH2/4

TMHA

This feature is used to compensate for input correction produced by thermocouples, RTDs, or analog input devices, NOT by the controller itself.

The Input correction function is mainly used when the sensor cannot be attached directly to controlled objects. It is also used to compensate for temperature variance between the sensor's installation point and the actual measuring point.

Setting group	Parameter	Set range		Factory default	Unit
Initial Setting	Input Bias	Temperature H, analog	-999 to 999	0	Temperature: °C/°F, Analog: Digit
		Temperature L	-9999 to 9999 (-999.9 to 999.9)		

**Ex.**

If the controller displays 78°C when the actual temperature is 80°C, set the input correction 2, in order to adjust the controller's display temperature to 80°C.

**Note**

- Make sure that an accurate temperature variance measurement is taken before set values of input correction. An inaccurate initial measurement can lead to greater variance.
- Many of today's temperature sensors are graded by their sensitivity. Since higher accuracy usually comes at a higher cost, most people tend to choose sensors with medium sensitivity. Measuring each sensor's sensitivity correction for input correction feature in order to ensure higher accuracy in temperature reading.
- When present temperature value (PV) is out of operational range of the input type after input correction, it outputs 30000 (HHHH), -30000 (LLLL) and DAQMaster and external devices displays 'HHHH' or 'LLLL'.

8.1.9**Input digital filter**

TMH2/4

TMHA

It is not possible to perform stable control if the present value (PV) fluctuates because of fast changes of the input signal. Using the Input digital Filter function can stabilize PV to realize more reliable control.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Digital Filter	1 to 1200 (0.1 to 120.0)	1 (0.1)	Sec

**Ex.**

If the input digital filter is set to 0.4 sec., digital filtering is applied to a sampling value collected over 0.4 sec. (400 ms).

**Note**


When the input digital filter is used, the present value (PV) can vary from the actual input value.

When the present value is not stable even though setting input digital filter as few second, remove the causes of the unstable signal. When input digital filter setting is too high and the present value is stable, it may cause system stability problem due to control with a long time.


8.1.10 SV high/low-limit value TMH2/4

You can limit the Set value (SV) range within the temperature range of the temperature sensor or analog input type (8.1.1 Input type and range TMH2/4 TMHA) in order to prevent the system from controlling with improper SV.

▪ Temperature sensor input

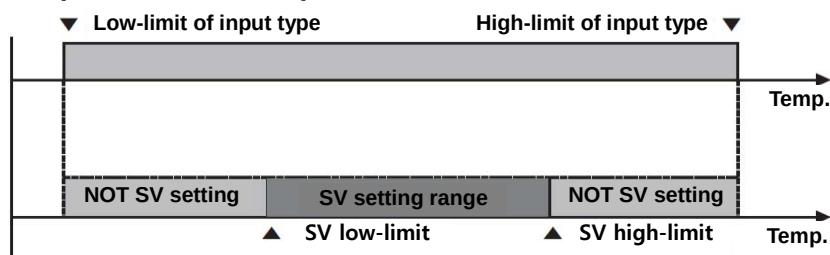

▪ Analog input

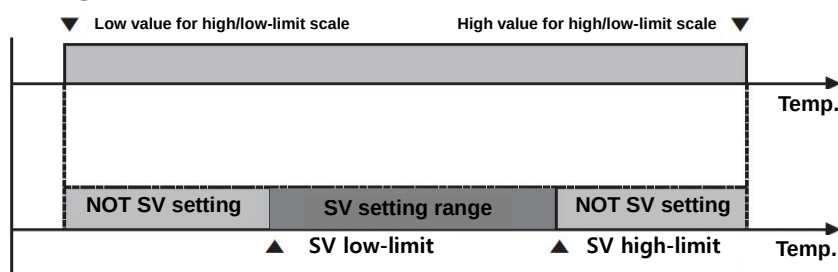

Setting group	Parameter	Set range		Factory default	Unit
Initial Setting Group	SV low limit	Temperature	Input low-limit value to SV high limit – 1-digit	-200	Temperature: °C/°F, Analog: %F.S
		Analog	Low-limit scale value to SV high limit – 1-digit		
	SV high limit	Temperature	SV low-limit – 1-digit to input high-limit value	1350	
		Analog	SV low-limit – 1-digit to high-limit scale value		



Note

- It is not available to set over/below value of max./min. value of each input type or high/low-limit value of analog input. The previous set value maintains.
- Set the SV within the SV low-limit value (SV Low Limit) to SV high-limit value (SV High Limit) range.
- It is not available to set as SV low-limit value (SV Low Limit) > SV high-limit value (SV High Limit)
- When changing input type as temperature sensor input, it changes as max./min. value of the changed input types automatically. When it as analog input, it changes as


high/low-limit scale value automatically.

When changing high/low-limit scale value of analog input, the lower value changes as SV low-limit value and the higher value changes as SV high-limit value.


8.1.11 Remote SV (RSV) TMH2/4

SV setting is available to set using PV or SV of the other module/channel not the direct setting of the module/channel.

Set the other module's (RSV Master) address, channel, and the target value (PV or SV).

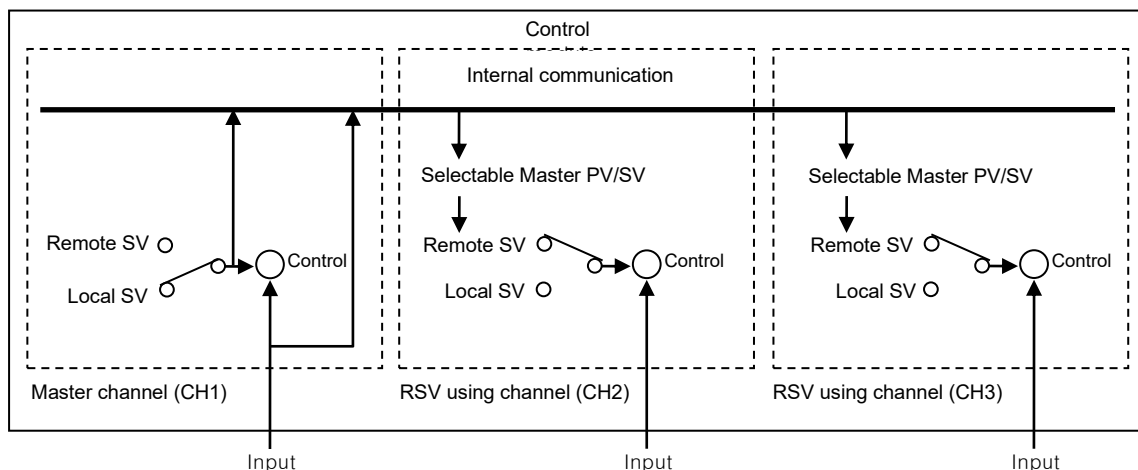

Ex.

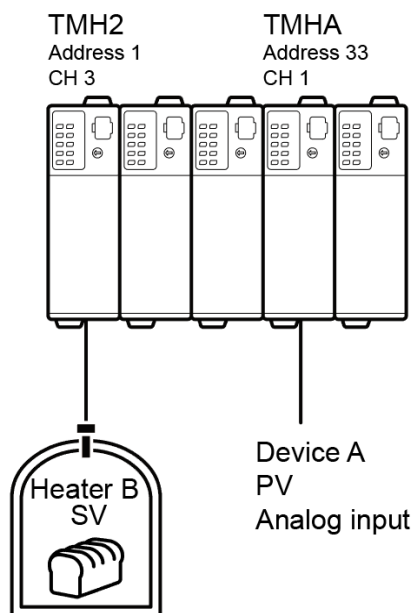

RSV function is available when PV of TMHA (address 33, channel 1) is used for SV of TMH2 (address 1, channel 3).

Set RSV Master setting of TMH2.

RSV Master address: 33, RSV Master channel: 1, RSV Master channel target: PV

**Note**

- When master channel and using channel's input type are temperature → analog or analog → temperature, the value is calculated by each input range of the input type. For example, when PV of Master channel is analog input 50.0 and using channel input type is TC K(CA), RSV of using channel is 575°C as 50% of input range of TC K(CA).
- When using remote SV function and auto-tuning starts, auto-tuning operates by the local SV not remote SV.
- When using remote SV function and remote SV is over SV high/low-limit value range, the SV is limited as SV high/low-limit value.

▪ RSV Master address

Set the module (RSV Master) address for using SV.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	RSV Target Address	0 to 48	0	-

Set the address by unit address switch setting of RSV Master module as below.

Module \ SW																	
		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
TMH4/2	+0 +16	16	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
	+0 +16	32	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
TMHA		48	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47

**Note**

When RSV Master module address and using address is same, set as '0'. (do not set as the using channel address.)

▪ RSV Master channel

Set the module (RSV Master) channel for using SV.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	RSV Target Ch	0: CH1, 1: CH2 2: CH3, 3: CH4	CH1:0, CH2: 1 CH3: 2, CH4: 3	-

▪ RSV Master channel target

Set the module (RSV Master) channel target value (PV or SV).

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	RSV Target	0: OFF, 1: PV, 2: SV	0: OFF	-





Note

- Set 0: OFF for not using remote SV (RSV) function.
- When RSV Master address is TMHA (analog input/output module) option module, 2: SV is not available to set.
- When RSV Master address is 0 (RSV Master module address and using channel address are same), and the using channel is same, 1: PV is not available to set.

▪ SV tracking

When remote SV (RSV) function turns OFF, the remote SV (RSV) is available to set and save as SV. When using this SV tracking function, the previous SV before RSV function is not used. (also saved to multi SV automatically)

If the difference between the previous SV before RSV function and the remote SV (RSV) is large, this function prevents radical change MV by SV changing.

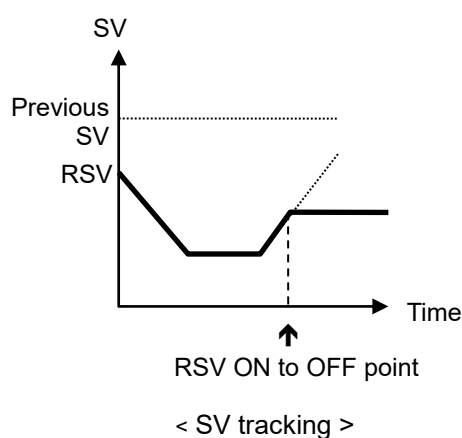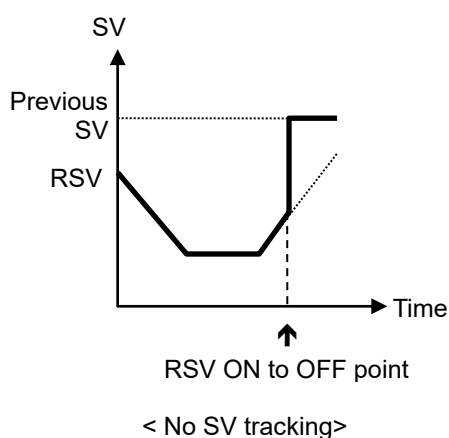

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	SV Tracking	0: OFF, 1: ON	0: OFF	-

- **RSV error operation**

When error occurs during RSV function, refer to the below table.

RSV Master channel		Using channel SV display	Using channel output
RSV Master channel target as '1: PV'	HHHH	30000	Standard control: heating control 100%, cooling control 0% Heating&Cooling control: heating 100%, cooling 0%
	LLLL	-30000	Standard control: heating control 0%, cooling control 100% Heating&Cooling control : heating 0%, cooling 100%
	OPEN	31000	Sensor error, MV
Internal communication error		32000	
Channel's communication error		31500	


8.2 Control output TMH2/4

8.2.1 Control output mode

Control output modes for general temperature control include heating, cooling, and heating & cooling.

Heating control and cooling control are mutually opposing operations with inverse outputs.

The PID time constant varies based on the controlled objects during PID control.

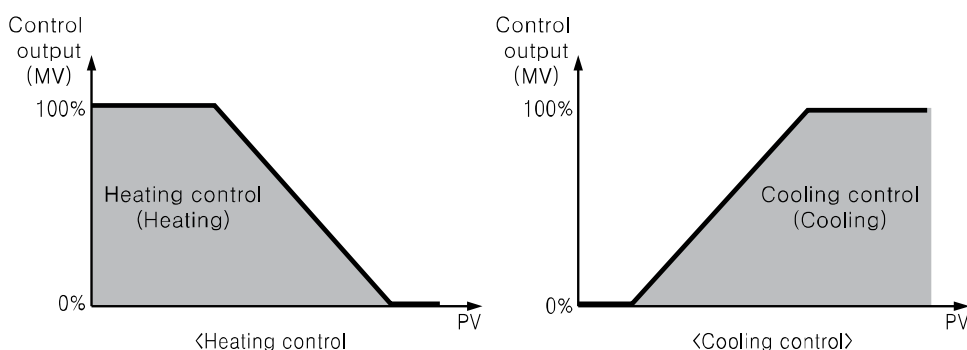

Setting group	Parameter	Set range	Factory default	Unit
Control Operation	Operating Type	0: Heating, 1: Cooling, 2: Heating&Cooling	0: Heating	-



Note

When changing control output mode, the reset parameters are as below.

Sensor error, MV	Manual control, initial MV	Control stop, MV
Soft start MV	MV high/low-limit value	Temperature control method
Heating MV	Cooling MV	Dead band/Overlap band

(1) Heating control

Heating control mode: the output will be provided in order to supply power to the load (heater) if present value (PV) falls below set value (SV).

(2) Cooling control

Cooling control mode: the output will be provided in order to supply power to the load (cooler) if present value (PV) rises above set value (SV).


(3) Heating/Cooling control

Heating & Cooling control mode: heating & cooling with a single temperature controller when it is difficult to control subject temperature with only heating or cooling.

Heating & Cooling control mode controls the object using different PID time constants for each heating & Cooling.

It is also possible to set heating & cooling control in both PID control or ON/OFF control mode. Heating/cooling output can be selected among Relay output, SSR drive output and

current output depending on model types chosen according to your application environment. (Note that SSR drive output of OUT2 operates standard control.)

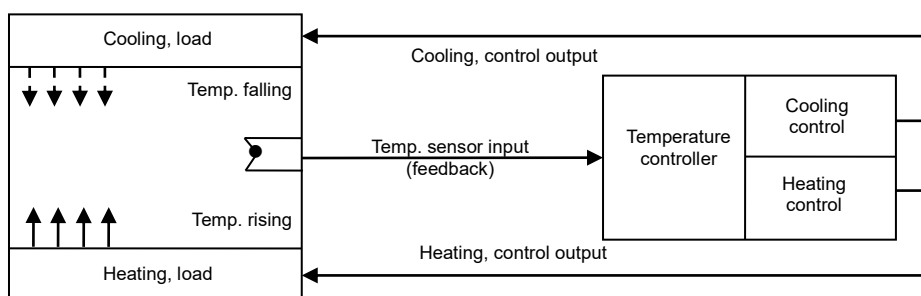

Note

- TMH4/2 Series' operation mode of each channel when setting heating&cooling control output mode

Series	Heating control	Cooling control
TMH2	CH1	AL1
	CH2	AL2
TMH4	CH1	CH3
	CH2	CH4

- Heating output is selectable as relay output, current output or SSR drive output by model. But cooling output of TMH2 series is fixed as relay output.

8.2.2 Dead band/Overlap band

In heating & cooling control, it is possible to designate a dead band between heating & cooling control bands based on set value (SV).

A dead band forms around the SV when positive (+) value is set. No control occurs in the dead band area. Therefore, heating & cooling MVs become 0.0% in the formed dead band.


An overlap band (simultaneous application of heating & cooling MVs) forms around the SV when negative (-) value is set.

Setting group	Parameter	Set range		Factory default	Unit
Control Operation	Dead_Overlap band	Temperature H, analog	-999 to 999	0	temperature: °C/°F, analog: %F.S
		Temperature L	-9999 to 9999 (-999.9 to 999.9)		


- Set as 0 when a dead band or an overlap band is not used.
- In case of PID-ON/OFF, ON/OFF-PID temperature control method, ON/OFF control section is not applied dead band and overlap band. Hysteresis and offset value are applied to control.
- In case of temperature input, decimal point of Dead_Overlap band is depending on input type (H, L) setting.

(1) Using as dead band


DB is 10-digit

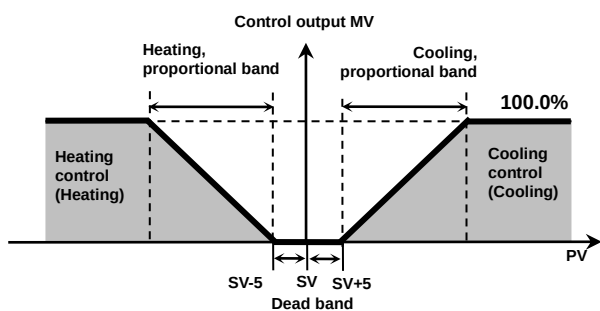


<PID/PID control, heating & cooling control>

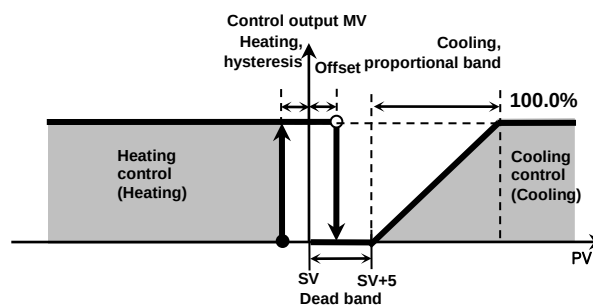

<ONOFF/ PID control, heating & cooling control>

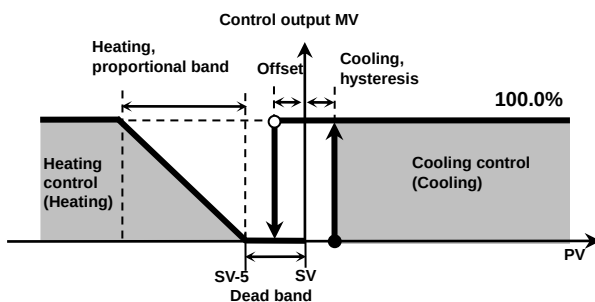


<PID/ONOFF control, heating & cooling control>

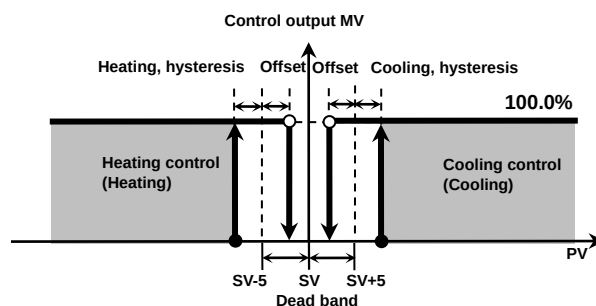


<ONOFF/ONOFF control, heating & cooling control>


In case of analog, % F.S is applied (scale range: 100.0 to 200.0, F.S : 100.0, DB : 10%)

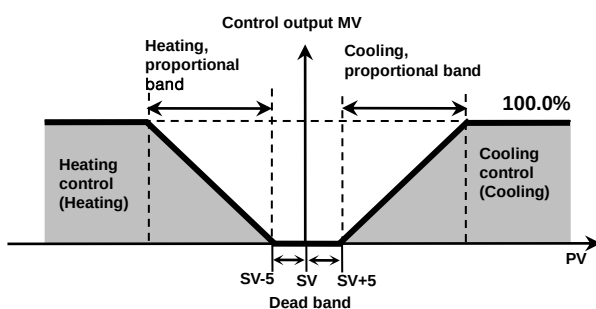


<PID/PID control, heating & cooling control>

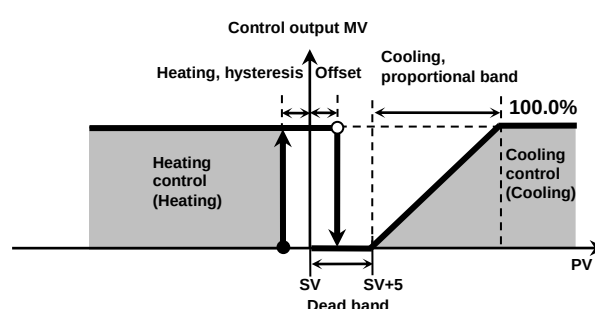

<ONOFF/ PID control, heating & cooling control>

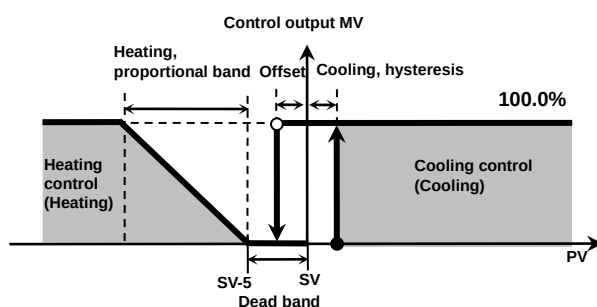


<PID/ONOFF control, heating & cooling control>

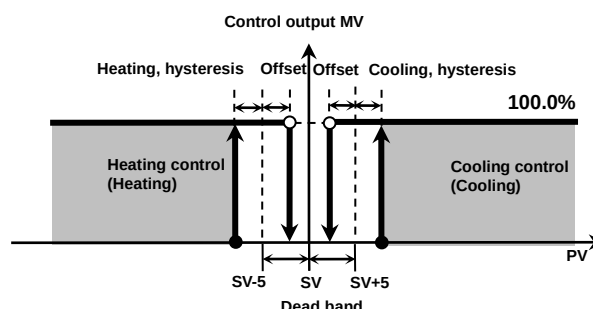


<ONOFF/ONOFF control, heating & cooling control>

(2) Using as overlap band


DB is -10 digit

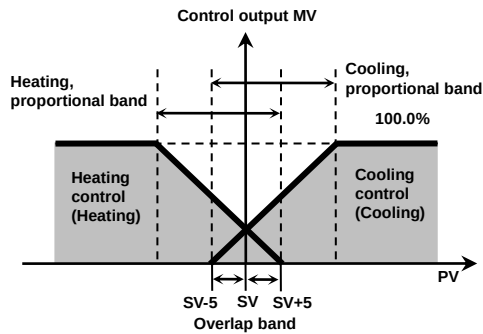


<PID/PID control, heating & cooling control >

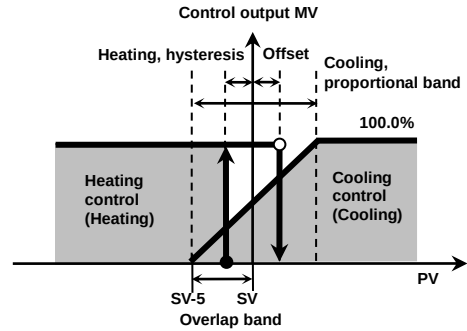

<ONOFF/ PID control, heating & cooling control>

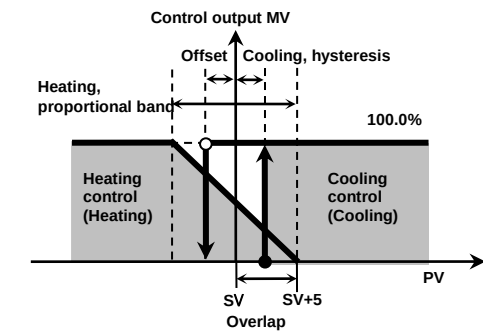


<PID/ONOFF control, heating & cooling control>

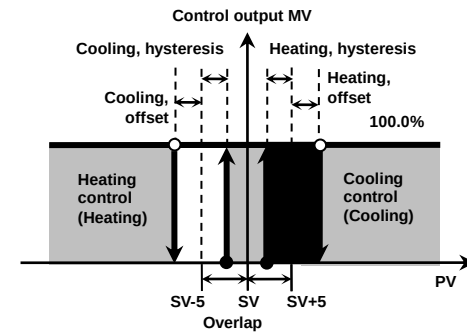


<ONOFF/ONOFF control, heating & cooling control>

Depending on heating/cooling control, hysteresis, or offset setting, cooling control range may be not included.


In case of analog, % F.S is applied (scale range: 100.0 to 200.0, F.S : 100.0, DB : 10%)

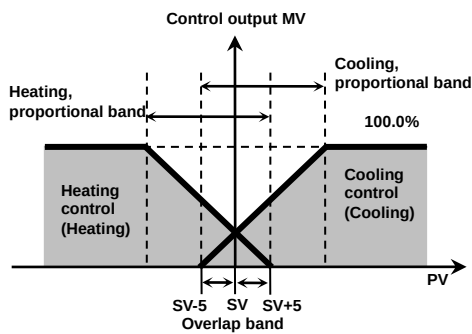


<PID/PID control, heating & cooling control>

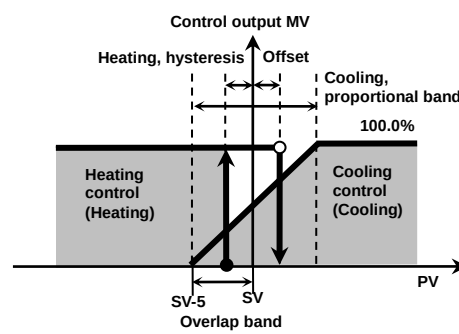

<ONOFF/ PID control, heating & cooling control>

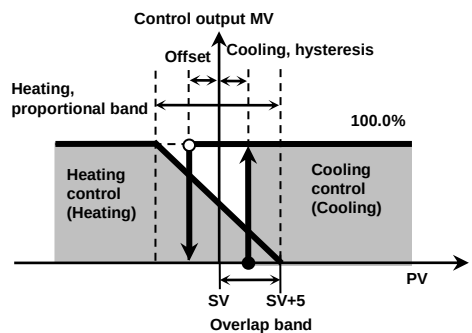

<PID/ONOFF control, heating & cooling control>

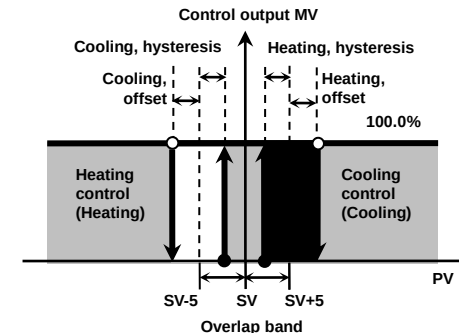


<ONOFF/ONOFF control, heating & cooling control>


Depending on heating/cooling control, hysteresis, or offset setting, cooling control range may be not included.

(3) Not using as dead band/overlap band


DB is 0 digit.
In case of analog, % F.S is applied

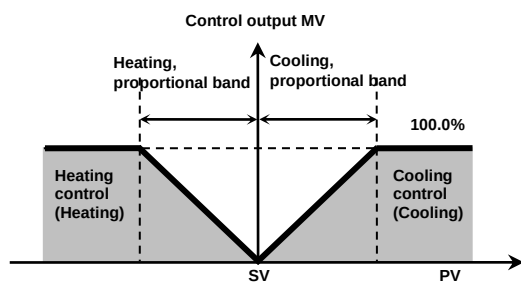


<PID/PID control, heating & cooling control>

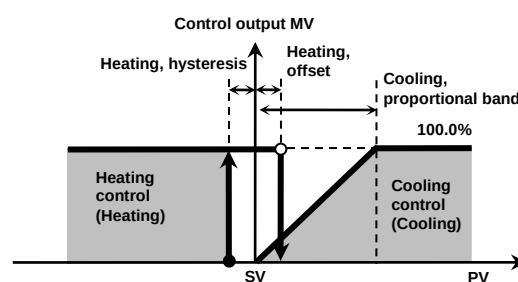

<ONOFF/ PID control, heating & cooling control>

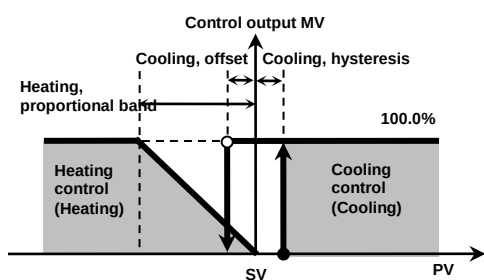

<PID/ONOFF control, heating & cooling control>

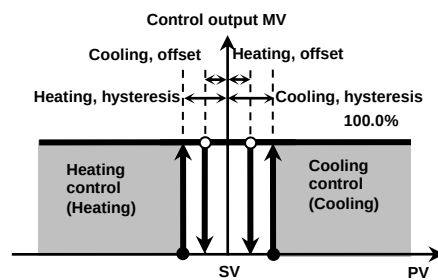


<ONOFF/ONOFF control, heating & cooling control>

8.2.3 MV high/low-limit value

MV high/low-limit values for control output can be configured to the actual MV, provided the temperature controller's MV calculation exceeds the limits.

During heating & cooling control, cooling MV carries a "-" prefix. Therefore, the high-limit is expressed as a + value on the heating side and the low-limit as a - value on the cooling side.

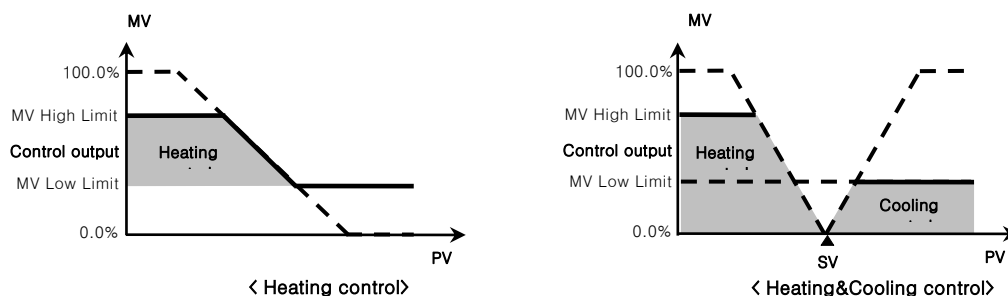

Setting group	Parameter	Set range		Factory default	Unit
Control Operation	MV Low Limit	Heating, Cooling	PID: 0 (0.0) to (MV High Limit – 1(0.1))	0(0.0)	%
		Heating&Cooling	PID-PID, ON/OFF-PID: -1000 to 0 (-100.0 to 0.0) PID-ON/OFF: -1000/0 (-100.0/0.0)	-1000 (-100.0)	
	MV High Limit	Heating, Cooling	PID: (MV Low Limit + 1(0.1)) to 1000 (100.0)	1000 (100.0)	
		Heating&Cooling	PID-PID, PID-ON/OFF: 0 to 1000 (0.0 to 100.0) ON/OFF-PID: 0/1000 (0.0/100.0)	1000 (100.0)	



Note

- In case of ON/OFF control of standard control (heating or cooling control), MV high/low-limit value setting is fixed as initial value.
- Same MV limits applied during auto-tuning.
- Manual control, control stop MV, sensor error MV, manual control initial MV are not applied to MV high/low-limit value.

8.2.4 MV change rate limit

This function is for limit MV change rate for prevent from control problem (valve control, etc.) or load life cycle problem due to radical change of MV.

MV change rate limit value is set for MV change rate per sec. When MV changing width calculated by control target device is large, the actual output value is increased/decreased gradually by MV change rate limit

It is applied only when the calculated MV change rate per sec is higher than the set MV change rate limit. When it is lower, the calculated MV is output.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation	MV rate limit	0 (OFF)/1000 (OFF), 1 to 999 (0.1 to 99.9)	0 (OFF)	%/SEC




Note

- It is not applied during manual control, auto-tuning, ON/OFF control, STOP MV, sensor break MV.
- MV change rate is set by change rate per sec. However, actual MV is applied per sampling cycle (50ms) based on the change rate per sec.



Ex.

Example of MV increment change rate setting

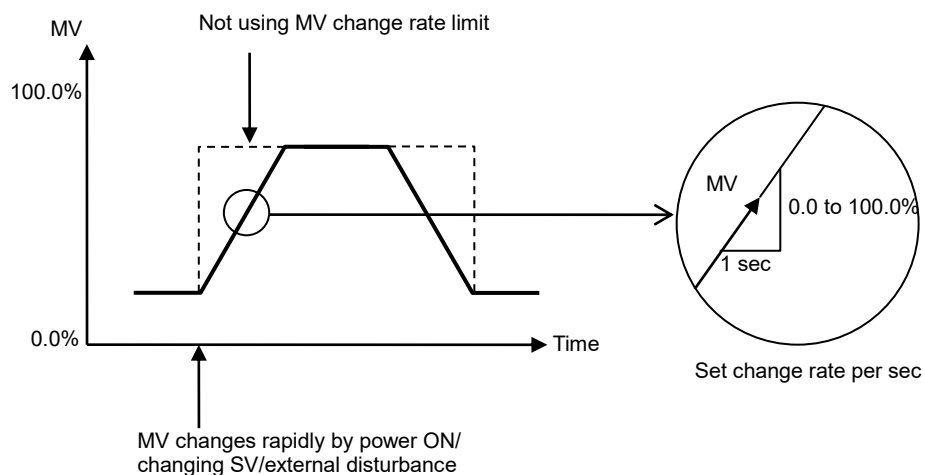

8.2.5 Ramp

Ramp is a feature used to configure the changed temperature per unit time toward SV (set value). The feature limits change rate of SV and thereby restricts sudden temperature changes (increase and decrease) in the control subject.

Ramp is commonly used in applications where rapid temperature changes (increase and decrease) could impact negatively on the control subject. For ceramic or pottery furnaces, rapid heating may break the furnace subject. Apply Ramp Up Change Rate to control the temperature.

SV determines the control of the control subject temperature. The SV changes based on the configured changed temperature per unit time (hereinafter referred to as RAMP SV).

Ramp Up change rate and Ramp Down change rate can be set independently.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation	Ramp_Up/Down Rate	0(OFF) to 9999	0	°C/°F / Digit
	Ramp Time Unit	1: SEC, 2: MIN, 3: HOUR	2: MIN	-



Note

- The temperature control for target operates based on the changed SV (RAMP SV) according to the set change rate (gradient).
- Activating the ramp feature when the ramp is not in operation limits the rate of SV (set value) change based on PV (present value). Changing SV or ramp parameters when the ramp is in operation limits the rate of SV change based on SV at the point of the change.
- Alarm activation with the ramp in operation depends on the final SV.
- Ramp up/down change rate is set changing rate by ramp time unit (Sec/Min/Hour). However, actual Ramp function is applied per sampling cycle (50ms) based on the ramp time unit change rate.


(1) Ramp depending on operation status

Operation status	RAMP Up/Down	RAMP function
All operations	When it is 0,	Inactive
OPEN, HHHH, LLLL, Auto-Tuning, Auto→Manual, RUN→STOP, After auto-tuning completed, PV = SV	Irrespective of conditions.	Inactive
Power ON, SV changing, STOP→RUN, Manual→Auto, Changing ramp rate or ramp time unit	When it is not 0,	Active




Ex.

Graph example of ramp function

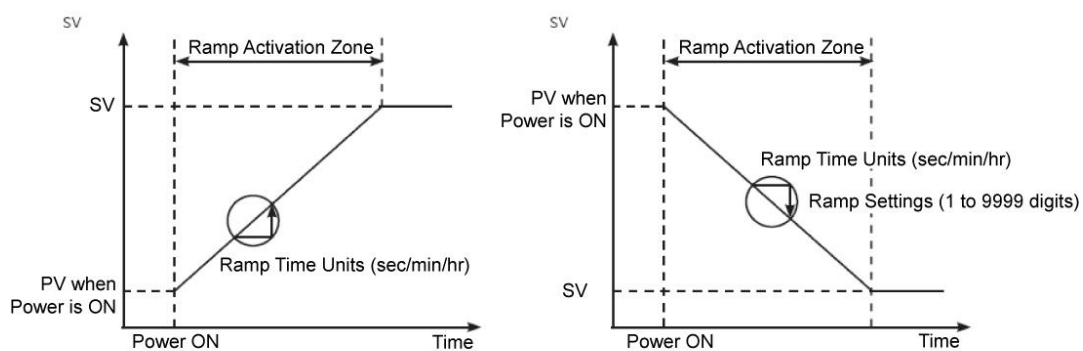

<Initial power on, Ramp value change>

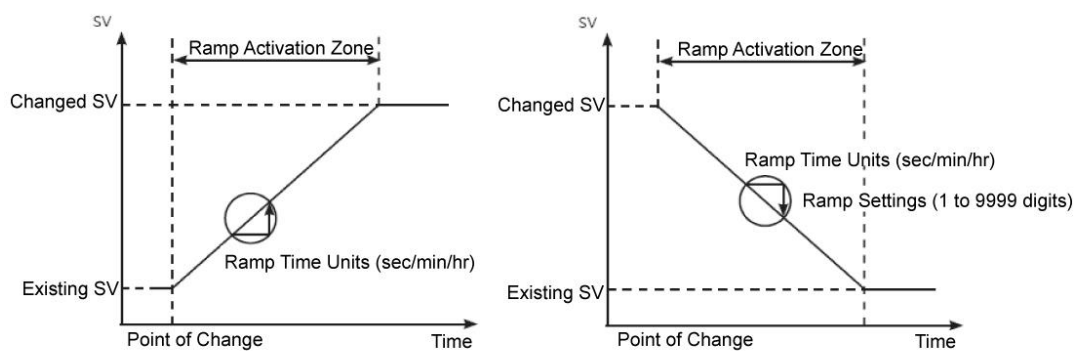

<SV setting change, Change SV setting with multi SV feature>

8.2.6 Soft start

Soft start operates once only when power ON by setting the desired time/unit and MV.

This function does not operate during manual control, stop running, input error OPEN/HHHH/LLLL. When the related parameter during soft start operation, the changed parameter is applied including the progressed time.

Setting group	Parameter	Set range			Factory default	Unit
Control Operation	Soft start time	0 (OFF), 1 to 9999			0 (OFF)	-
	Soft start time unit	0: SEC, 1: MIN, 2: HOUR			0: SEC	-
	Soft start MV	Heating, Cooling	PID	0 to 1000 (0.0 to 100.0)	1000 (100.0)	-
			ON/OFF	0/1000 (0.0/100.0)		
		Heating& Cooling	PID-PID	-1000 to 1000 (-100.0 to 100.0)		
			PID-ON/OFF	-1000(-100.0), 0 to 1000(0.0 to 100.0)		
			ON/OFF-PID	-1000 to 0 (-100.0 to 0.0), 1000 (100.0)		
			ON/OFF-ON/OFF	-1000/0/1000 (-100.0/0.0/100.0)		

8.2.7 Auto/ Manual control

Auto control mode is make temperature reach SV with MV calculated by PID control.

Manual control mode is to make temperature reach SV with user's defined MV.

Setting group	Parameter	Set range	Factory default	Unit
Monitoring	Auto-Manual Control	0: AUTO, 1: MANUAL	0: AUTO	-



Note

- Digital input terminal is set as manual control and external digital input terminal used for auto/manual control. The parameter setting of Auto/Manual control is not available.
- For ON/OFF control, auto/manual control switching is available.
- When power turns OFF and ON during auto/manual control, it maintains auto/manual control.
- During auto-tuning and switching to manual control, auto-tuning stops.


- During control stop, input break, manual control switching is available.
priority: manual control > STOP > OPEN (input break)
- During control operation, auto/manual control switching is available.
- During manual control, the other parameter is not to set except H-MV, C-MV, auto/manual control.

▪ **Baseline MV for manual control**

When switching from auto control to manual control you can set the initial MV.

- AUTO-MV: Controlling with auto control MV as an initial MV for manual control.
- PRESET-MV: Controlling with preset manual MV as initial MV.

Setting group	Parameter	Set range	Factory default	Unit
Control Setting	Initial Manual MV	0: AUTO-MV, 1: PRESET-MV	0: AUTO-MV	-

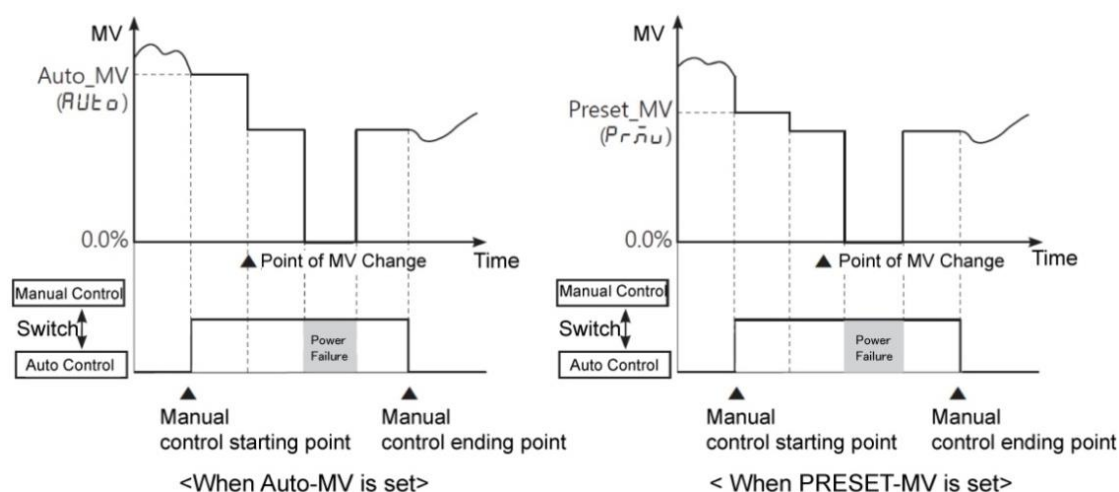

Note

When re-supplying the power, it controls with the MV which is at the power OFF.

- **Initial MV for manual control**

If the baseline MV for manual control is configured to PRESET-M, you can set the initial MV for manual control.

Setting group	Parameter	Set range			Factory default	Unit
Control Setting	Preset Manual	Heating, Cooling	PID	0 to 1000 (0.0 to 100.0)	0 (0.0)	%
			ON/OFF	0/1000 (0.0/100.0)		
		Heating & Cooling	PID-PID	-1000 to 1000 (-100.0 to 100.0)		
			PID-ON/OFF	-1000 (-100.0), 0 to 1000 (0.0 to 100.0)		
			ON/OFF-PID	-1000 to 0 (-100.0 to 0.0), 1000 (100.0)		
			ON/OFF-ON/OFF	-1000/0/1000 (-100.0/0.0/100.0)		



Note

When in heating & cooling control mode, a setting between 0.1 to 100.0 will be applied as heating MV and a setting between -0.1 to -100.0 will be applied as cooling MV.

- **Select SV when auto control switching**

When changing manual control to auto control, set SV as the PV.

In case of input error, OPEN, HHHH, LLLL, it maintains the previous SV.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation	PV transfer	0: OFF, 1: ON	0: OFF	-

8.2.8 Control output

In case of selecting the Models with current control output, both current and SSR drive outputs are available. You can therefore choose the right output type depending on application environments.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation Group	Heating/Cooling_Output Type	0: SSR, 1: Current	1: Current	-

8.2.9 Current output range

When control output is current output, high/low-limit range of current output is selectable one; 4-20mA or 0-20mA.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation Group	Heating/Cooling_Current Output Range	0: 4-20, 1: 0-20,	0: 4-20	mA



Note

This parameter is available only when control output setting is 1: Current.

8.3 Analog transmission output TMHA

Transmission output is for sub output not for control output. It is available to transmit PV, SV, heating MV(H-MV), or cooling MV(C-MV) to external device. Only analog value of TMH2/4/A is available to transmission.

8.3.1 Analog transmission output

The PV, SV, heating MV(H-MV), or cooling MV(C-MV) of TMH2/4/A is transmitted as the converted DC4-20mA analog current to external device.

Setting group	Parameter	Set range	Factory default	Unit
Analog Output Setting	Analog Output	0: PV, 1: SV, 2: H-MV, 3: C-MV	0: PV	-



Note

- Transmission output is constant current output. The resistance value of load (over 500Ω) is too large, output value may be changed.
- When transmission output target module is TMHA, only '0: PV' is selectable.
- When transmitting SV and during RAMP operation, RAMP SV is transmitted by level.

8.3.2 Transmission output target address

Set target address for transmission output.

Setting group	Parameter	Set range	Factory default	Unit
Analog Output Setting	Analog Output Target	0 to 48	0	-

Set the address by unit address switch setting of each module as below.

Module \ SW																	
		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
TMH4/2	+0 +16	16	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
	+0 +16	32	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
TMHA		48	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47



Note

When transmission output target address and using channel address is same, set as '0'. (do not set as the using channel address.)

8.3.3 Transmission output target channel

Set the target channel to transmission output.

Setting group	Parameter	Set range	Factory default	Unit
Analog Output Setting	Analog Output Target Ch	0: CH1, 1: CH2 2: CH3, 3: CH4	CH1:0, CH2: 1 CH3: 2, CH4: 3	-

8.3.4 Current output range

Select high/low-limit range of 4-20mA or 0-20mA for current transmission output.

Setting group	Parameter	Set range	Factory default	Unit
Analog Output Setting	Analog Output Range	0: 4-20, 1: 0-20	0: 4-20	mA

8.3.5 Transmission output high/low-limit value

Within the set current output high/low-limit range (4-20mA or 0-20mA), it limits transmission output range.

Setting group	Parameter	Set range			Factory default	Unit
Analog Output Setting	Full Scale Low	PV	Temperature	Refer to 8.1.1 Input type and range TMH2/4 TMHA	-200	-
			Analog	Analog scale low-limit value (Low-limit Scale Value) to Analog scale high-limit value (High-limit Scale Value)		
		SV		SV low-limit value (SV Low Limit) to SV high-limit value (SV High Limit)		
		H-MV/C-MV		0 to 1000 (0.0 to 100.0)		
	Full Scale High	PV	Temperature	Refer to 8.1.1 Input type and range TMH2/4 TMHA	1350	-
			Analog	Analog scale low-limit value (Low-limit Scale Value) to Analog scale high-limit value (High-limit Scale Value)		
		SV		SV low-limit value (SV Low Limit) to SV high-limit value (SV High Limit)		
		H-MV/ C-MV		0 to 1000 (0.0 to 100.0)		



Note

When high-limit value and output low-limit value for transmission output are same, it outputs 4mA.

8.4 Temperature control TMH2/4



8.4.1 Temperature control method

You can choose the type of temperature control method.

Setting group	Parameter	Set range		Factory default	Unit
Initial Setting	Control Method	Heating, Cooling	0: PID, 1: ONOFF	0: PID	-
		Heating& Cooling	0: PID-PID 1: PID-ONOFF 2: ONOFF-PID 3: ONOFF-ONOFF	0: PID-PID	-

8.4.2 ON/OFF control

Controls the temperature by comparing present value (PV) with set value(SV) and turning power to the load on or off.

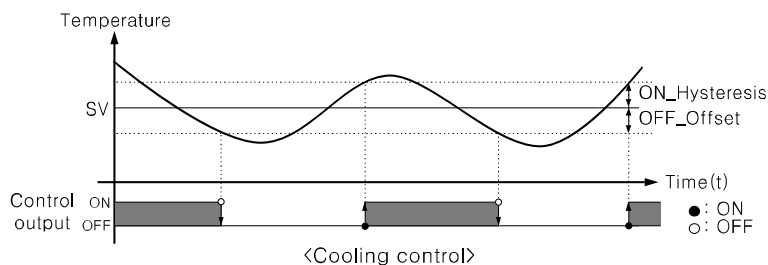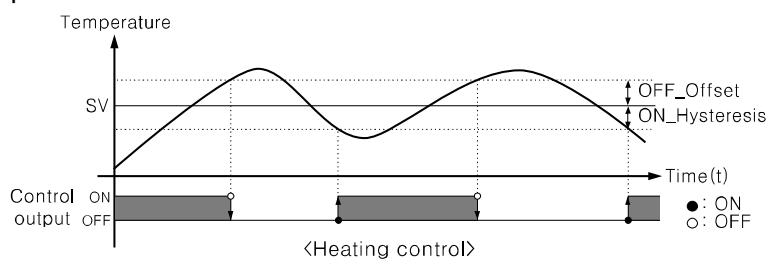

▪ Hysteresis/Offset

Hysteresis is to adjust control output ON/OFF point in ON/OFF control mode.

ON_Hysteresis sets the output on point and OFF_Offset sets the off point.

Setting hysteresis too low can result in hunting induced by disturbance (noise, chattering, etc.). To minimize hunting, set ON_Hysteresis and OFF_Offset values with consideration to the heater or cooler's capacity and thermal characteristics, the control subject's response characteristics, the sensor's response characteristics and installation conditions, and other defining factors.

Setting group	Parameter	Set range		Factory default	range
Control Operation	Heating/Cooling_ON Hysteresis	Temperature H, analog	1 to 100	2	Temperature: °C/°F, Analog: %F.S
		Temperature L	1 to 1000 (0.1 to 100.0)	20 (2.0)	
	Heating/Cooling_OFF Offset	Temperature H, analog	0 to 100,	0	
		Temperature L	0 to 1000 (0.0 to 100.0)		

8.4.3 PID control


PID control is a combination of proportional (P), integral (I), and derivative (D) controls and offers superb control over the control subjects, even with a delay time.

Proportional control (P) implements smooth,

hunting-free control; integral control (I) automatically corrects offsets;

and derivative control (D) speeds up the response to disturbance. Through these actions,

PID control realizes ideal temperature control.

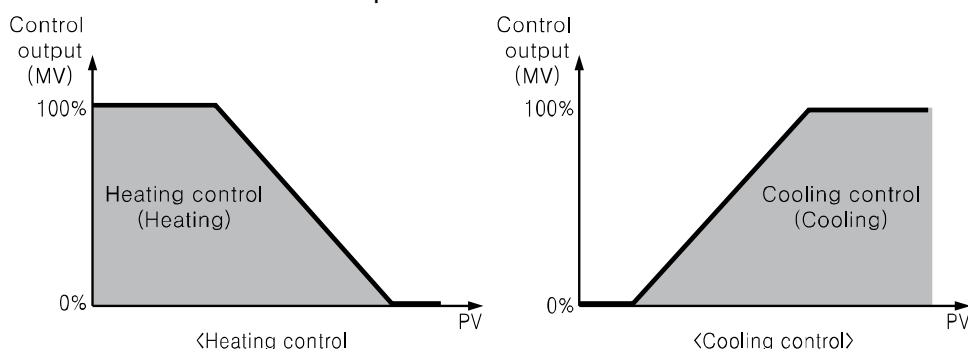

**Note**

Applied method for PID control

Proportional (P) control : Select PID control and set the integral and derivative time as 0.

Proportional integral(PI) control : Select PID control and set the derivative time as 0.

Proportional derivative(PD) control : Select PID control and set the integral time as 0.

Multi SV: Use the same PID time constant for the values of SV 0 to SV 3.

- **Proportional band**

When present value (PV) is within the Proportional Band (P), the ON/OFF ratio needs to be adjusted during the proportional period (T). The defined proportional control (time proportional control) section is called as the proportional band.

Setting group	Parameter	Set range		Factory default	Unit
Control Operation	Heating/ Cooling _Proportional Band	Temperature H, analog	1 to 999	10	temperature : °C/°F, analog: %F.S
		Temperature L	1 to 9999(0.1 to 999.9)	100(10.0)	

- **Integral time**

MVs from integral and proportional operation become the same when deviation is consistent. The time taken for the two MVs to match is called the integral time.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation	Heating/ Cooling _Integral Time	0 to 9999	0	Sec

**Note**

Integral control is not conducted if the integral time is set to 0.

Setting the integral time too short can intensify correction movements and cause hunting.

- **Derivative time**

In accordance with the deviation of the ramp, the time taken for the MV gained from derivative operation to reach the MV gained from proportional control is called the derivative time.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation	Heating/ Cooling _Derivation Time	0 to 9999	0	Sec

**Note**

Derivative control is not conducted if the derivative time is set to 0.

- **Control period**

If relay or SSR is used to output MV under proportional control, the output is on for a fixed amount of time (within the control period, as a percentage of the MV) and then remains off for the rest of the time. The preset period when output ON/OFF takes place is called the proportional control period.

Control with SSR drive output has a faster response than that of relay output. Therefore, by configuring a shorter control period, more responsive temperature control is achieved.

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Heating/ Cooling _ Control Time	Relay output: 0.1 to 120.0 sec, SSR output: 1.0 to 120.0 sec	Relay: 200 (20.0) SSR: 20 (2.0)	Sec

**Note**

If using heating & cooling control, configure each control period separately for heating & cooling.

When control output setting is 1: Current, control period parameter is not activated.

- **Offset correction/Manual reset**


When selecting P / PD control mode, there are certain temperature differences even after PV reaches stable status since heater's rising and falling time is inconsistent due to thermal characteristics of control objects, such as heat capacity and the heater capacity. This temperature difference is called OFFSET. Offset can be corrected using manual reset.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation	Manual Reset	0 to 1000 (0.0 to 100.0)	500 (50.0)	%

**Note**

- Manual reset adjustments based on control results

Under stable control conditions, set the offset to 50% if PV and SV are identical, to over 50.0% if PV is lower than SV, and to below 50.0% if PV is higher than SV.

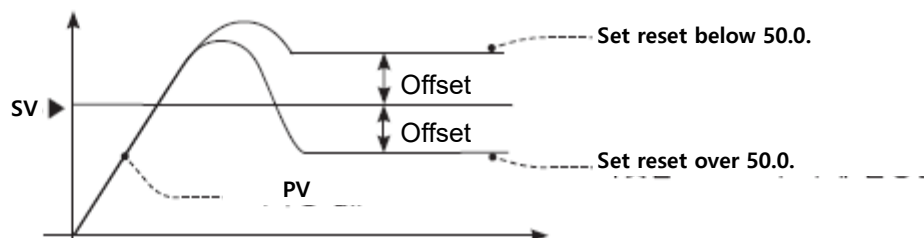

- Normal deviation correction function is available only when proportional control (P, PD control). When integral time is set as 0 sec, manual reset parameter is activated.
- During heating&cooling control, manual reset is not available to set manual.
- During heating&cooling control to standard control, when proportional control (P, PD control) operates, normal deviation correction function executes with the previous set manual reset value.

8.4.4 Auto-tuning

Auto tuning measures the control subject's thermal characteristics and thermal response rate, and then determines the necessary PID time constant.

- Auto-tuning start/stop**
 - Auto-tuning automatically stores PID time constants upon termination. These PID time constants can then be modified by the user to suit their usage environment.
 - When auto-tuning is in progress, the channel output LED flashes in 1 sec. intervals. When auto-tuning finishes, the output LED turns OFF and the parameter set value is also returned to OFF automatically.

Setting group	Parameter	Set range	Factory default	Unit
Control Operation	Auto-Tuning Execute	0: OFF, 1: ON	0: OFF	-

**Note**


- When selecting manual control during auto-tuning, auto-tuning stops.
- When sensor break error occurs during auto-tuning, auto-tuning stops automatically and the previous PID value maintains.
- Auto-tuning continues to run even if the temperature reading exceeds or falls below the input range.

- When auto-tuning is in progress, parameters can only be referenced and not altered.
- During auto-tuning when external digital input function is RUN/STOP or AUTO/MANUAL and the digital signal inputs or sensor break alarm occurs, auto-tuning stops. (the previous PID value maintains)
- Auto-tuning is not available in manual control.

▪ Auto-tuning(AT) mode

There are auto-tuning(AT) modes according to base line; TUNE 1 mode (based on SV), TUNE 2 mode(based on SV+TUNE 2 mode deviation value).

- TUNE 1 mode: Auto-tuning operates based on SV and PID value is calculated.
- TUNE 2 mode: Auto-tuning operates based on SV+TUNE 2 mode deviation and PID value is calculated.

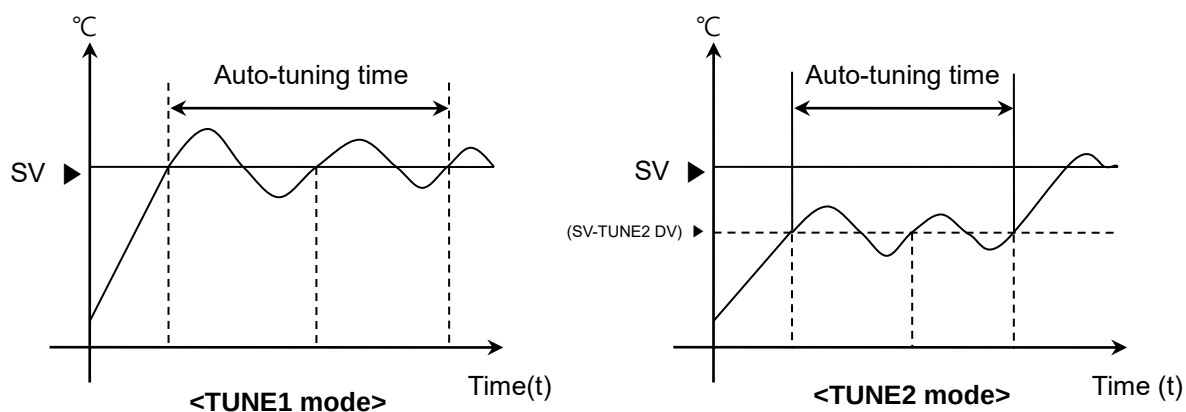

Setting group	Parameter	Set range	Factory default	Unit
Initial Setting	Auto-Tuning Mode	0: TUNE 1 , 1: TUNE 2	0: TUNE 1 1: TUNE 2	-

▪ TUNE 2 mode deviation value

Set deviation value for TUNE 2 mode of auto-tuning(AT) mode.

Setting group	Parameter	Set range		Factory default	Unit
Initial Setting	TUNE 2 DV	Temperature H, analog	-9999 to 9999	0	Digit
		Temperature L	-9999 to 9999 (-999.9 to 999.9)		



Ex.

When SV is set as 100, and TUNE2 deviation value is set as -10,
auto-tuning with TUNE2 operates based on $100+(-10)=90$.

8.5 Alarm output

Alarm output is a relay output that activates irrespective of control output. Alarm output works when the temperature of the controlled subject exceeds or falls below the preset temperature range.

Alarm temperature set values consist of absolute temperatures or deviation temperatures, depending on the alarm output mode.


Alarm output is only for TMH2 or TMHE option module.

8.5.1 Alarm configurations

Alarm output (Alarm) is output terminal and alarm (Event) is for alarm setting by each channel.

One channel is available to set total 4 alarms (Event 1 to 4).


One alarm consists of alarm mode, option, set value, hysteresis, delay time, output address, and channel settings, etc.

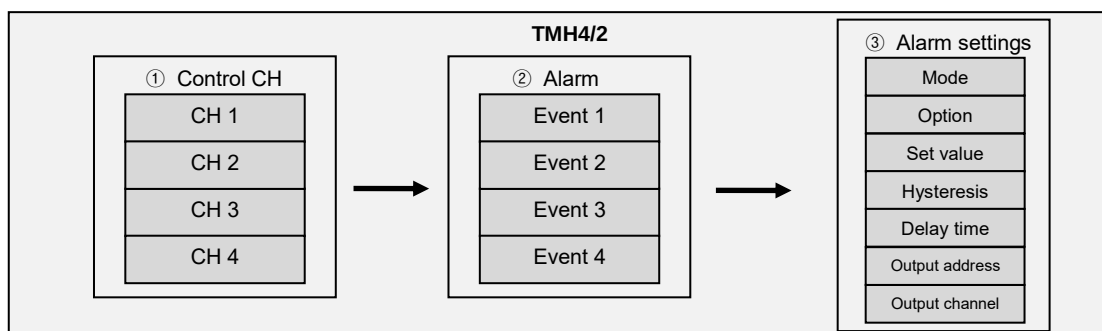

(1) Using TMH2 built-in alarm output

TMH2 outputs built-in alarm when alarm condition occurs. (address: 00, TMH2 alarm output of the other address is not available.)


Several alarm (Event 1 to 4) is selectable as one alarm output and AND/OR operation is selectable at TMH2.

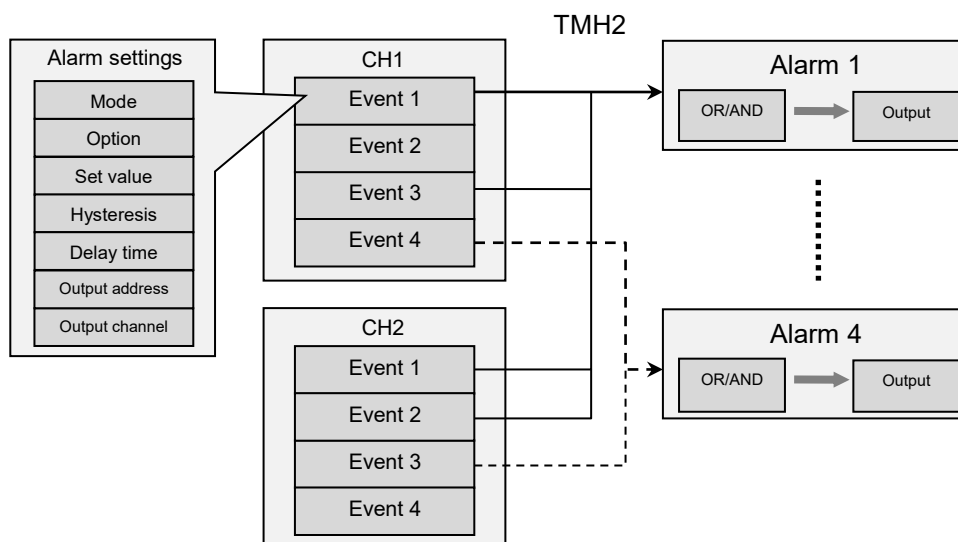**(2) Using TMHE option module alarm output**

TMH2/4 is connectable to TMHE option module. (according to address setting)

TMH4 does not have built-in alarm and TMHE option module outputs alarm when alarm condition occurs by internal communication.

Several alarm (Event 1 to 4) is selectable as one alarm output and AND/OR operation is selectable at TMHE.










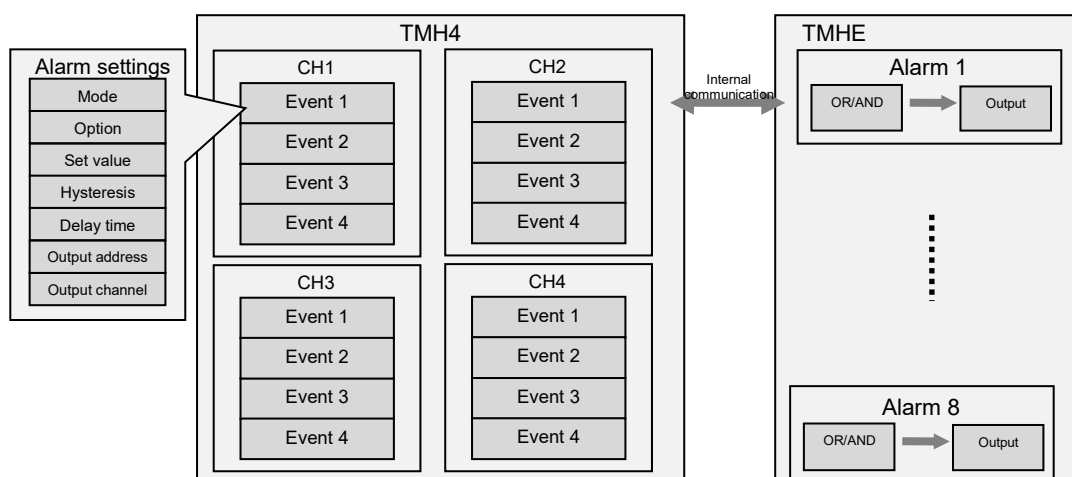
**Note**

Several alarm (Event 1 to 4) of TMH2 is selectable as one alarm output of TMHE and AND/OR operation is selectable at TMHE.

8.5.2 Alarm output mode **TMH2/4**

Select the desired alarm operation.

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	Event Mode	Refer to the below table.	1: AL-1	-

Mode	Name	Alarm operation		Description
0: OFF	-	-		No alarm output
1: AL-1	Deviation high-limit alarm	 High deviation: Set as 10°C	 High deviation: Set as -10°C	If deviation between PV and SV as high limit is higher than set value of deviation temperature, the alarm output will be ON.
2: AL-2	Deviation low-limit alarm	 Lower deviation: Set as 10°C	 Lower deviation: Set as -10°C	If deviation between PV and SV as low limit is higher than set value of deviation temperature, the alarm output will be ON.
3: AL-3	Deviation high/low-limit alarm	 Lower deviation: Set as 10°C, High deviation: Set as 20°C		If deviation between PV and SV as high/low limit is higher than set value of deviation temperature, the alarm output will be ON.
4: AL-4	Deviation high/low-limit reverse alarm	 Lower deviation: Set as 10°C, High deviation: Set as 20°C		If deviation between PV and SV as high/low-limit is higher than set value of deviation temperature, the alarm output will be OFF.
5: AL-5	Absolute value high-limit alarm	 Alarm absolute value: Set as 90°C	 Alarm absolute value: Set as 110°C	If PV is higher than the absolute value, the output will be ON.
6: AL-6	Absolute value low-limit alarm	 Alarm absolute value: Set as 90°C	 Alarm absolute value: Set as 110°C	If PV is lower than the absolute value, the output will be ON.

Mode	Name	Alarm operation		Description
	alarm			
7: LBA	Loop break alarm	-		It will be ON when it detects loop break.
8: SBA	Sensor break alarm	-		It will be ON when it detects sensor disconnection.
9: HBA	Heater break alarm	-		It will be ON when CT detects heater break.

8.5.3 Alarm output option TMH2/4

Users can select the desired alarm output options.

Each alarm (Event 1 to Event 4) is able to set individually.

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	Event Type	Refer to the below table.	0: AL-A	-

Setting	Mode	Description
0: AL-A	Standard alarm	If it is an alarm condition, alarm output is ON. If it is a clear alarm condition, alarm output is OFF.
1: AL-B	Alarm latch ※ ¹	If it is an alarm condition, alarm output is ON and maintains ON status.
2: AL-C	Standby sequence 1※ ²	First alarm condition is ignored and from second alarm condition, standard alarm operates. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, standard alarm operates.
3: AL-D	Alarm latch and standby sequence 1	If it is an alarm condition, it operates both alarm latch and standby sequence. When power is supplied and it is an alarm condition, this first alarm condition is ignored and from the second alarm condition, alarm latch operates.
4: AL-E	Standby sequence 2	First alarm condition is ignored and from second alarm condition, standard alarm operates. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, standard alarm operates.
5: AL-F	Alarm latch and standby	Basic operation is same as alarm latch and standby sequence1. It operates not only by power ON/OFF,

Setting	Mode	Description
	sequence 2	but also alarm set value, or alarm option changing. When re-applied standby sequence and if it is alarm condition, alarm output does not turn ON. After clearing alarm condition, alarm latch operates.

※1.: Condition of re-applied alarm latch, alarm latch and standby sequence 1, alarm latch and standby sequence 2, standby sequence alarm: Power OFF, digital input is supplied as event reset function.

※2.: Condition of re-applied standby sequence alarm: Power ON, changing SV, changing parameters for alarm (output mode, option, set value), switching STOP mode to RUN mode.



Note


If alarm operation is set as LBA, SBA, HBA, AL-C, AL-D, AL-E, AL-F modes are not displayed.



Ex.

In case of SV: 100°C, alarm output operation mode: AL-3(deviation high/low-limit alarm), alarm option: AL-E(standby sequence 2),

(high/low-limit deviation temperature: 10°C, alarm output hysteresis: 5°C)

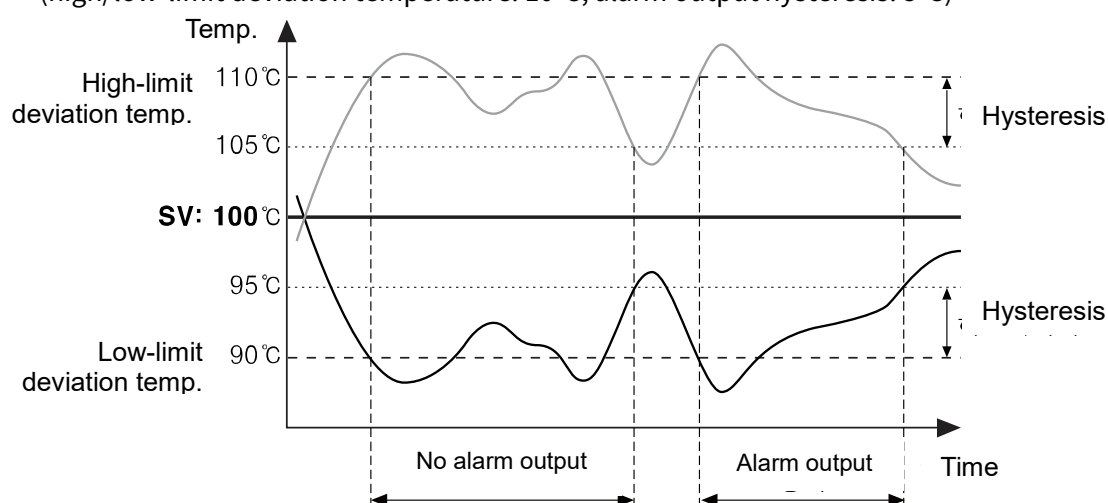

Alarm output operates from the second alarm condition not the first alarm condition.

8.5.4 Alarm SV TMH2/4

You can set alarm output activation values. According to the selected alarm operation, configuration parameters (AL□.H/AL□.L) will be activated for each setting.

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	Event High Event Low	Deviation alarm: -F.S. to F.S. of the input type Absolute value alarm: Display range of the input type	1550	-



Note

Changing the alarm operation or options resets the settings to the highest or lowest values that will not trigger output in the new mode.

8.5.5 Alarm output hysteresis TMH2/4

At “8.5.2Alarm output mode”, “H” from alarm operation represents the alarm output hysteresis. It is used to set an interval between alarm outputs ON/OFF period.

When PV is over or below the alarm output set value, alarm output turns ON and OFF according to the set hysteresis. When input value varies around the set value, alarm output turns ON frequently. To set hysteresis prevents frequent alarm outputs.

Setting group	Parameter	Set range		Factory default	Unit
Alarm Setting	Alarm Hysteresis	Temperature H, analog	1 to 100	1	temperature: °C/°F, analog: Digit
		Temperature L	0.1 to 100.0	1 (0.1)	



Note

Alarm output hysteresis applies to heater break alarm (HBA) in the same manner.


This parameter does not appear when loop break alarm (LBA), or sensor break alarm (SBA) is selected.

8.5.6 Alarm output delay time TMH2/4

Alarm output delay can be set to prevent false alarms caused by erroneous input signals resulting from disturbances or noise.

With a preset delay time, alarm output does not turn on for the preset duration. Instead, the concerned alarm indicator on the front will flash in 0.5 sec. intervals.

- Alarm output ON delay time (Alarm ON Delay Time): Based on the occurring point of alarm output, it waits for the set delay time and checks alarm output condition. When the condition is meet the alarm output, the output turns ON.
- Alarm output OFF delay time (Alarm OFF Delay Time): Based on the releasing point of alarm output, it waits for the set delay time and checks alarm output condition. When the condition is meet the alarm output, the output turns OFF.

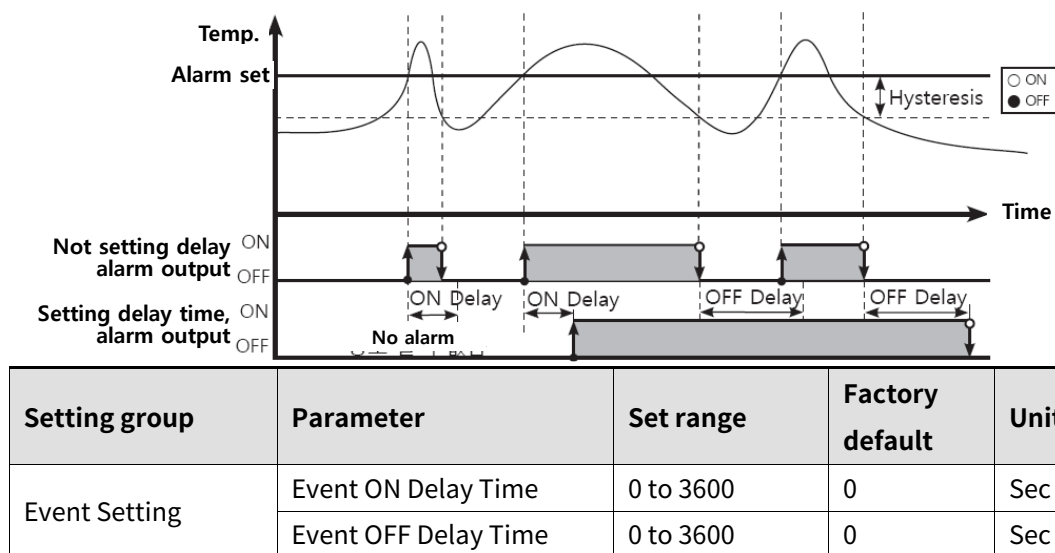

8.5.7 Alarm output method TMH2/4 TMHE

Set relay format for alarm output.

- N.O. (Normally Open): At normal status, relay is open. When alarm occurs, it is closed.
- N.C. (Normally Closed): At normal status, relay is closed. When alarm occurs, it is open.

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	Alarm NO/NC	0: NO, 1: NC	0: NO	-



Note

- Front indicator operation

Setting	Occurring alarm	Alarm output	Front indicator operation
N.O.	OFF	Open	☐ OFF
	ON	Close	☒ ON
N.C.	OFF	Close	☐ OFF
	ON	Open	☒ ON

8.5.8 Alarm output target address TMH2/4

Set alarm output target module address.

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	Alarm Output Target	00, 49 to 64	00	-

For using TMH2 built-in alarm output, set the address by unit address switch setting as '0'.

Set the address by unit address switch setting of TMHE unit address as below.

Module \ SW																
	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
TMHE	64	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63

8.5.9 Alarm output target channel TMH2/4

Set alarm output target.

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	Event Output Target Ch	0: Alarm 1 to 7: Alarm 8	0: Alarm 1	-



Note

For TMH2 heating&cooling control, alarm 1, and alarm 2 executes for cooling control output. It does not set as alarm output.

8.5.10 Alarm output logic operation TMH2 TMHE

Select alarm output logic operation (OR/AND).

Setting group	Parameter	Set range	Factory default	Unit
Common	Alarm Logic	0: OR, 1: AND	0: OR	-



Note

This parameter is able to set only when TMH2 and using built-in alarm output (alarm output target address: 00).

8.5.11 Loop break alarm(LBA) TMH2/4

Diagnoses the control loop by monitoring the control subject's temperature changes and sends out alarms if necessary.

- Loop break alarm ON conditions: For heating control, heating&cooling control and control output 100% MV or MV high-limit value (MV high limit), when PV does not increase over LBA detection band (LBA Band) during LBA monitoring time (LBA Time), or when PV does not decrease below LBA detection band (LBA Band) during control output MV is 0% or MV low-limit value (MV low limit) during LBA monitoring time (LBA Time).
- Loop break alarm ON conditions: For cooling control, and control output 0% MV or MV low-limit value (MV low limit), when PV does not increase over LBA detection band (LBA Band) during LBA monitoring time (LBA Time), or when PV does not decrease below LBA detection band (LBA Band) during control output MV is 100% or MV low-limit value (MV low limit) during LBA monitoring time (LBA Time).

Common causes of LBA output ON

- Sensor error (disconnection, short)
- External controller error (magnet, auxiliary relay, etc.)
- External load error (heater, cooler, etc.)
- Misconnections and disconnections of external network.

If it is not as sensor break/HHHH/LLLL, during auto-tuning/manual control/control STOP/ramp function operation, loop break alarm does not operate.

Type	LBA monitoring time	Alarm output	
		Standard alarm	Alarm latch
Alarm reset, changing control output operation mode, setting LBA monitoring time/detection band as 0	Reset	OFF	OFF
Changing input correction value, SV		Maintains present alarm status	Maintains present alarm status
Changing MV, stopping control, running auto-tuning		OFF	Maintains present alarm status
Occurring sensor break alarm, HHHH, LLLL		ON	ON



Note

Set alarm output operation mode (Alarm Mode) as loop break alarm (LBA) and you can use loop break alarm.

When executing auto-tuning, LBA detection band (LBA Band) and LBA monitoring time (LBA Time) is automatically set based on auto-tuning value.

In case of auto-tuning/manual control/control stop, LBA does not operate.

When alarm reset input, starting point of LBA monitoring is reset.

▪ LBA monitoring time

You can set the LBA monitoring time to check changes in the control subject's temperature.

Automatically setting with auto-tuning.

- Regardless of alarm operation (including LBA monitoring time as “0”), after running auto-tuning, the integration time×2 value is saved automatically.
(If SV is out of the range of auto setting, it is set as max. or min. value of auto setting.)
- It maintains the present SV except changing input type, re-running auto-tuning, LBA monitoring time manual setting.
- Auto setting range: 0020 to 9999

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	LBA Time	0000 to 9999	0	Sec

▪ LBA detection band


You can set the minimum value of deviation change to decrease during LBA monitoring time. Automatically setting with auto-tuning.

- Regardless of alarm output operation mode (Alarm Mode) (including LBA monitoring time “0”), integral time×2 is saved automatically after auto-tuning. (when set value is out of auto setting range, it set max./min. value of auto setting range.)
- Set value maintains except input type changing, auto-tuning reply, LBA monitoring time manual setting.
- Auto setting range
 Temperature L: 20 to 1000 (2.0 to 100.0°C/°F)
 Temperature H: 0002 to 010.0 (°C/°F)
 Analog: 2 to 100(0.2 to 10.0%F.S)

Setting group	Parameter	Set range		Factory default	Unit
Event Setting	LBA Band	Temperature H	0 to 999	2	°C/°F
		Temperature L	0 to 9999 (0.0 to 999.9)	20 (2.0)	
		Analog	0 to 1000 (0.0 to 100.0)	2 (0.2)	%F.S.

**Ex.**

For heating control(cooling control), when control output MV is 100%(0% for cooling control) and PV is not increased over than LBA detection band (LBA Band) during LBA monitoring time (LBA Time), or when control output MV is 0%(100% for cooling control) and PV is not decreased below than LBA detection band (LBA Band) during LBA monitoring time (LBA Time), alarm output turns ON.

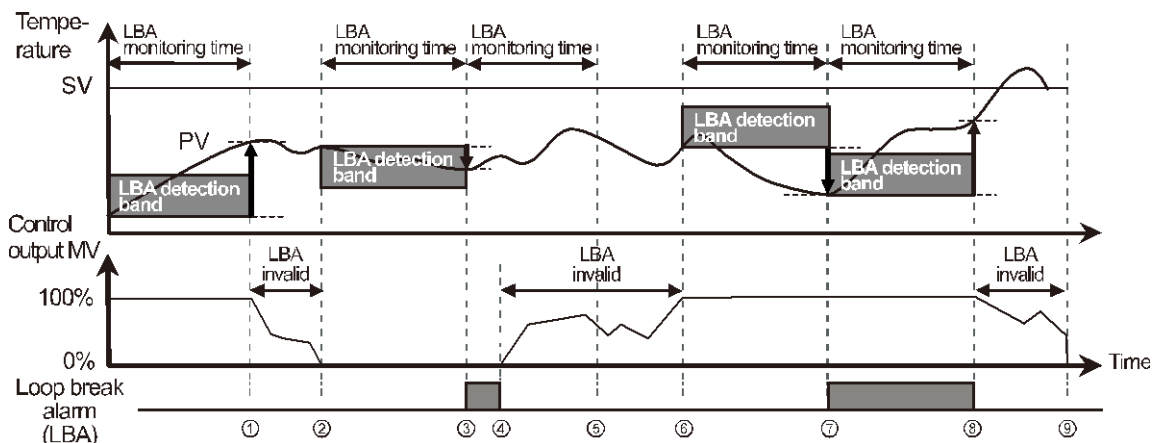

Control start to ①	When control output MV is 100%, PV is increased over than LBA detection band [L b A b] during LBA monitoring time (LBA Time).
① to ②	The status of changing control output MV (LBA monitoring time is reset.)
② to ③	When control output MV is 0% and PV is not decreased below than LBA detection band (LBA Band) during LBA monitoring time (LBA Time), loop break alarm (LBA) turns ON after LBA monitoring time (LBA Time).
③ to ④	Control output MV is 0% and loop break alarm (LBA) turns and maintains ON.
④ to ⑥	The status of changing control output MV (LBA monitoring time is reset.)
⑥ to ⑦	When control output MV is 100% and PV is not increased over than LBA detection band (LBA Band) during LBA monitoring time (LBA Time), loop break alarm (LBA) turns ON after LBA monitoring time (LBA Time).
⑦ to ⑧	When control output MV is 100% and PV is increased over than LBA detection band (LBA Band) during LBA monitoring time (LBA Time), loop break alarm (LBA) turns OFF after LBA monitoring time (LBA Time).
⑧ to ⑨	The status of changing control output MV (LBA monitoring time is reset.)

8.5.12 Sensor break alarm TMH2/4

You can set the controller to send out an alarm when a sensor is not connected or disconnected during temperature control.

Sensor break can be confirmed through an external alarm output contact, such as a buzzer or similar means.

Setting alarm output mode (Alarm Mode) as SBA will activate sensor break alarm.




Note

Alarm output option can be set to standard alarm (AL-A), or alarm latch (AL-B).

8.5.13 Heater break alarm TMH2/4

When using a heater to raise the temperature of the control subject, the temperature controller can be set to detect heater disconnection and send out an alarm by monitoring power supply to the heater.

Heater disconnection is detected by the controller using a current transformer (CT), which converts the current to the heater to a specific ratio (CT ratio, 1000:1) for monitoring. If the heater current value (CT-A) measured by the CT is less than the heater detection set value (Alarm Low_CH), the heater break alarm will activate.

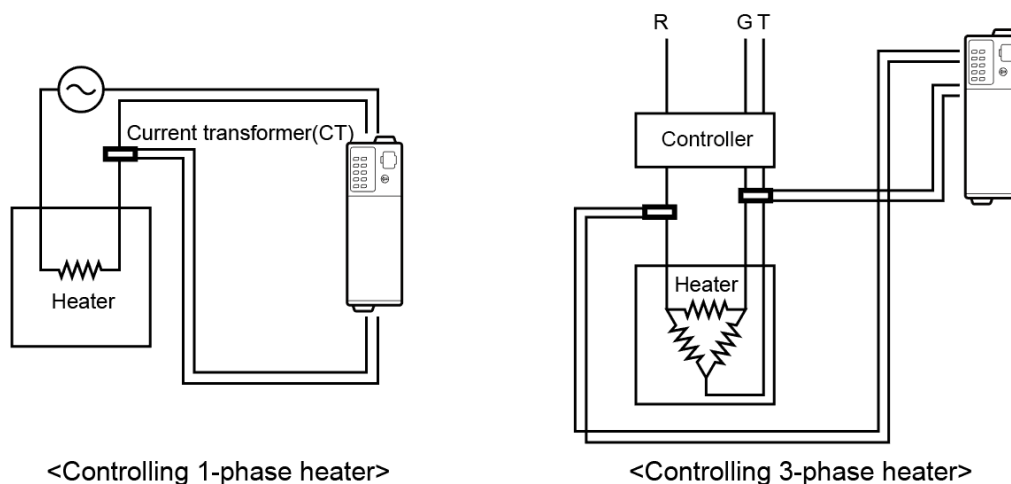

Select the module address and CT terminal no. for connecting CT using heat break alarm.

In this case CT which is connected the same address module is available. When CT input additionally is required for 3-phase load, etc, use the CT input option module(TMHCCT).

One channel is available to set total 4 alarms (Event 1 to 4). For using 3-phase load, set two events as heater break alarm for 3-phase heater break detection.

**Note**

- When control output of temperature controller turns ON, heater break detection executes. When it turns OFF, it does not detect even though heater break.
- It is available only for Relay, SSR drive output models not for the current output model.
- When control output ON time is min. 250ms (1 sec. for TMHCT module), it does not detect current.
- It is recommended to use the dedicated Autonics current transformer (CT).
- Alarm output option is selectable among standard alarm (AL-A), alarm latch (AL-B).

▪ **CT address**

Set the module address which has connected CT for heater break alarm.

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	CT Target	0, 65 to 80	0	-

For using the CT of TMH2/4, set the address as '0'.

Set the address by unit address switch setting of TMHCT unit address as below.

Module \ SW																
	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
TMHCT	80	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79

▪ **CT input**

Set CT input for heater break alarm.

Setting group	Parameter	Set range		Factory default	Unit
Event Setting	CT Input	TMH2	0: CT1 to 3: CT4	CH1: CT1	-
		TMH4	0: CT1 to 3: CT4		
		TMHCT	0: CT1 to 7: CT8		

▪ Heater break detection set value

Set the alarm output value (Alarm Low_Ch) as the reference value for heater break detection.

Set value calculation


: Heater break detection set value = {(Heater current value for normal operation) + (Heater current value for heater break)}/2

Setting group	Parameter	Set range	Factory default	Unit
Event Setting	Alarm Low	0 (OFF), 1 to 500 (0.1 to 50.0)	0 (OFF)	A




Ex.

- For operating 1-phase 1 heater unit (heater capacity: 200VAC, 1Kw, 5A), normal operation heater current value is 5A, and heater break current value is 0A. The set value is $(5A + 0A)/2 = 2.5A$. When the measured heater current value is below the set value 2.5A for heater break detection, it considers heater break and alarm outputs.

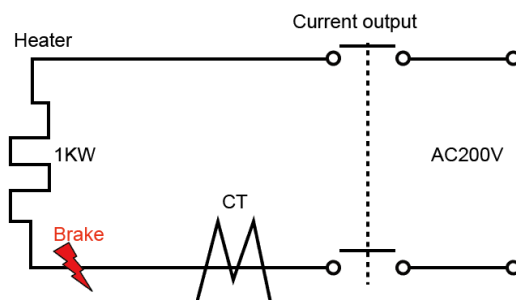


- For operating 1-phase 2 heater units (heater capacity: 200VAC, 1Kw, 5A), normal operation heater current value is 10A ($5A \times 2$ units), and, if one heater break, heater current value is 5A. The set value is $(10A + 5A)/2 = 7.5A$. When the measured heater current value is below the set value 7.5A for heater break detection, it considers heater break and alarm outputs.

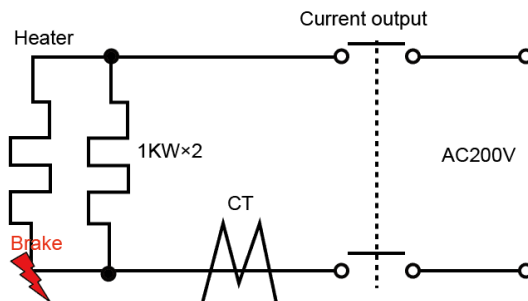


- For operating 3-phase 1 heater unit (heater capacity: 200VAC, 2Kw, 10A) with delta connection, normal operation heater current value is $17.3A(\sqrt{3} \times 10A)$.

When heater breaks as below, min. heater current value is $10A \times \sqrt{3} \times \frac{\sqrt{3}}{2} = 15A$.

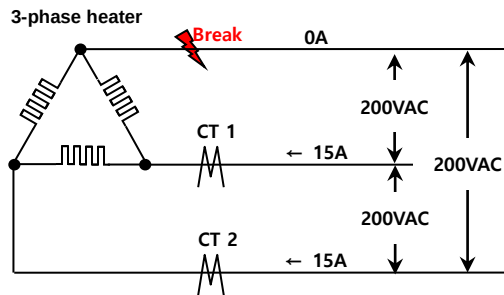

When heater breaks as below, min. heater current value is $10A \times \sqrt{3} \times \frac{1}{\sqrt{3}} = 10A$.

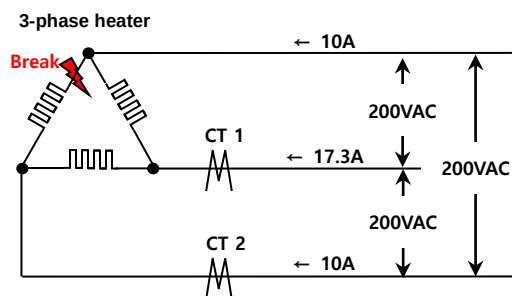


In these cases, the set values (normal operation heater current value + heater break heater current value)/2 are $(17.3+15)/2=16.1A$, $(17.3+10)/2=13.65A$ and set as 16.1A.


When the measured heater current value is below the set value 16.1A for heater break detection, it considers heater break and alarm outputs.

- For operating 3-phase 1 heater unit (heater capacity: 200VAC, 2Kw, 10A) with star connection, normal operation heater current value is 5.8A ($1/\sqrt{3} \times 10A$).

When heater breaks as below, min. heater current value is $10A \times \frac{1}{\sqrt{3}} \times \frac{\sqrt{3}}{2} = 5A$.

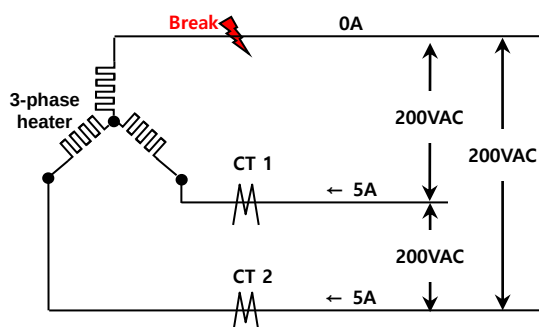


When heater breaks as below, min. heater current value is $10A \times \frac{1}{\sqrt{3}} \times \frac{\sqrt{3}}{2} = 5A$.

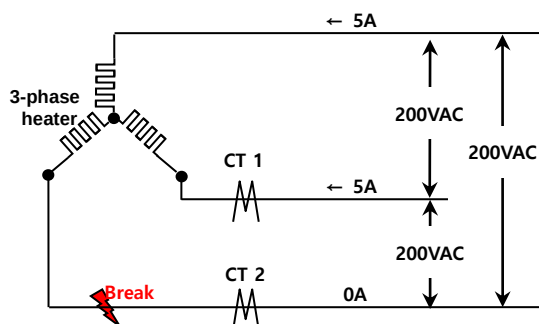


In these cases, the set values (normal operation heater current value + heater break heater current value)/2 are $(5.8+5)/2=5.4A$ and set as 5.4A. When the measured heater current value is below the set value 5.4A for heater break detection, it considers heater break and alarm outputs.

- For operating 3-phase 1 heater unit (heater capacity: 200VAC, 2Kw, 10A) with V connection, normal operation heater current value is 10A.

When heater breaks as below, min. heater current value is $10A \times \frac{1}{2} = 5A$.

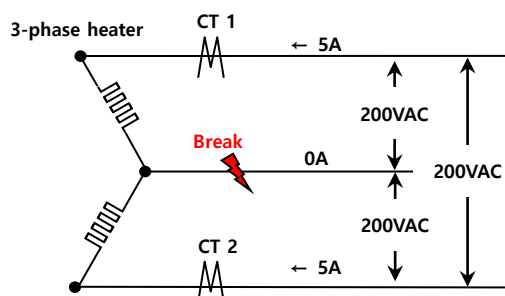

When heater breaks as below, min. heater current value is 0A.

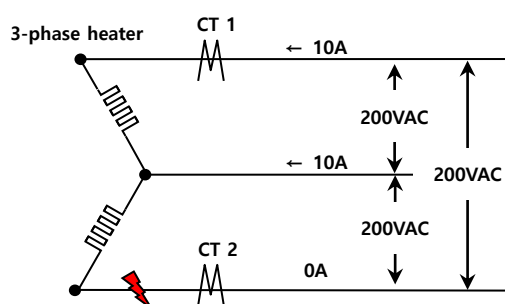

In these cases, the set values (normal operation heater current value + heater break heater current value) / 2 are $(10+5)/2=7.5A$, $(10+0)/2=5A$ and set as 7.5A. When the measured heater current value is below the set value 7.5A for heater break detection, it considers heater break and alarm outputs.

8.5.14 Alarm output deactivation TMH2/4

Available only if alarm output option is set to alarm latch or alarm latch and standby sequence1, alarm latch and standby sequence2. It can be set to turn OFF alarm output when alarm output is ON, alarm output conditions have been removed, or an alarm output deactivation signal that is greater than the minimal signal band is received. (However, alarm output deactivation is unavailable when alarm conditions remain in effect.)

- Use digital input terminal**

Digital input terminal is available to use alarm output deactivation function.



Note

For detailed information on digital input terminal (DI), refer to '8.9.2 Digital input terminal'. After deactivating the alarm output, it will function normally for the next alarm output occurrence.

▪ **Use parameter setting**

- NO: Alarm output deactivation is not operated.
- YES: Alarm output deactivation is executed. After that, the parameter setting value is initialized to 'NO'.

Setting group	Parameter	Setting range	Factory default	Unit
Event setting	Alarm reset	0: NO, 1: YES	0: NO	-

8.6 Monitoring

8.6.1 Control output MV monitoring TMH2/4

Monitors and displays the present control output MV.

8.6.2 Heating MV monitoring TMH2/4

Displays the current heating MV during heating control or heating and cooling control. Users may manually adjust the MV to control the temperature.

Setting group	Parameter	Display range	Factory default	Unit
Monitoring	Heating_MV	0 to 1000 (0.0 to 100.0)	-	%

8.6.3 Cooling MV monitoring TMH2/4

Displays the current cooling MV during cooling control or heating and cooling control. Users may manually adjust the MV to control the temperature.

Setting group	Parameter	Display range	Factory default	Unit
Monitoring	Cooling_MV	0 to 1000 (0.0 to 100.0)	-	%

8.6.4 Heater current value monitoring TMH2/4

This function monitors and displays the current value of the heater (load) operated by the control output via the CT. Current Transformer.

Setting group	Parameter	Display range	Factory default	Unit
-	CT1/2/3/4_Heater Current	0 to 500 (0.0 to 50.0)	-	A

**Note**

If the control output is set to current output, the heater current value monitoring function is not available.

8.6.5 CT input value monitoring TMHCT

Displays the measured current value via current transformer (CT) by each CT input terminal.

Setting group	Parameter	Display range	Factory default	Unit
-	CT1/2/3/4/5/6/7/8_Heater Current	0.0 to 50.0	-	A

8.6.6 CT input value indicators channel TMHCT

The indicator of TMHCT turns ON by the input value of CT.

Indicator		Status	CT input
LED 1	LED 2	PWR (green)	ON
		(red)	ON (40.1 to 50.0A)
PWR	LED 1	(red)	ON (30.1 to 40.0A)
		(red)	ON (20.1 to 30.0A)
		(red)	ON (10.1 to 20.0A)
	LED 2	(yellow)	—
		(yellow)	ON (40.1 to 50.0A)
		(yellow)	ON (30.1 to 40.0A)
		(yellow)	ON (20.1 to 30.0A)
		(yellow)	ON (10.1 to 20.0A)

Set at LED 1: CT Input Value Indication Lamp1 / LED 2: CT Input Value Indication Lamp2.

Setting group	Parameter	Set range	Factory default	Unit
Common	CT Input Value Indication Lamp1	0: CT1, 1: CT2, 2: CT3, 3: CT4,	0: CT1	-
	CT Input Value Indication Lamp2	4: CT5, 5: CT6, 6: CT7, 7: CT8	1: CT2	-

8.7 RUN/STOP TMH2/4

Users may run or stop control output by force while in Run mode.

The STOP command stops the control output. Alarm output, other than control output, maintains the values as set in the alarm output setting at the point of STOP.

This feature can be enabled by configuring parameters. The digital input terminals (TMH DI-1, DI-2 or TMHE) can be assigned to the run/stop feature.



Note

- Modifications on RUN/STOP are allowed even when in open state. The STOP status will remain in effect after shutting down the controller and powering it back on.
- When STOP is in effect, MV based on the control output at the point of STOP (Stop.MV) is displayed, and continues to be displayed even if a sensor break occurs.
- The run/stop setting remains in effect after turning power back on.

8.7.1 STOP, Control output

This sets the control output value upon a STOP. With ON/OFF control, select between 0.0 (OFF) and 100.0 (ON). In PID control, you can directly choose MV within a range of 0.0 to 100.0.

Setting group	Parameter	Set range			Factory default	Unit
Control Setting	Stop MV	Heating	PID	0 to 1000 (0.0 to 100.0)	0(0.0)	%
		Cooling	ON/OFF	0/1000 (0.0/100.0)		
		Heating & Cooling	PID-PID	-1000 to 1000 (-100.0 to 100.0)		
			PID-ON/OFF	-1000 (-100.0), 0 to 1000 (0.0 to 100.0)		
			ON/OFF-PID	-1000 to 0 (-100.0 to 0.0), 1000 (100.0)		
			ON/OFF-ON/OFF	-1000/0/1000 (-100.0/0.0/100.0)		



Note

- When set to STOP, the preset MV is used for output ignoring the MVs from ON/OFF control and PID control.
- For heating&cooling control, cooling MV is set as -.

8.7.2 STOP, Alarm output

Enable or disable alarm output upon a stop.

- CONTINUE: Alarm output operates normally.
- OFF: Alarm output ceases along with a stop under all conditions. (However, reverting to Run mode after a stop in alarm latch or alarm latch and standby sequence restores the alarm output to the previous state.)

Setting group	Parameter	Set range	Factory default	Unit
Control Setting	Stop Alarm Out	0: CONTINUE, 1: OFF	0: CONTINUE	-

8.7.3 POWER ON, RUN/STOP

Enable or disable control output when turning on the power.

- RUN: The control output operates normally.
- STOP: The control output does not operate at the first time. It is needed to change the setting value of 'RUN_STOP' parameter to 'RUN' in operating group to operate the control output.

Setting group	Parameter	Set range	Factory default	Unit
Control Setting	POWER ON, RUN/STOP	0: RUN, 1: STOP	0: RUN	-

8.7.4 Alarm Out, RUN/STOP

Enable or disable control output when the alarm output is activated.

- RUN: The control output operates normally.
- STOP: The control output does not operate. It is needed to change the setting value of 'RUN_STOP' parameter to 'RUN' in operating group to operate the control output.

Setting group	Parameter	Set range	Factory default	Unit
Control Setting	Alarm Out, RUN/STOP	0: RUN, 1: STOP	0: RUN	-

8.8 Multi SV TMH2/4

Multi SV function allows users to set multiple SVs and save each setting in SV0 to SV3. User can change Multi SV number or select desired SV using external DI (Digital Input, DI-1, DI-2) terminal.

This feature supports up to four SVs which can be independently configurable.

8.8.1 Number of multi SVs

You can set the number of Multi SVs. Select the number of Multi SVs from the controlled subject.

Setting group	Parameter	Set range	Factory default	Unit
Operating	Multi SV	0: 1EA, 1: 2EA, 2: 4EA	0: 1EA	-

Set value	Number of multi SVs
1 EA	SV-0
2 EA	SV-0, SV-1
4 EA	SV-0, SV-1, SV-2, SV-3,

8.8.2 Multi SV No.

You can select the SV to desired control. The SV No. selection range varies according to the number of multi SVs.

Setting group	Parameter	Set range	Factory default	Unit
Operating (Control operation)	Multi SV No	0: SV-0, 1: SV-1, 2: SV-2, 3: SV-3	0: SV-0	-



Note

When setting digital input as Multi SV, Multi SV No. parameter does not set by communication. The set value is changed by digital input terminal input.

8.8.3 Multi SV

Designate the value of each SV for Multi SVs.

Setting group	Parameter	Set range	Factory default	Unit
Operating (Control operation)	SV-0 to SV-3	SV low limit to SV high limit	0	Temperature: °C, °F Analog: Digit

8.9 Digital input TMH2/4

8.9.1 Digital input target address

Set module address for receiving digital input signal.

Setting group	Parameter	Set range	Factory default	Unit
Option Setting (Digital input setting)	DI Target	0, 49 to 64	0	-

When setting as '0', TMH2 uses internal digital input and TMH4 does not use digital input.

Set the address by unit address switch setting of TMHE as below.

Module \ SW																
	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
TMHE	64	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63

8.9.2 Digital input terminal

When send the signal to the external digital input terminal, the settings of the digital input ☐_Func parameter will perform. When powers on, it will activate after checking the digital input terminal.

Setting group	Parameter	Set range	Factory default	Unit
Digital Input Setting	Digital Input 1/2/3/4/5/6/7/8 Func	0: OFF, 1: STOP, 2: AL-RESET 3: Manual, 4: Multi-SV 5: Remote SV	0: OFF	-

Set value	Description
OFF	No function.
STOP	If the digital input terminal is shorted, the stop feature will perform, but to change run/stop through communication will not perform.
AL-RESET	If digital input terminal is shorted, the forced deactivation of alarm output will perform, but to deactivate the alarm output through communication will not perform.
Manual	If digital input terminal is shorted, the manual control feature will perform, but to change auto/manual control through communication will not perform.
Multi-SV	By combinational logic of the digital input, it is possible to select multi SV NO. (SV-0 to SV-3), but it is not possible to select multi SV NO. through communication.
Remote SV	If digital input terminal is shorted, the remote SV feature will be on and

Set value	Description
	the terminal is opened, it will be off. To change RSV function parameter through communication will perform.

**Note**

- If digital input terminals setting are same, it operates at OR condition and releasing is at AND condition. (except Multi-SV)
- When operating digital input terminals at the same time, it operates as the priority of control operation.
- For AL-RESET function, it operates by rising edge signal of terminal input. If setting is duplicated, it operates sequentially by terminal input signal order.
- Multi SV (Multi-SV) is selectable only at digital input 1/2.
- In the case one of DI-1 or DI-2 being set for Multi SV, SV-0 is selected as the SV if the terminal's external contact signal is off and SV-1 is selected if the signal is on.
- If both DI-1 and DI-2 are configured for Multi SV, you can select the SV using combinational logic of the terminals. If changes multi SV from 4 to 2, the DI-2 will be automatically turned off. If changes multi SV from 4 to 1, both DI-1 and DI-2 will be turned off.

DI-1	DI-2	Multi SV NO
OFF	OFF	SV-0
ON	OFF	SV-1
OFF	ON	SV-2
ON	ON	SV-3

- Multi SV parameter will be activated only if Multi SV is more than 2.

8.10 Error TMH2/4

The controller diagnoses input signals for errors and displays messages accordingly. These messages inform the user of device problems. Once the cause of the error is solved (sensor connected/return to display range), the error status is released and the device continues to run normally.

- The following conditions may result in errors. When an error occurs, the display LED at the front flashes at 0.5 second intervals.
 - The sensor input is higher than operational temperature range.
 - The sensor input is lower than operational temperature range.
 - Input sensor is disconnected or not connected.



Note

- When power is on, or in standard control or heating mode, the controller outputs 0% if HHHH is displayed and 100% if LLLL is displayed.
- When power is on, or in standard control or cooling mode, the controller outputs 100% if HHHH is displayed and 0% if LLLL is displayed.
- In heating and cooling mode, when power is on or in standard control, heating output is 0% and cooling output is 100% if HHHH is displayed; heating output 100% and cooling output is 0% if LLLL is displayed.
- Output priority in manual control: Heating (Cooling)_MV > Stop_MV > Sensor Error_MV
- Output priority in auto control: Stop_MV > Sensor Error_MV > Heating (Cooling)_MV

8.10.1 Sensor error, MV

This feature sets control output when a sensor open error occurs. Users can configure ON/OFF, MV settings, etc.

Ignores MV by ON/OFF control or PID control, and sends out a control value based on the defined MV.

Setting group	Parameter	Set range			Factory default	Unit
Control Setting	Sensor Error MV	Heating, Cooling	PID	0 to 1000 (0.0 to 100.0)	0 (0.0)	%
			ON/OFF	0/1000 (0.0/100.0)		
		Heating& Cooling	PID	-1000 to 1000 (-100.0 to 100.0)		
			ON/OFF	-1000/0/1000 (-100.0/0.0/100.0)		

8.11 Parameter reset TMH2/4 TMHA TMHE TMHCT TMHC

This option resets all parameters in memory to factory defaults.

Setting group	Parameter	Set range	Factory default	Unit
Communication Setting	Parameter Initialize	YES, NO	NO	-



Note

If selecting "Yes", all parameters will be reset and temperature control will be by factory default.

However, communication parameters are not reset.

9 Simple Error Diagnosis

9.1 Error display

Indicator	Status	
	Disconnected input sensors	Out of temperature range
PWR (red)	ON	
CH ☐ (red) ^{※1}	Flash (for 0.5 sec in turn)	
Communication output (decimal)	Outputs '31000'	Outputs '30000 (high-limit)', '-30000 (low-limit)'
DAQMaster	Displays 'OPEN'	Displays 'HHHH (high-limit)', 'LLLL (low-limit)'

※1.: The applied CH LED indicator flashes.

9.2 Trouble shootings

(1) LED indicators flash (for 0.5 sec. in turn), or external device displays OPEN

- Check input sensor setting.
- Disconnect the power and check the input connection.
- If input is connected, disconnect the input wiring from the temperature controller and short the + and - terminals. Power the temperature controller and check if the external device displays the room temperature. If it does not display the room temperature and continues to display HHHH or LLLL, the controller is broken. Please contact our technical support. (input type is thermocouple)

(2) Output does not operate normally.

- Check that CH indicators for control output operates normally.
- If CH indicators for control output does not operates, check the parameter settings.
- If CH indicators for control output operates, remove the control output connector and check the output.

(3) External device receives no-response or abnormal data.

- Check the communication converter (SCM-38I, SCM-US48I or SCM-US, sold separately).
- Do not install communication converter line and AC power supply lines.
- Use different communication converter power and temperature controller power.
- Indicates damage to internal chip by strong noise. Please contact our technical support. Locate the source of the noise device countermeasures.

(4) Communication does not work between TMH and external device


- Check the communication converter power and connections.
- Check the communication settings.
- Check the temperature controller and external device connections.

10 Comprehensive Device Management Program(DAQMaster)

10.1 Overview

DAQMaster is a comprehensive device management program that can be used with Autonics communication supporting products.

DAQMaster provides GUI control for easy and convenient management of parameters and multiple device data monitoring.

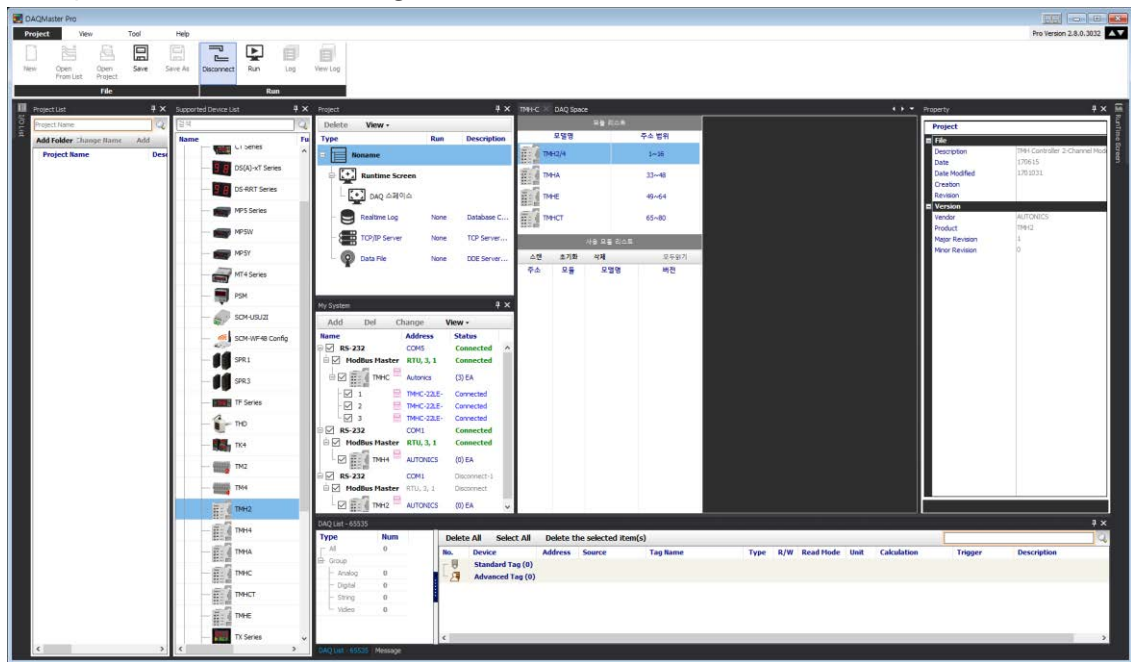

Note

For more information, visit our website (www.autonics.com) to download "DAQMaster user manual".

10.2 Features

(1) DAQMaster Pro Version Feature

- **Data Base**
Database managing system (Access, MySQL, SQL Server, Oracle, SQLite) turns information into database in real-time, making creation and management of database easier.
- **Real-time Logging**
At the set cycle and condition, real-time log file is generated in CSV file.
- **Modbus Device Editor**
You can add the any modbus devices which are not supported at DAQMaster to set and monitor the property and I/O.
- **OPC Client**
It is Interface method for better compatibility among application programs based on OLE/COM and DCOM technology of Microsoft. It provides industry standard mechanism for communication and data conversion between client and server.
- **DDE Client**
It supports communication (IPC) among process embedded in Microsoft Window system, allowing application programs to share and exchange information. This function uses shared memory and provides a common protocol (instruction set and message format) to application programs.

(2) Features

- **Multiple Device Support**
Simultaneously monitor multiple devices and set parameters. Simultaneously connect units with different addresses in a single device. Multiple RS-232 ports are available for communications using Modbus remote terminal unit.
- **Device Scan**
In cases of multiple units (with different addresses) connected together, the unit scan function automatically searches for units.
- **Convenient User Interface**
Freely arrange windows for data monitoring, properties, and projects. Saving a project also saves the screen layout.
- **Project Management**
Saving data as a project file includes added device information, data monitoring screen layouts, and I/O source selection. When you open the project file, the last state of the saving moment will be loaded. Organizing project list makes managing project files easier.


- **Data Analysis**
Performs grid and graph analyses of data files (*.ddf) using data analysis feature of DAQMaster. Saves grid data in .rtf, .txt, .html, or .csv files in Data Grid.
- **Monitoring Data Log**
When monitoring, data log files can be saved in either DAQMaster data files (.ddf) or CSV (.csv) files. Open files saved in .csv format directly from Microsoft Excel. Define log data file naming/saving rules and destination folders to make file management convenient.
- **Tag Calculation Editing**
Read tag value is available to calculate the set formula for the desired value.
- **Print Modbus Map Table Report**
Print address map reports of registered Modbus devices. Modbus map table reports can be saved in html (*.html) and pdf (*.pdf) formats.
- **Multilingual Support**
Supports Korean, English, Japanese, and Simplified Chinese. To add a different language, modify the files in the Lang folder rename, and save.
- **Script Support**
Uses the Lua Script language and deals with different I/O processes for individual devices.

10.3 Connect device


Can check Mac address, save/copy parameter, use user parameter group and set the others.

(1) Connection: add unit

1st Select the device you want to communicate in the "Supported Device List" tab on the upper left side of the window.

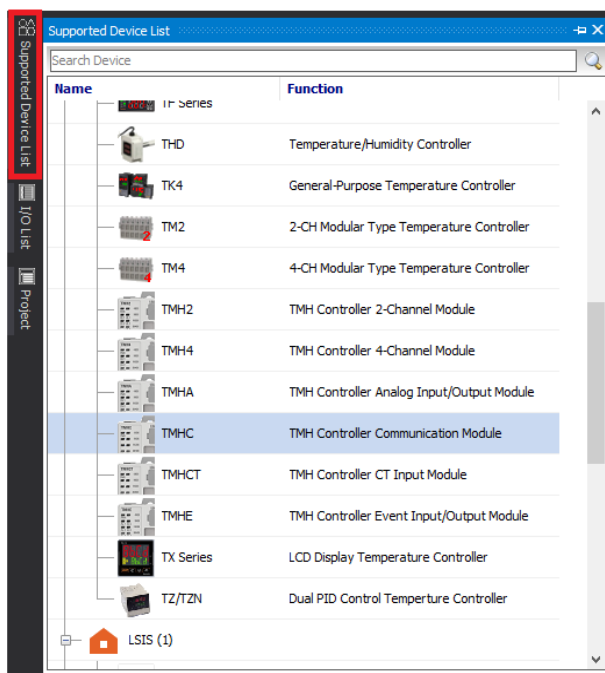


2nd Right-click the name of device you want to add to your system, select [Add to My system] to open "DAQ interface" window.

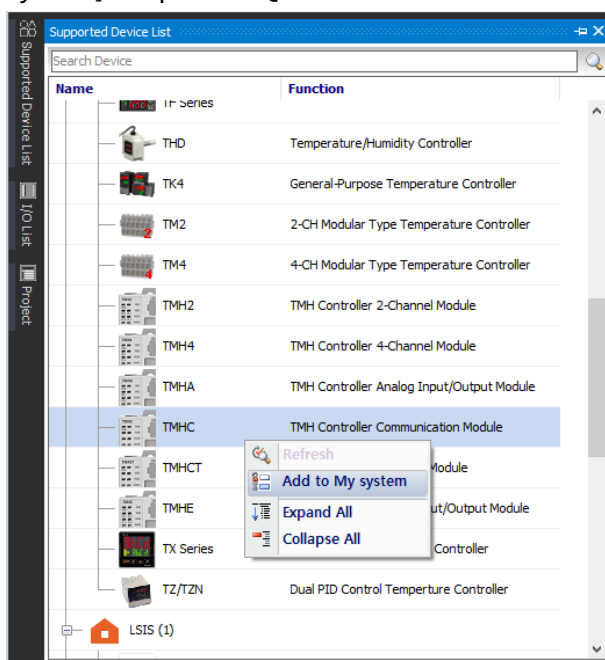


3rd Select RS-232 or TCP/IP in opened "DAQ interface" window and click [Confirm].


Select RS-232 for the ladderless communication module (TMHC-22LE) and TCP/IP for the Ethernet communication module (TMHC-22EE).

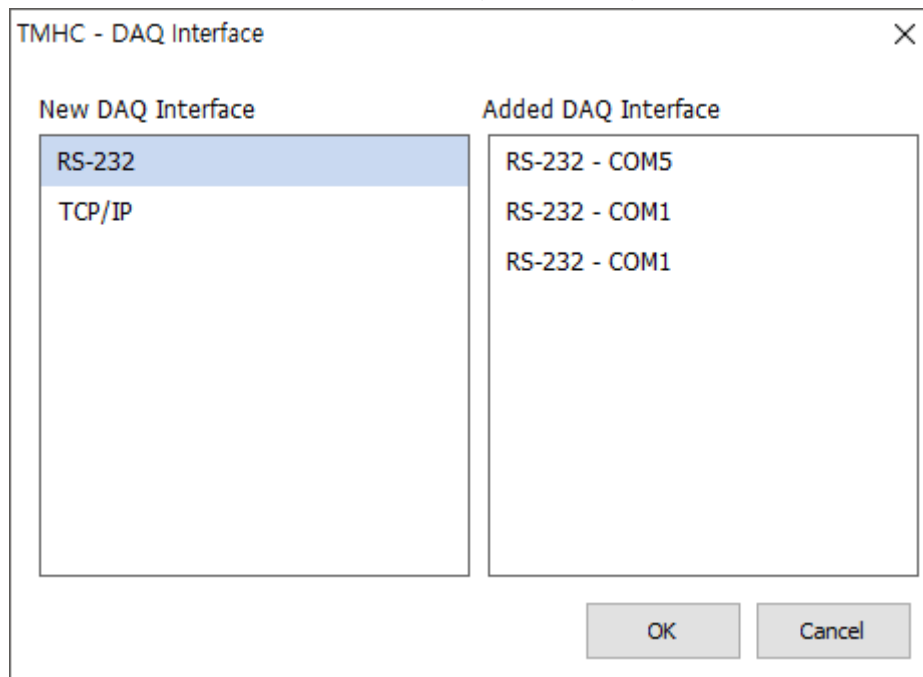


4th If you click RS-232 or TCP/IP on the device added in the "My System" window, current information of communication port is displayed in the "Property" window. Set the correct communication specification. When clicking each item, can change the setting value.

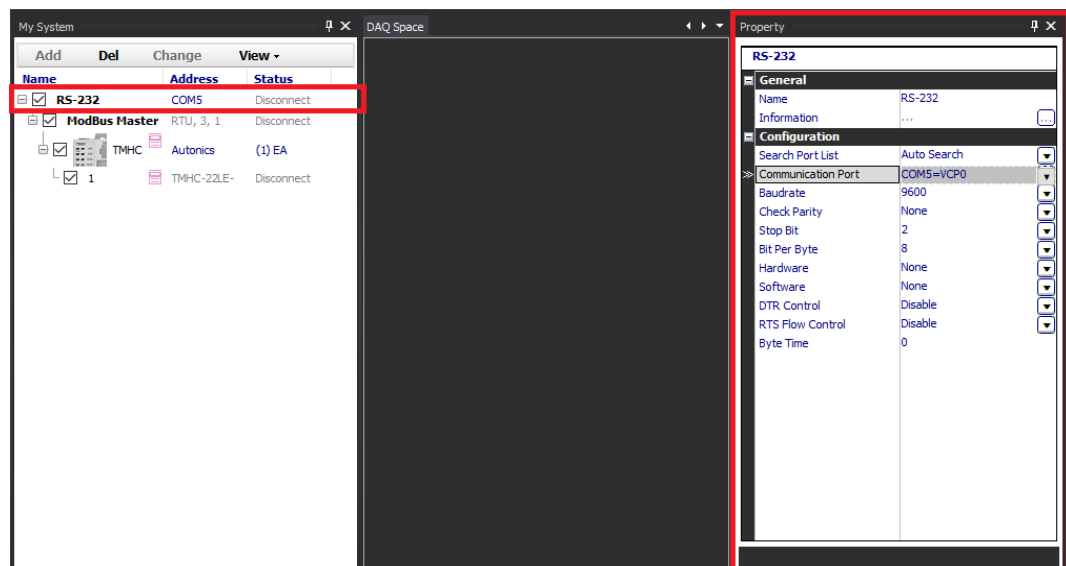


5th To add a unit (address), select the device in “My System”, right-click and select “Add” or click the [Add] button in the upper tab.

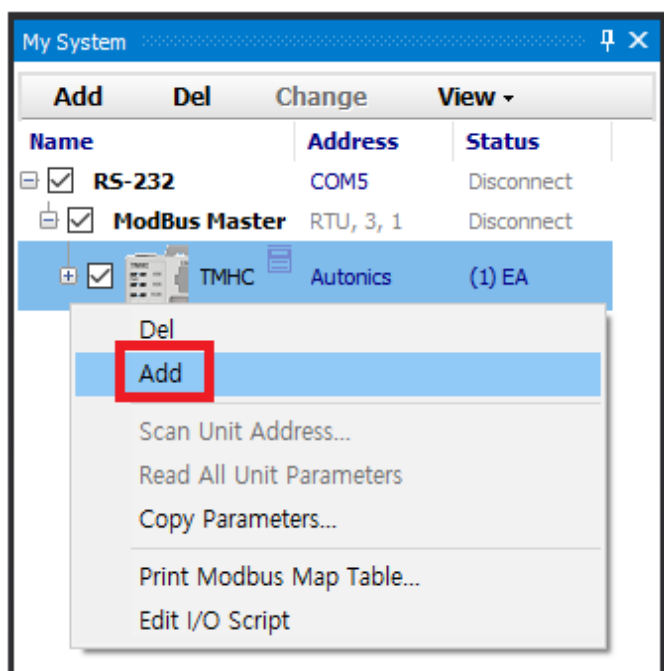


6th Select the unit address set in the device, double-click or click the [>] button to add it and click [OK].

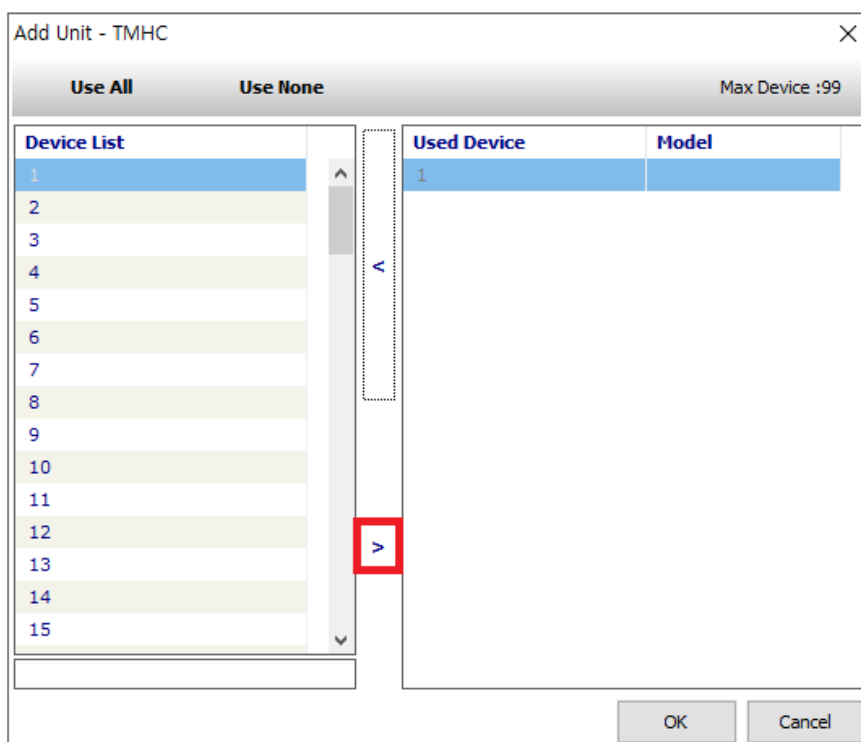

7th If you click [OK], can check the unit (Address 1) added under the device of my system. If you want to add multiple identical devices, click [Add] to add them.

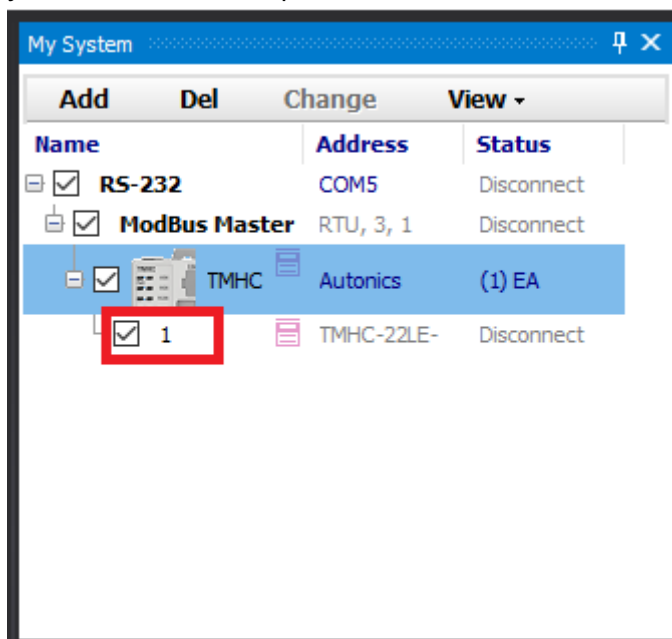

8th Click [Connect] to connect the device. Can check status of connection on “My system”.

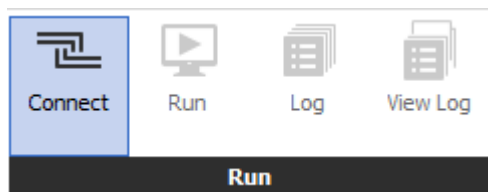


9th For scanning and connecting control/option modules of TMHC, click [Scan] in “Use Module List”.

Module List			
	Module Name	Unit Range	
	TMH2/4	1~16	
	TMHA	33~48	
	TMHE	49~64	
	TMHCT	65~80	
Use Module List			
Scan	Initialize	Delete	ReadAll
Address	Module	Module Name	Version



Note


If [Scan] is not activated, click the [Disconnect] to disconnect and re-connect the module.

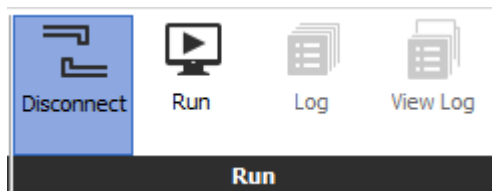


(2) Connection: unit scan

1st Same orders 1st to 4th of '10.3 Connect device - (1) Connection: add unit'.

2nd Click [Connect] on the tool bar to connect. Can check connection status on the "My system" window.

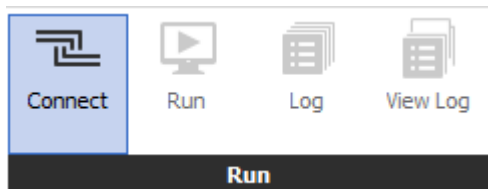

3rd When the device is connected, right-click the device name in "My System" and select [Scan Unit Address].

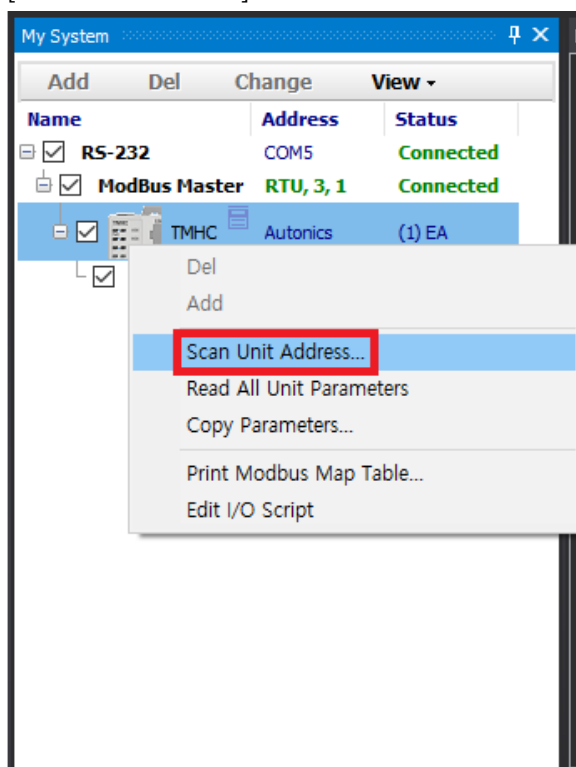

4th When the "Unit Scan" window appears as below, set the range of the unit address to be scanned and click [Start Scan]. The scanned units on the left side and the other searched units on the right side are listed

The left screenshot shows the 'Scan Unit' window with the 'Address Range' set to 1 to 99. The 'Start Scan' button is highlighted. The right screenshot shows the 'Scan Unit' window with the 'Address Range' set to 1 to 3. The 'Scanned Unit' table on the left lists the following units:

No.	Address	Model	Version
1		TMHC-22LE-	SW:10.1, HW:100
2		TMHC-22LE-	SW:10.1, HW:100
3		TMHC-22LE-	SW:10.1, HW:100

The 'Other Scanned Unit' table on the right is empty.

5th Check the unit you want to add from the list and click [OK]. It will be automatically added as shown below and it will be displayed as "Connected"

The 'My System' window shows a list of connected devices with the following columns: Name, Address, and Status.

Name	Address	Status
RS-232	COM5	Connected
ModBus Master	RTU, 3, 1	Connected
TMHC	Autonics	(1) EA
1	TMHC-22LE-	Connected

6th Refer to the 9th step of '10.3 Connect device - (1) Connection: add unit' for the control/option module connected to TMHC for scanning and connection method.




Note

For more information, visit our website (www.autonics.com) to download "DAQMaster user manual"


10.4 Set parameter

Can set the parameters of the device with DAQMaster

1st To set the parameters via DAQMaster, need to read the parameters of the connected unit. In "My System" window, right-click the name of the device and execute [Read All Unit Parameters], or right-click the unit address to execute [Read All Parameters].

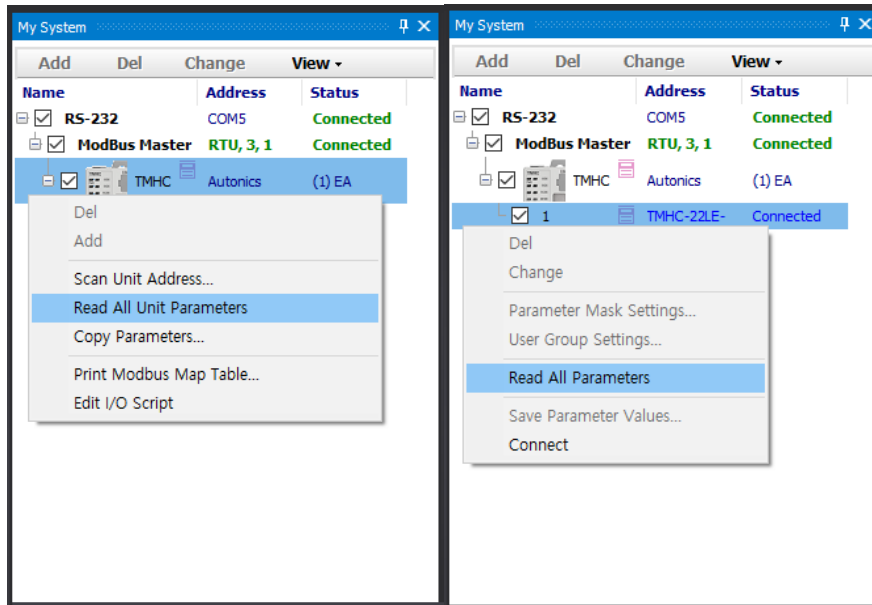

2nd When the reading is completed, the parameter can be checked in the "Property" window and setting parameter is possible.

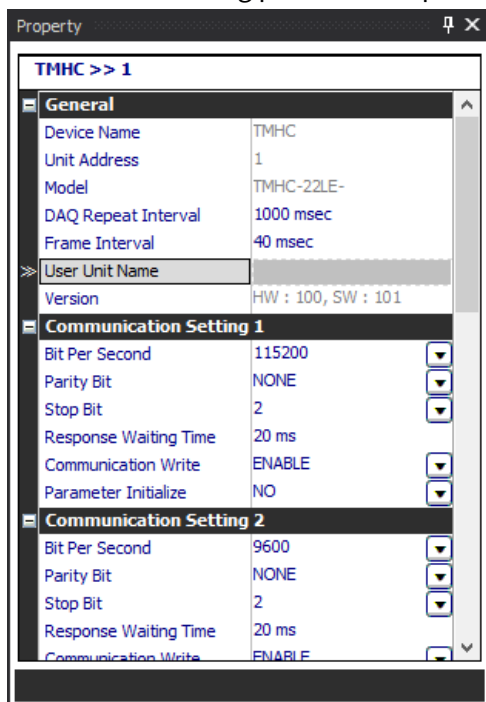

10.5 Mac address

Check Mac address of Ethernet module (TMHC-22EE) via DAQMaster.

(Mac address is the network address for Ethernet communication)

1st Connect the TMH device with the DAQMaster to check the Mac address.

2nd Find the Mac address [Property - Mac Address] on the right side.




10.6 Save parameter


If can not connect multiple models to the DAQMaster at the same time so can not use the parameter copy function, save the settings of a specific device as file and utilize it later.

1st Connect the TMH device which parameters are saved.


2nd Click [Read All Parameters] of the unit device which parameters are saved or [Read All Unit Parameters] of TMH at My System.

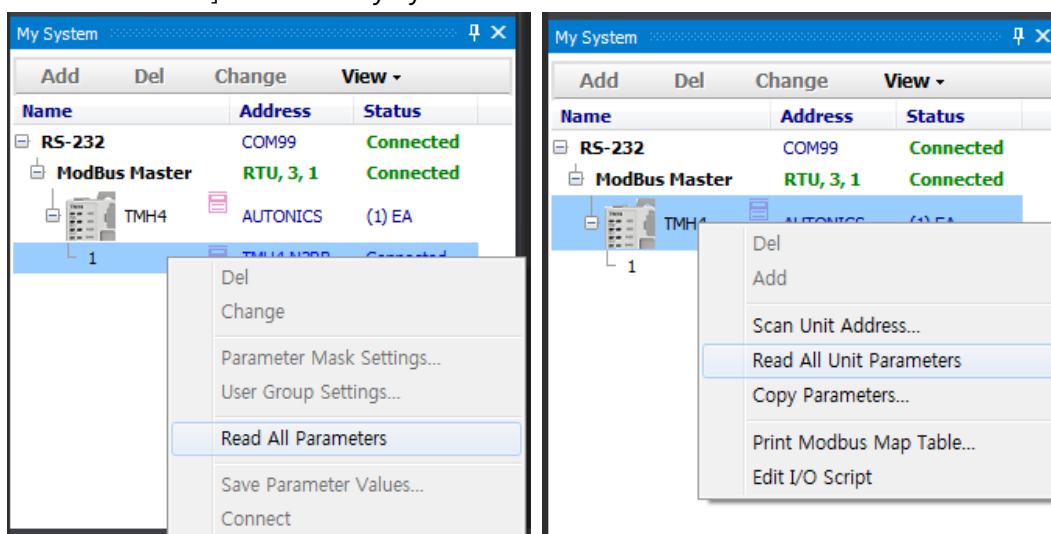


3rd Select TMH at My System and right-click to select [Copy Parameters] and Parameter Copy dialog appears.

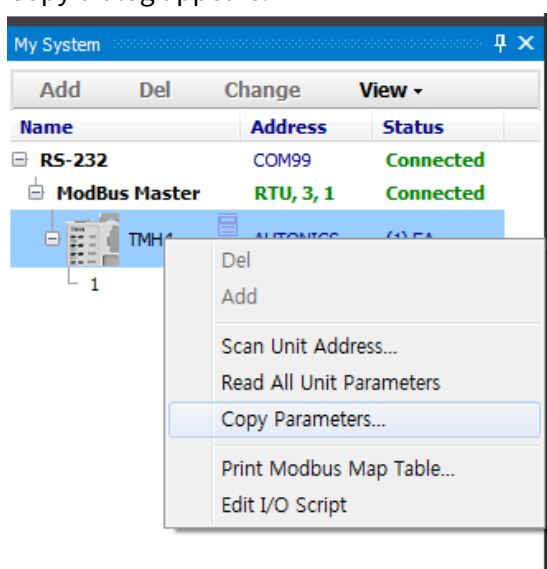

4th Right-click the unit which parameters are saved and select “Parameter Select”. The parameter values of the unit is loaded at the right side of the dialog.

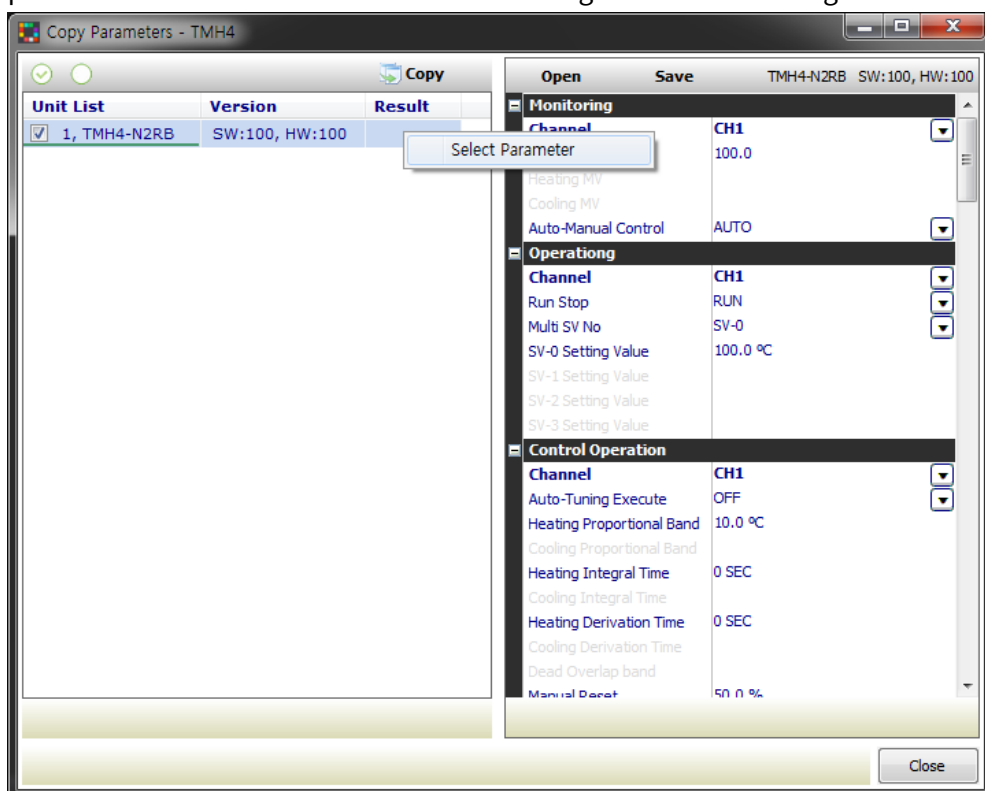

5th Click [Save] to save parameters in *.prx file.

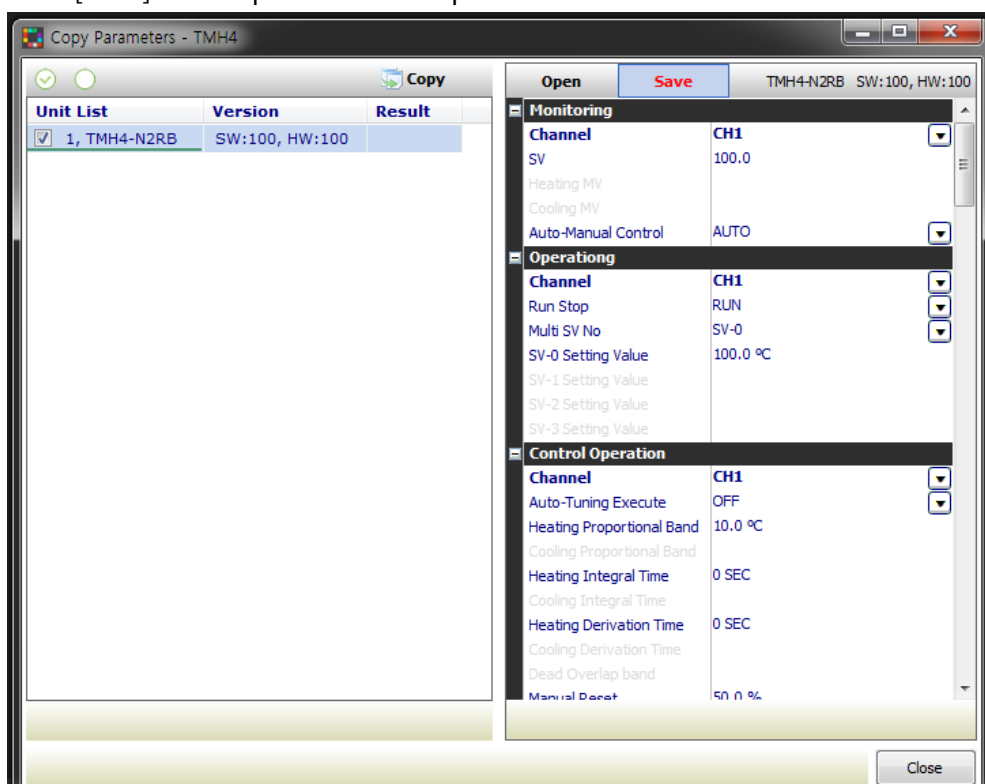

10.7 Copy parameter


To connect the several same model units at once, you can copy the parameters. You can copy the saved parameter file or the parameter settings of the unit to be copying (standard unit) to the other unit to be copied (target units).

(1) To copy the saved parameter file,


1st Same orders 1st to 3rd of the “10.6 Save parameter” values.

2nd Check the units to be copied (target unit) at the check box of the left side of the dialog.


3rd Click [Open] and select the file parameter saved to load the file on the right side of the screen.

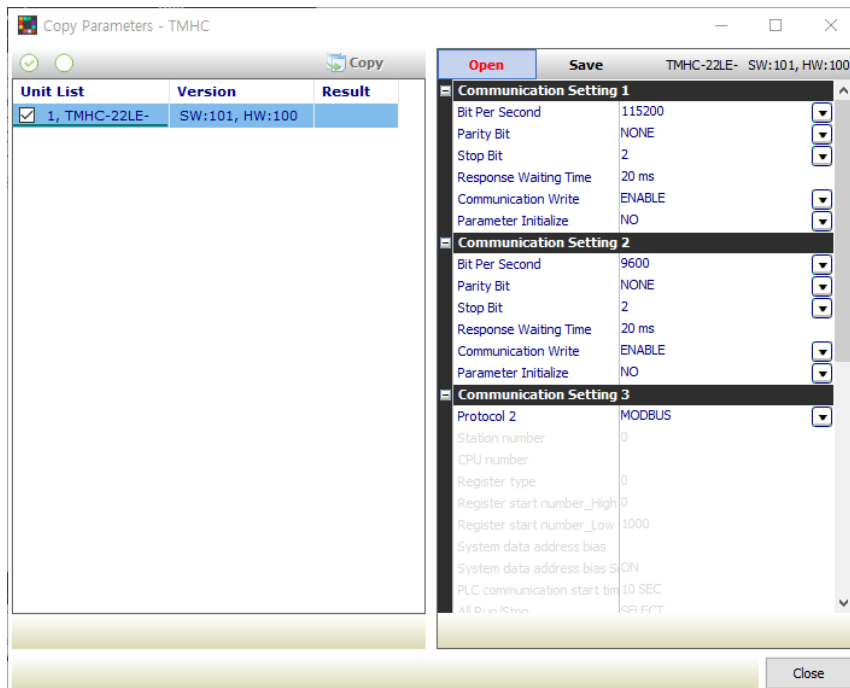

4th Click [Copy] to copy the parameters. “Copying data” message appears on the right.

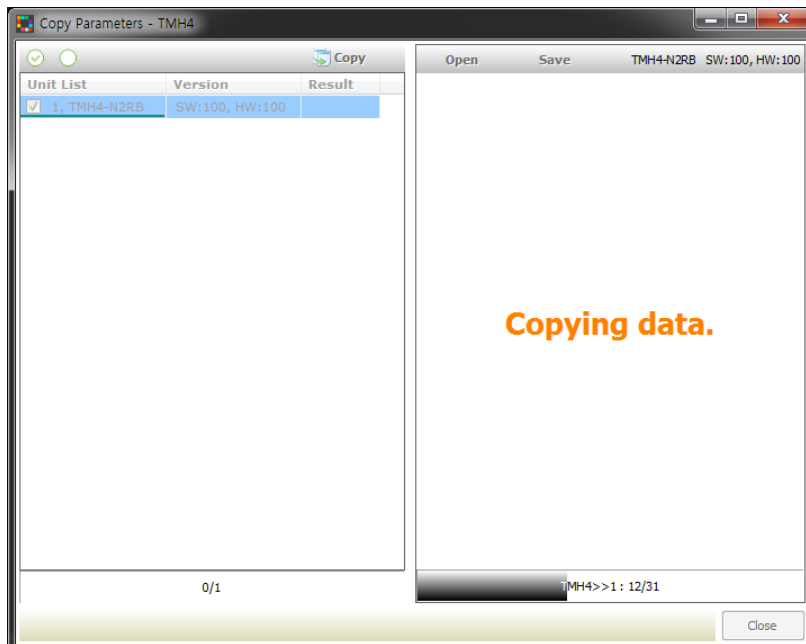

5th When copy process is complete, “Copy Completed!” message appears. Click [OK]. Copy is finished.

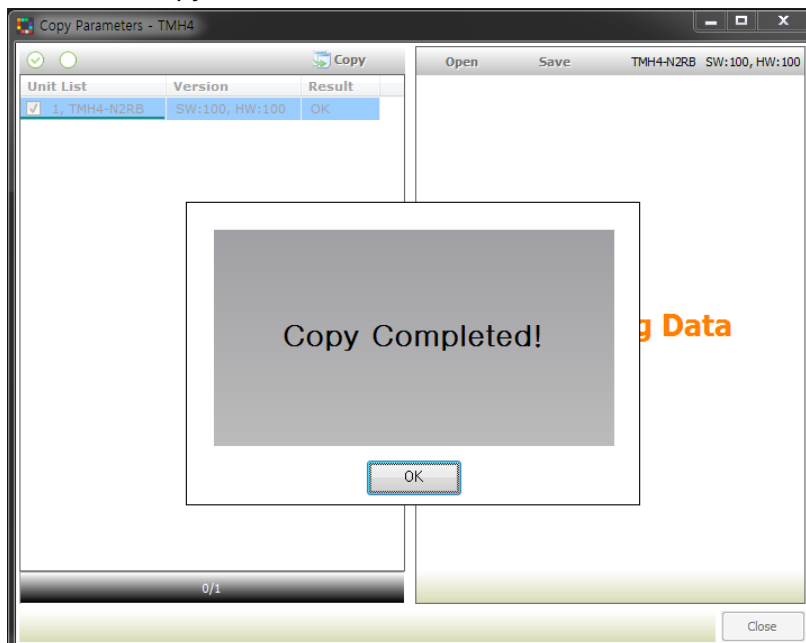


(2) To copy the parameter settings of the unit to be copying (standard) to the other unit to be copied (target),

1st Same orders 1st to 3rd of the '10.6 Save parameter' values.


2nd Check the units to be copying (standard) and to be copied (target) at the check box of the left side of the dialog.

3rd Right-click the unit to be copying (standard) and select "Parameter Select". The parameter values of the unit is loaded at the right side of the dialog.

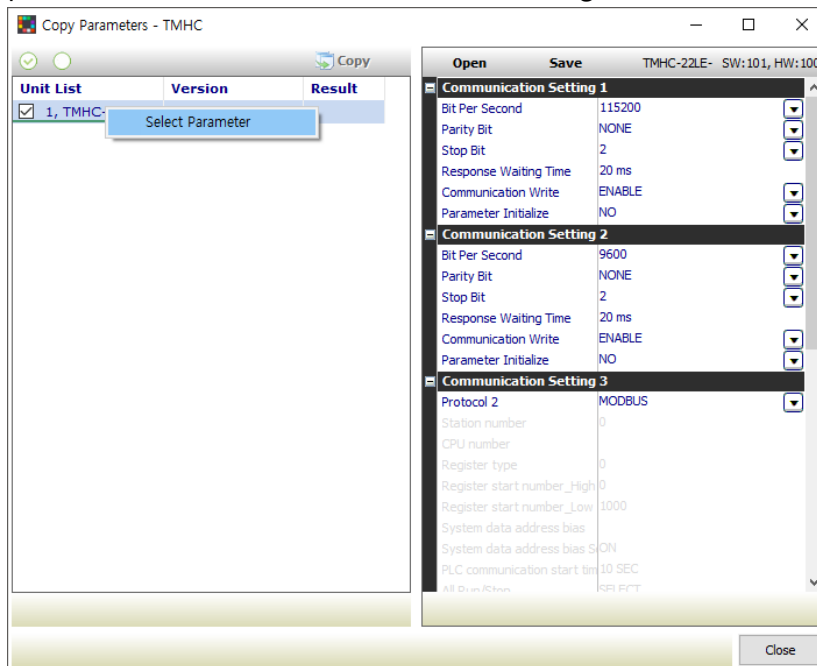


4th Click [Copy] and copy is progressing.

“Copying data” text appears at the right side of the dialog.

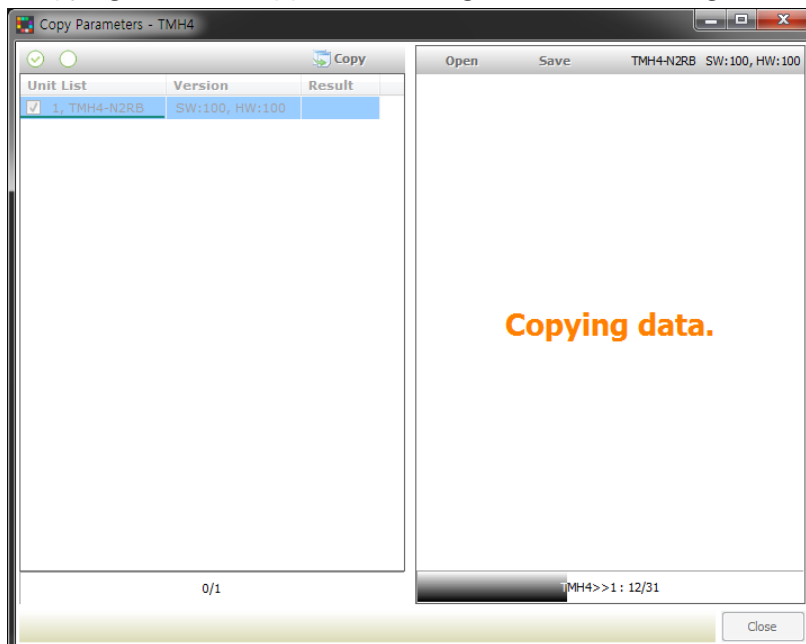

5th After completing copy, 'Copy Complete!' dialog box appears. Click [OK] and copy is finish.

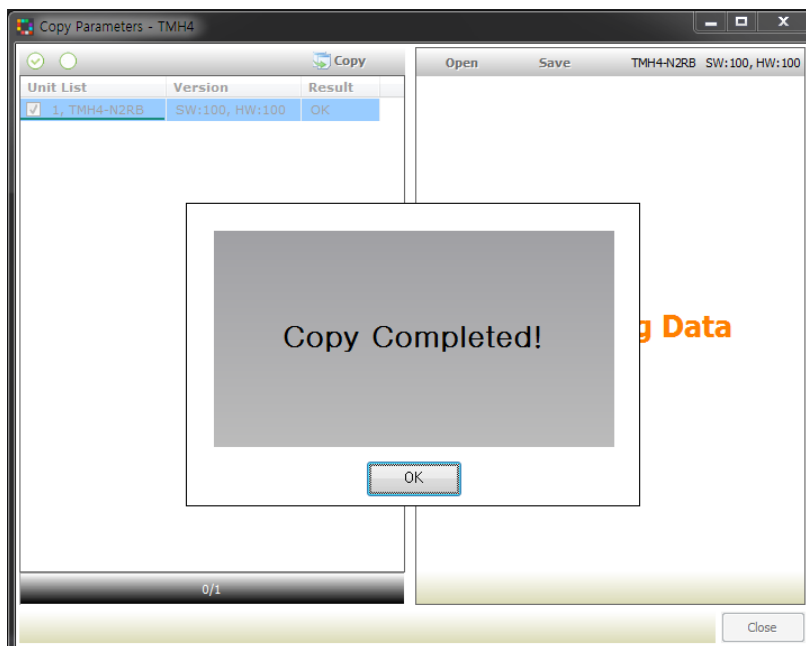

10.8 User group parameter

This feature is able to set the frequently used parameters to the user parameter group. You can quickly and easily set parameter settings.


The user group parameters of PLC ladderless module are configured sequentially and consecutively in the device, so it can improve efficiency of communication with the master device via batch read/write process.

For the information about communication address, refer to manual for communication.

10.8.1 Control/Option module

1st Connects device by referring to “10.3 Connect device”.

2nd After “Read All Unit Parameters” by referring to “10.4 Set parameter”, double click the name or click [...] button at “User Group” of the lowermost “Property” control panel to run UserGroup parameter.

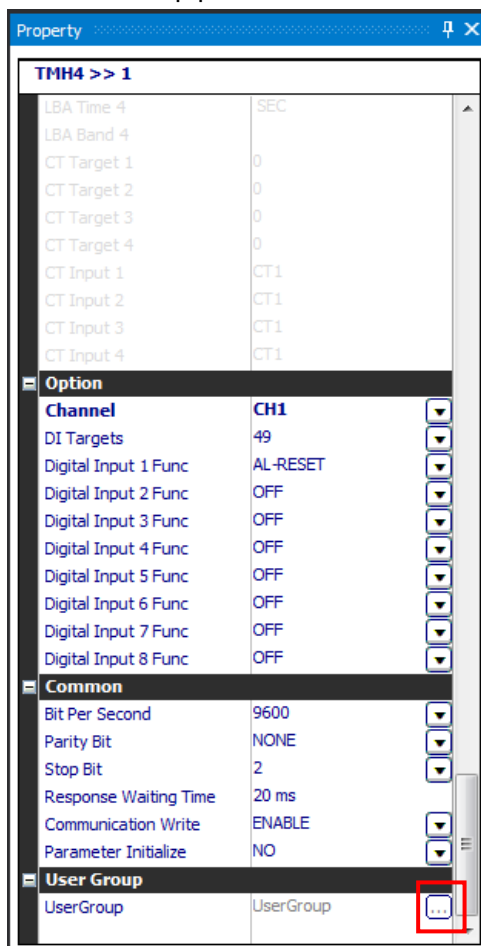

3rd Select the parameter to add the user group and double-click it or click [>]. Set the user group number (1 to 30) and click [Ok].

Parameter User Group Setting

1 Station 1

2 Model Name TMH4(Base : 1)

3 Channel

- CH1
- CH2
- CH3
- CH4

4 Category

- Monitoring
- Operating
- Control Operation
- Initial Setting
- Control Setting
- Alarm Setting
- Option
- Common
- IO Monitoring

5 Parameter List

Parameter
SV
Heating MV
Cooling MV
Auto-Manual Control

6 UserGroup Parameter List

No.	User Parameter	R/W	Address
1	CH1 SV	R/W	1
2	CH2 SV	R/W	1001
3	CH2 Heating MV	R/W	1002
4	CH2 Cooling MV	R/W	1003

7 Clear

8 Ok 9 Cancel

▪ User group setting menu

No	Item	Describes
1	Station	Displays unit address.
2	Model Name	Displays model name of the device.
3	Channel	In case of multi channel model, displays channel number. In case of none channel model, displays 'NONE'.
4	Category	Displays parameter category.
5	Parameter List	Displays device parameters as list. Select the parameter to add the user group and double-click it or click [>].
6	User Group Parameter List	Displays the registered parameters for user group parameter as list. No.: Order of user parameter in device. User: User parameter name of device. Address: User parameter address of device. Select the parameter to delete the user group and double-click it or click the [<] button.
7	Clear	Delete all the set user group parameter.
8	Ok	Apply the set user group parameter to module.
9	Cancel	Close the dialog window.


4th After adding all parameters you want, click [Ok] to set user group parameter.

※ For more information about all address of user group parameter, refer to user manual for communication.


10.8.2 Ethernet communication module

1st Connects device by referring to “10.3 Connect device”.


2nd After “Read All Unit Parameters” by referring to “10.4 Set parameter”, click [Scan] button to scan the using modules.

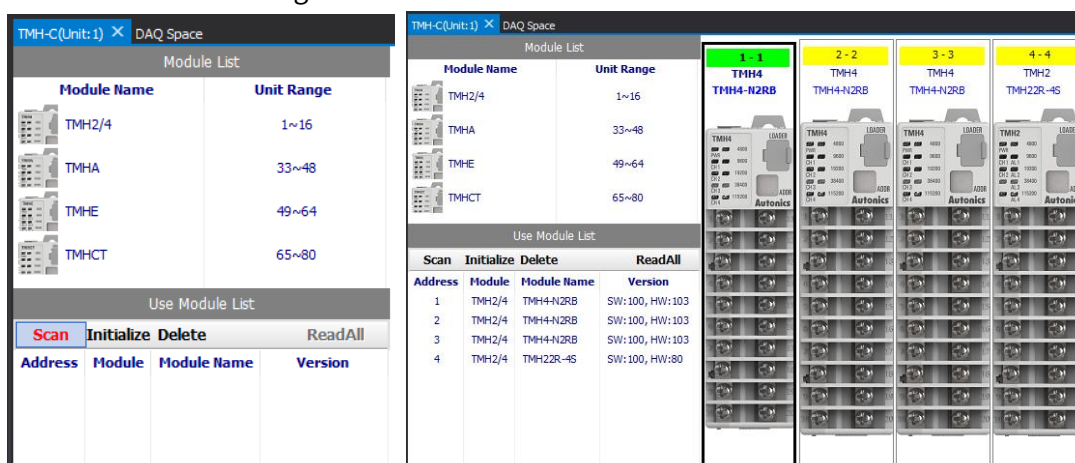


3rd Right click the module to add user group parameter, and click [Read Parameter] button. It is possible to read parameters of all connected modules by clicking [ReadAll] button.

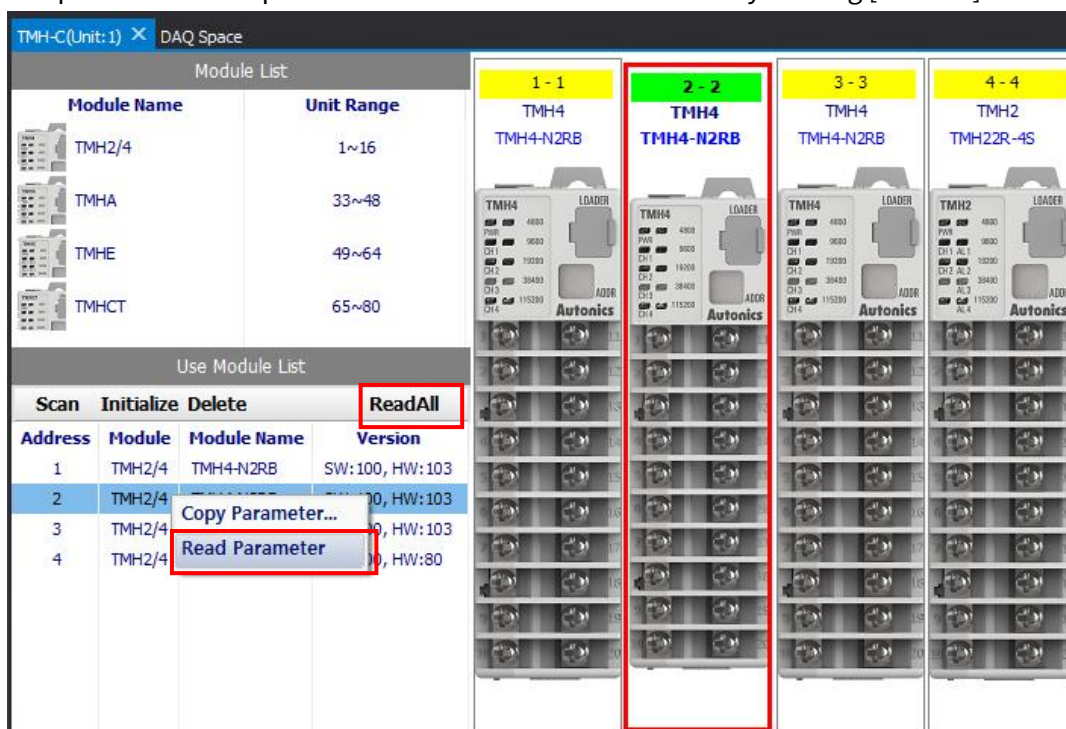

4th After selecting the module to add user group parameter, double click “Property” [User Group] or click [...] button to open “User Group Parameter Setting” window.

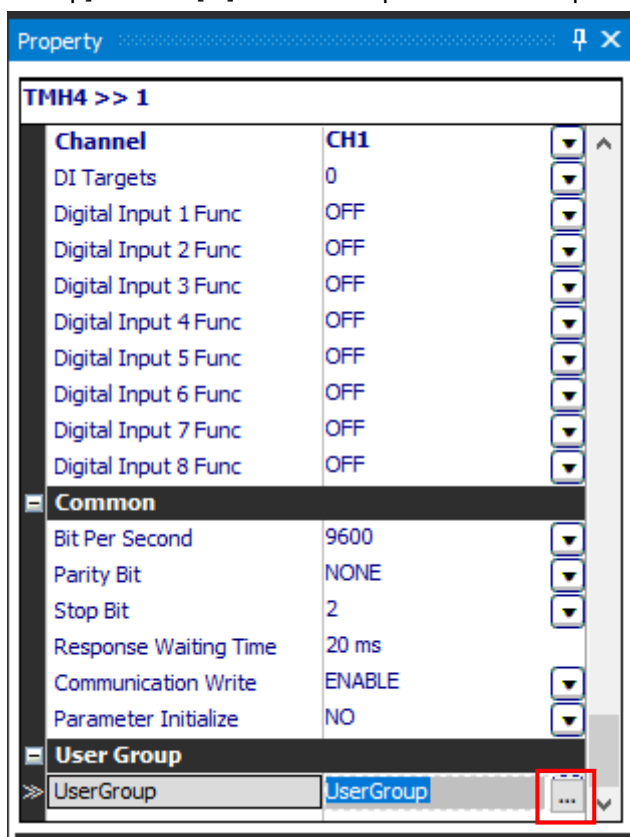

5th Select the parameter to add to user group, and double click the name or click [>] button. To add the parameter of other station number, close the setting window, select the module in “TMH-C” window, and enter the setting window again.

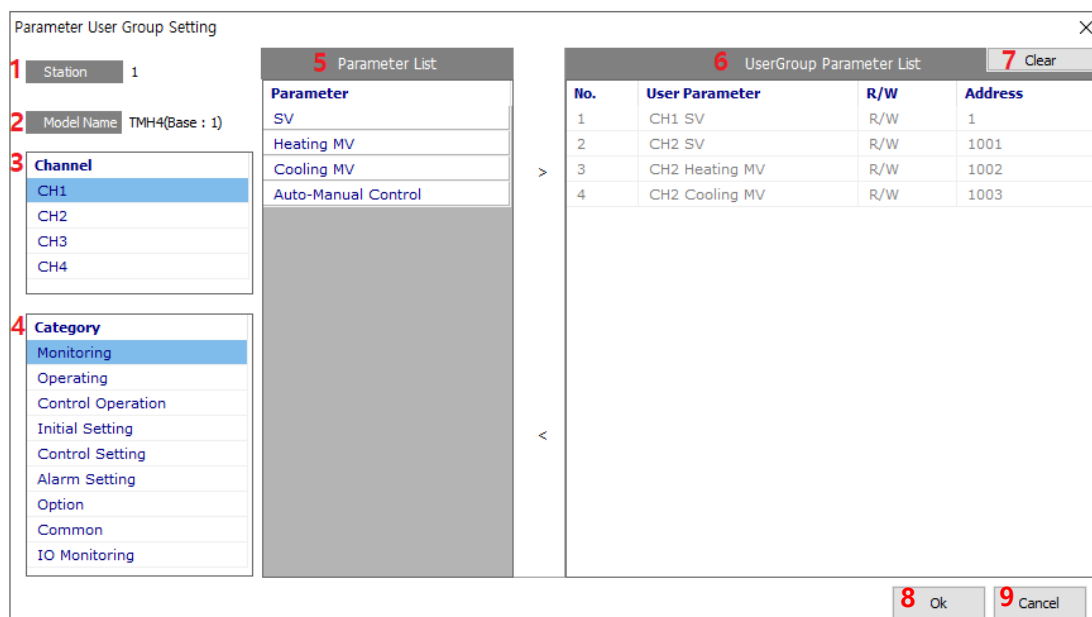

▪ User group setting menu

No	Item	Describes
1	Station	Displays unit address.
2	Model Name	Displays model name of the device.
3	Channel	In case of multi channel model, displays channel number. In case of none channel model, displays 'NONE'.
4	Category	Displays parameter category.
5	Parameter List	Displays device parameters as list. Select the parameter to add the user group and double-click it or click [>].
6	User Group Parameter List	Displays the registered parameters for user group parameter as list. No.: Order of user parameter in device. User: User parameter name of device. Address: User parameter address of device. Select the parameter to delete the user group and double-click it or click the [<] button.
7	Clear	Delete all the set user group parameter.
8	Ok	Apply the set user group parameter to module.
9	Cancel	Close the window.


6th After adding all parameters you want, click [Ok] to set user group parameter.

- ※ For more information about all address of user group parameter, refer to user manual for communication.


10.8.3 PLC ladderless communication module

1st Connects device by referring to “10.3 Connect device”.


2nd After “Read All Unit Parameters” by referring to “10.4 Set parameter”, click [Scan] button to scan the using modules.

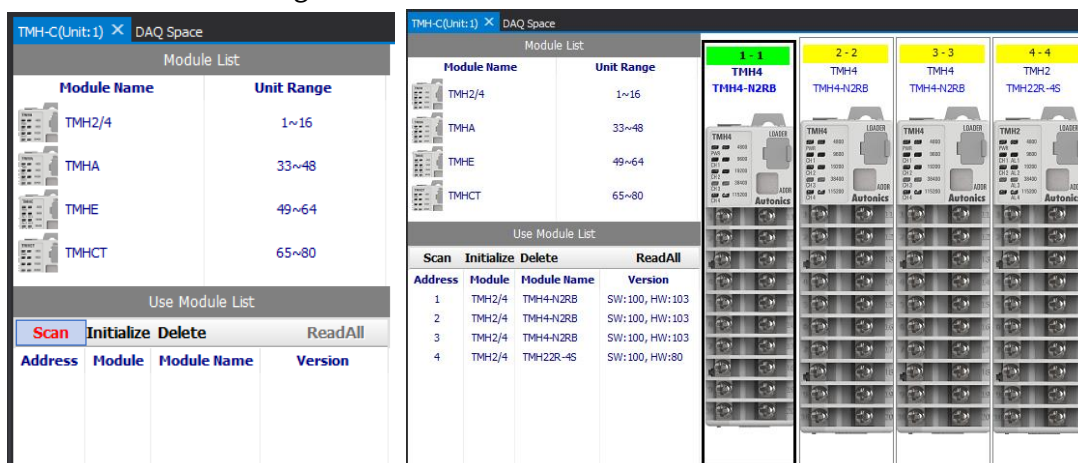

3rd To add user group parameter, click [User Group Parameter Setting] button at the bottom of “TMH-C” – “User Module List” window.

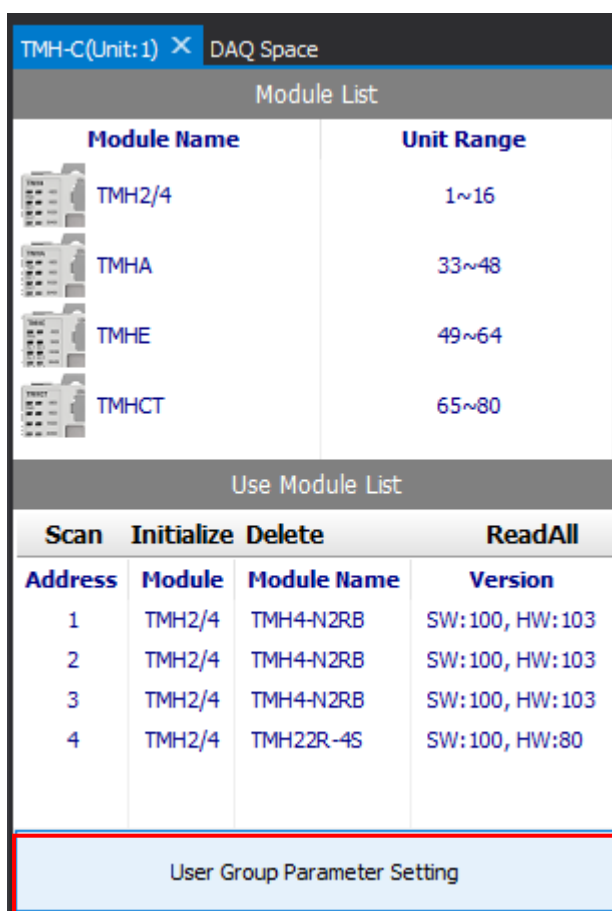

4th Double click the name of parameter to add to “User Group Parameter List”

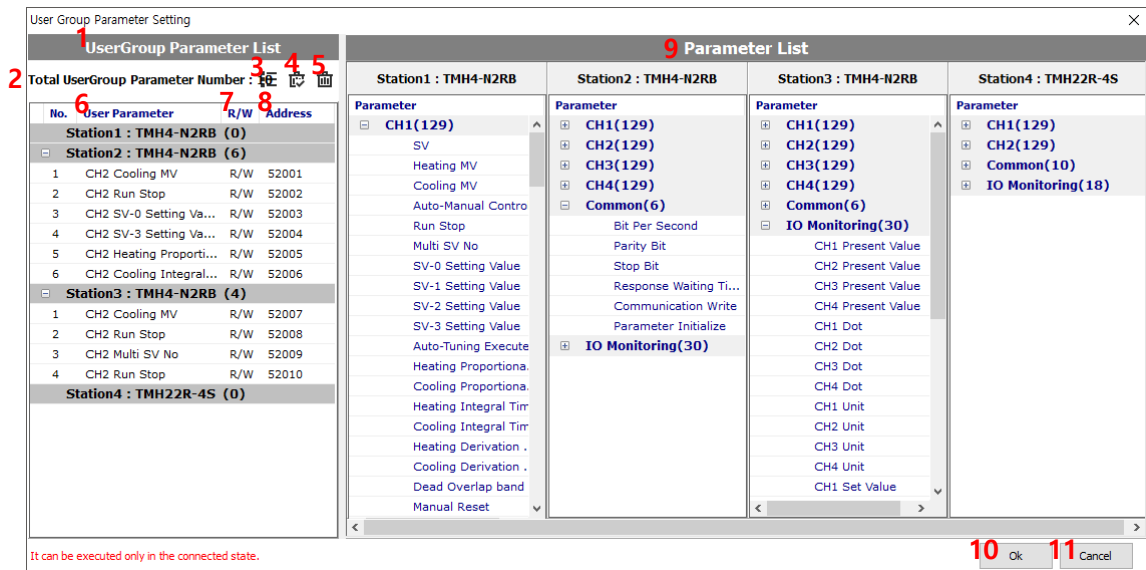

▪ Setting menu

No	Item	Description
1	User Group Parameter List	Displays the list of user group parameters which is added from “Parameter List”
2	Total User Group Parameter Number	Displays a number of user group parameters which are added from “Parameter List”
3		Expands or collapses all the list of user group parameter list.
4		Deletes the selected parameter in “User Group Parameter List”.
5		Deletes all the parameters in “User Group Parameter List”.
6	User Parameter	Displays information for user parameter.
7	R/W	Displays read/write availability of user parameter. R: Read, W: Write, R/W: Read/Write
8	Address	Displays address of user parameter.
9	Parameter List	Displays additional parameters of connected modules. Double click the parameter name to add “User Group Parameter List”.
10	Ok	Apply the set user group parameter to module.
11	Cancel	Close the window.

5th After adding all parameter you want, click [Ok] to set user group parameter.

※ For more information about all address of user group parameter, refer to user manual for communication.

10.9 Firmware Version

If the firmware versions of connected modules are different, extra settings are needed for normal operation. Refer to below details to check the firmware version and change the settings.

10.9.1 Major changed firmware version


- **Control module TMH2/4 [SW version 105]**
Adds 3 parameters (POWER ON RUN/STOP, ALARM OUT RUN/STOP, ALARM RESET)
- **Communication module TMHC-22LE [SW version 104]**
Supports TMH2/4 [SW version 105]

10.9.2 Check firmware version

- **Control module**

1st Complete connecting the device and scanning the modules to use by referring to “10.3 Connect device”.


2nd It is possible to check the SW (Software) and HW (Hardware) version of firmware in the “Version” of “Use Module List” window.

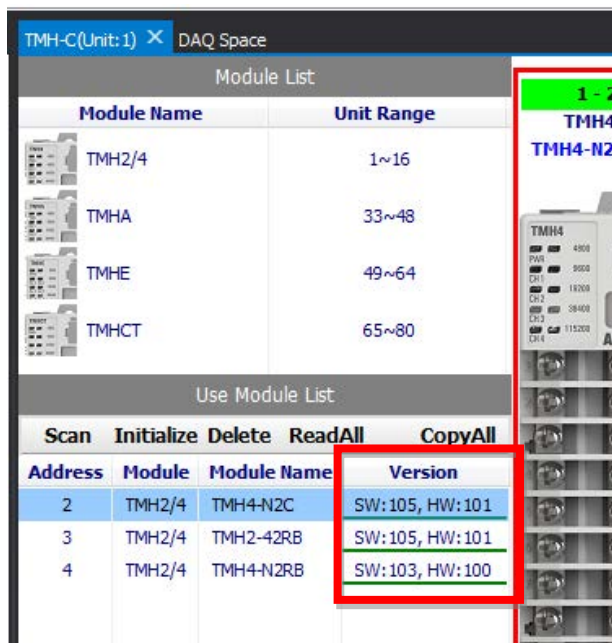

- **Communication module**

1st Complete connecting the device and scanning the modules to use by referring to “10.3 Connect device”.

2nd After selecting the address of module in “My System” window, it is possible to check the SW (Software) and HW (Hardware) version of firmware in the “Version” of “Property” control panel.

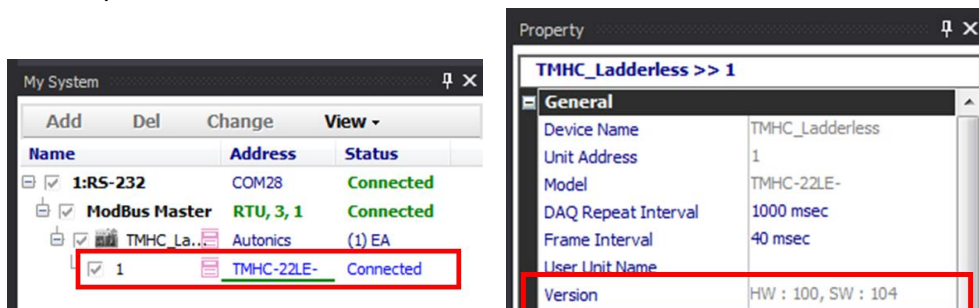

10.9.3 Setting by firmware version combination


- When connecting control module TMH2/4 [SW version 105] or over to communication module TMHC-22LE [SW version 103] or under

The 3 parameters (POWER ON RUN/STOP, ALARM OUT RUN/STOP, ALARM RESET) which are added in TMH2/4 [SW version 105] must be disabled.


- ※ The system using TMHC-22LE [SW version 103] or under cannot use the 3 parameters which are added in TMH2/4 [SW version 105].

1st Complete connecting the device and scanning the modules to use by referring to “10.3 Connect device”.

2nd Select TMH2/4 module SW version 105 or over in “TMH-C” window.

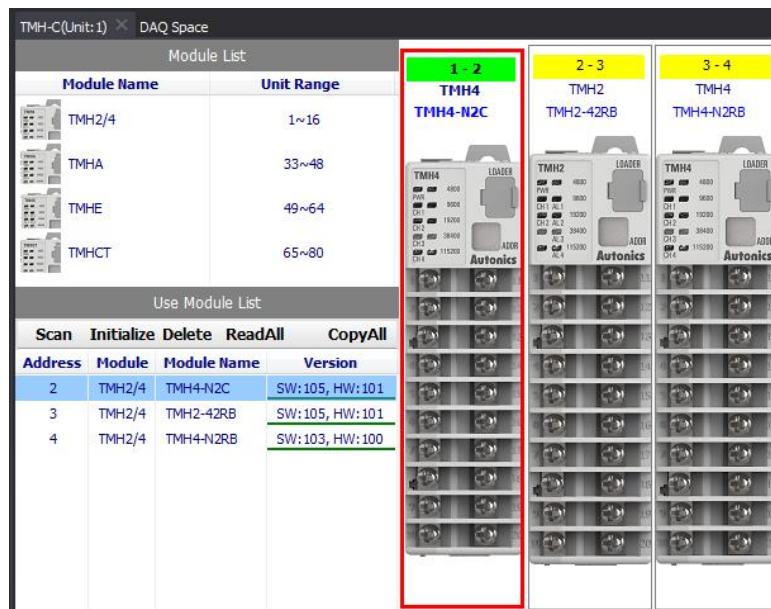

3rd Change the value of “POWER ON RUN_STOP, Alarm Out RUN_STOP” to “STOP” and “Alarm Reset” to “NO” in “Property” control panel.

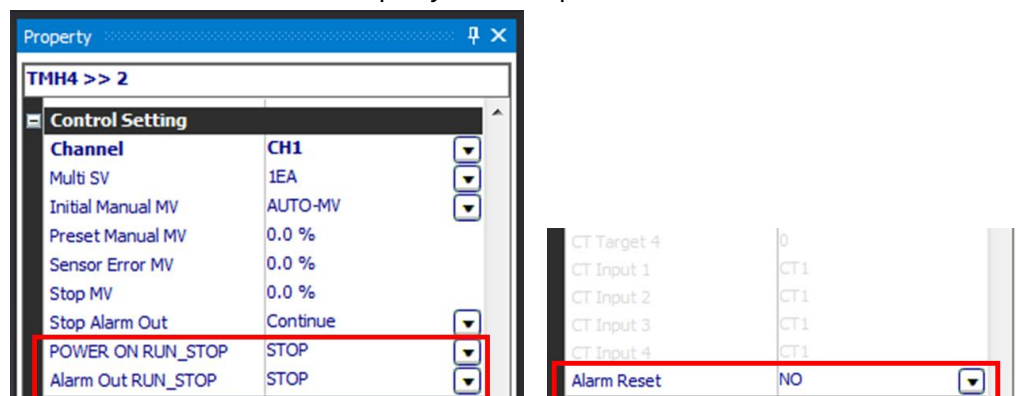


- **When connecting control module TMH2/4 [SW version 104] or under to communication module TMHC-22LE [SW version 104] or over**

The 3 parameters (POWER ON RUN/STOP, ALARM OUT RUN/STOP, ALARM RESET) support function of TMHC-22LE must be disabled.

1st Complete connecting the device and scanning the modules to use by referring to “10.3 Connect device”.

2nd Select TMHC-22LE module SW version 104 or over in “My System” window.

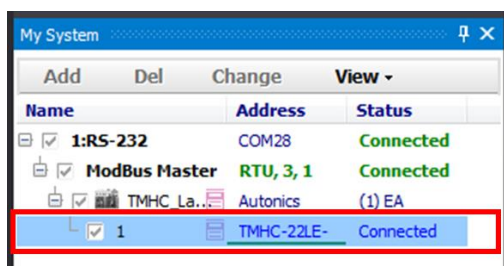

3rd Change the value of “POWER ON RUN_STOP, Alarm Out RUN_STOP” and “Alarm Reset” to “Disable” in “Property” control panel.



Make Life Easy : Autonics