

8-pin Plug Digital Timers With Thumb wheel Switch

FSE Series
INSTRUCTION MANUAL

DRW161278AD

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ **Warning** Failure to follow instructions may result in serious injury or death.

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.**(e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- Install on a device panel to use.**
Failure to follow this instruction may result in fire or electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire or electric shock.
- Check 'Connections' before wiring.**
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire or electric shock.

⚠ **Caution** Failure to follow instructions may result in injury or product damage.

- When connecting the power /sensor input and relay output, use AWG 20 (0.50 mm²) cable or over, and tighten the terminal screw with a tightening torque of 0.74 to 0.90 N·m.**
Failure to follow this instruction may result in malfunction due to contact failure.
- Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'.
Otherwise, it may cause unexpected accidents.
- Power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, 0.1 sec after supplying power.
- When supplying or turning off the power, use a switch or etc. to avoid chattering.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power..
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
Do not use near the equipment which generates strong magnetic force or high frequency noise.
- After turning off the power, change the time range, etc.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in 'Specifications')
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

FS ① E - ② ③

① Display digits

4: 4-digit
5: 5-digit

③ Power supply

2: 24 VAC ~ 50 / 60 Hz, 24 - 48 VDC ==
4: 100 - 240 VAC ~ 50 / 60 Hz

② Output

1P: 1-stage setting (4-digit)
I: Indicator (5-digit)

Product Components


- Product (+ bracket)
- Instruction manual

Sold Separately

- 8-pin socket: PG-08, PS-08(N)

Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.

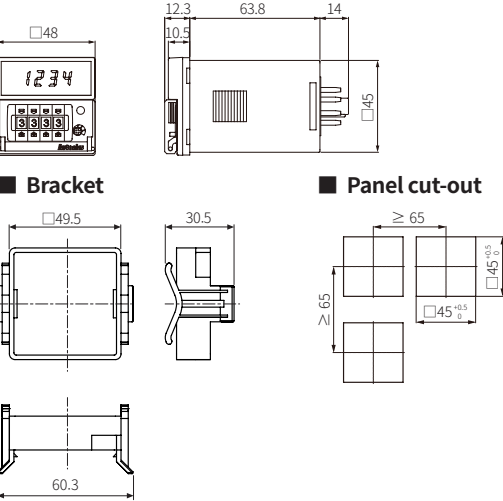


Connections

⚠ **Caution**
: Refer to the 'specifications' for checking the power supply and control output.


■ FS4E-1P4

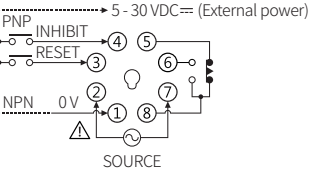

■ FS4E-1P2

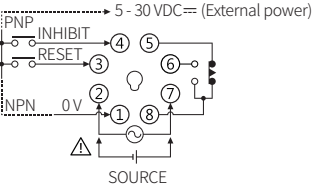

■ FS5E-I4

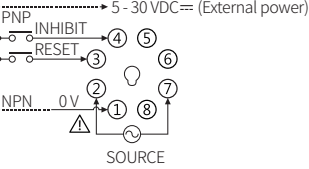

Error

- When error occurs, the output turns OFF.
- Indicator model does not have error display function.


Display	Description	Troubleshooting
Error	Setting value = 0	Change the setting value anything but 0.

Specifications

Model	FS4E-1P2	FS5E-1P4	FS5E-I4
Display digits	4-digit		5-digit
Character size	W 3.8 × H 7.6 mm		W 4 × H 8 mm
Return time	≤ 500 ms		
Time operation	Power ON Start		
Min. signal width	RESET, INHIBIT: ≈ 20 ms		
Input logic	Voltage input (PNP) - input impedance: ≤ 10.8 kΩ, [H]: 5 - 30 VDC=, [L]: 0 - 2 VDC= No-voltage input (NPN) - short-circuit impedance: ≤ 470 Ω, - short-circuit residual voltage: ≤ 1 VDC= - open-circuit impedance: ≥ 100 kΩ		
One-shot output time	0.05 to 5 sec		
Control output	Relay	-	
Contact type	Time limit SPDT (1c)	-	
Contact capacity	250 VAC ~ 3 A, 30 VDC = 3 A resistive load		-
Error	Repeat / SET / Voltage / Temp.: ≤ ± 0.01% ± 0.05 sec		
Unit weight (packaged)	≈ 90 g (≈ 130 g)		≈ 80 g (≈ 120 g)
Approval	CE  ENEC		

Voltage type	AC voltage type	AC / DC voltage type
Power supply	100 - 240 VAC ~ ± 10% 50 / 60 Hz	24 VAC ~ ± 10% 50 / 60 Hz, 24 - 48 VDC = ± 10%
Power consumption (FS5E-1P4)	≤ 4.6 VA	-
Power consumption (FS5E-I4)	≤ 3.8 VA	-
Power consumption (FS4E-1P2)	-	AC: ≤ 3.5 VA DC: ≤ 2.3 W
Memory retention	≈ 10 years (non-volatile semiconductor memory type)	
Insulation resistance	≥ 100 MΩ (500 VDC = megger)	
Dielectric strength	2,000 VAC ~ 50 / 60 Hz for 1 min (between all terminals and case)	
Noise immunity	± 2 kV square-wave noise by noise simulator (pulse width 1 μs)	± 500 V square-wave noise by noise simulator (pulse width 1 μs)
Vibration	0.75 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 1 hour	
Vibration (malfunction)	0.5 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 10 min	
Shock	300 m/s ² (≈ 30 G) in each X, Y, Z direction for 3 times	
Shock (malfunction)	100 m/s ² (≈ 10 G) in each X, Y, Z direction for 3 times	
Relay life cycle	Mechanical: ≥ 5,000,000 operations Electrical: ≥ 100,000 operations (250 VAC ~ 3 A resistive load)	
Ambient temperature	-10 to 55 °C, storage: -25 to 65 °C (no freezing or condensation)	
Ambient humidity	35 to 85%RH, storage: 35 to 85%RH (no freezing or condensation)	
Protection rating	IP20 (front part, IEC standard)	

Mode Setting



Dot for Hour / Min / Second


- If there is no RESET key or DIP switch input for 60 sec, it returns to RUN mode.
- [RESET] key: Setting mode ↔ RUN mode
Move the digit when changing the setting value.

Parameter	Display	Setting range	Setting example
T1-1 Setting mode	dP	-	-
T1-2 Setting of dot for Hour / Min / Sec	CLr	CLR: not divided with dot SET: divided with dot	5959: 59 m 59 s 0.59.59: 59 m 59 s

Output Operation Mode

For the detailed timing chart for operation output mode, refer to the manual.

Detach DIP Switch Cover

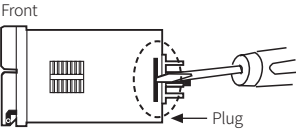

- Push and pull the groove of DIP switch cover with a flat head (-) driver to the front, removing the cover from the case.
- ⚠ **Caution: Turn OFF the power before removing the cover.**
- ⚠ **Caution: When using the tools, be careful not to be wounded.**

DIP Switch Setting

- Detach the cover of DIP switch and proceed the settings. Refer to the 'Detach DIP Switch Cover'.
- How to change the settings:
power OFF → change settings → power ON
→ press [RESET] key or input the RESET signal (≥ 20 ms) to the external terminal.

■ DIP SW1

SW1	Function	Defaults
1	INHIBIT, RESET input logic	ON
2, 3, 4	Time range	OFF
5	Count up / count down	OFF
6	Memory retention	OFF

• Input logic

SW1-1	Input logic
ON	NPN (No-voltage input)
OFF	PNP (voltage input)

• Time range

SW1-2,3,4			Time range	
4	3	2	4-digit	5-digit
OFF	OFF	OFF	99.99 s	9999.9 s
OFF	OFF	ON	999.9 s	99999 s
OFF	ON	OFF	9999 s	9 m 59.99 s
OFF	ON	ON	99 m 59 s	99 m 59.9 s
ON	OFF	OFF	999.9 m	9999.9 m
ON	OFF	ON	99 h 59 m	9 h 59 m 59 s
ON	ON	OFF	999.9 h	999 h 59 m
ON	ON	ON	9999 h	9999.9 h

• Count up / count down

SW1-5	Count up / count down
ON	Count down
OFF	Count up

• Memory retention

SW1-6	Memory retention
ON	×
OFF	○

■ DIP SW2

SW2	Function	Defaults
1, 2, 3	Output operation mode ⁽¹⁾	OFF

(1) Except the indicator model.

• Output operation mode

SW2			Output operation mode
3	2	1	
OFF	OFF	OFF	F
OFF	OFF	ON	N
OFF	ON	OFF	C
OFF	ON	ON	R
ON	OFF	OFF	K
ON	OFF	ON	P
ON	ON	OFF	Q
ON	ON	ON	S